


HP LaserJet 1010, 1012, 1015 and 1020 Service Manual



HP LaserJet 1010 series printers and HP LaserJet 1020 printer

Service Manual

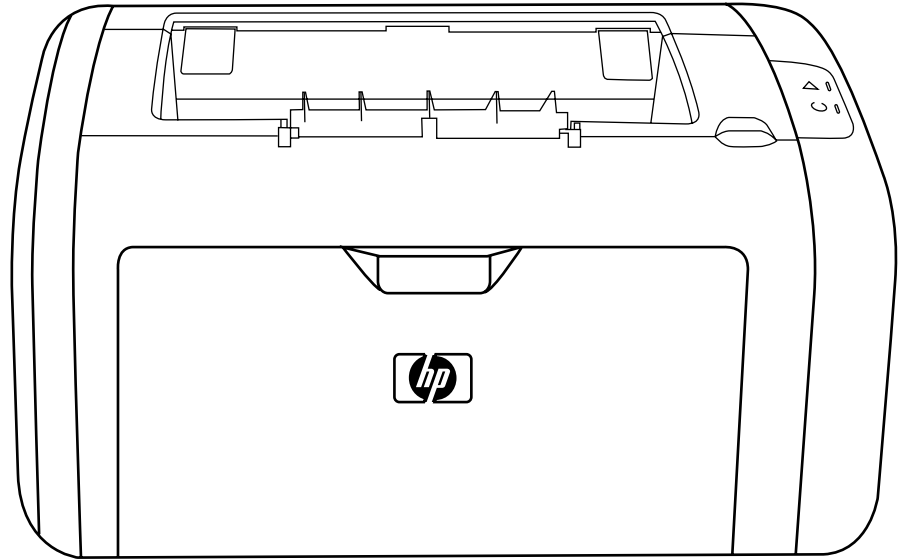

Copyright Information

© 2005 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation or translation without prior written permission is prohibited except as allowed under the copyright laws.

The information contained in this document is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number Q5911-90945

Edition 1, 4/2005

Information regarding FCC Class B, Parts 15 and 68 requirements can be found in the user guide.

NOTICE TO U.S. GOVERNMENT USERS: RESTRICTED RIGHTS COMMERCIAL COMPUTER SOFTWARE: "Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) (1)(ii) of the Rights in Technical Data Clause at DFARS 52.227-7013."

Trademark Credits

Microsoft® and Windows® are U.S. registered trademarks of the Microsoft company.

Safety Information

WARNING!

Potential Shock Hazard

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

Read and understand all instructions in the user guide.

Observe all warnings and instructions marked on the product.

Use only a grounded electrical outlet when connecting the HP LaserJet 1010 series printer or HP LaserJet 1020 printer to a power source. If you don't know whether the outlet is grounded, check with a qualified electrician.

Do not touch the contacts on the end of any of the sockets on the HP LaserJet 1010 series printer or HP LaserJet 1020 printer. Replace damaged cords immediately.

Unplug this product from wall outlets before cleaning or servicing.

Do not install or use this product near water or when you are wet.

Install the product securely on a stable surface.

Install the product in a protected location where no one can step on or trip over the power cord and the power cord will not be damaged.

If the product does not operate normally, see the online user guide.

Table of contents

1 Product Information

Product configurations.....	2
HP LaserJet 1010 printer.....	2
HP LaserJet 1012 printer.....	2
HP LaserJet 1015 printer.....	2
HP LaserJet 1020 printer.....	3
Overview of product.....	4
HP LaserJet 1010 series printers.....	4
HP LaserJet 1020 printer.....	6
Model and serial numbers.....	7
Hardware description.....	7
Firmware description	8
Product specifications.....	9
Physical specifications.....	9
Printer performance.....	9
Environmental specifications.....	9
Electrical specifications.....	10
Acoustic emissions.....	11
Extended warranty.....	12
Print-cartridge information	13
Refilled print cartridges	13
Recycling print cartridges	13
Regulatory information.....	14
FCC compliance.....	14
Canadian DOC regulations.....	14
Korean EMI statement.....	14
Laser statement for Finland.....	15
.....	15

2 Installation and operation

Operating environment	18
Identifying the control-panel components.....	19
Media specifications.....	21
Supported media sizes.....	21
Guidelines for using media.....	22
Paper and transparencies	22
Common media problems table	22
Labels.....	23
Envelopes	23

Envelopes with double-side seams.....	23
Envelopes with adhesive strips or flaps.....	24
Card stock and heavy media	24
Card-stock construction.....	24
Card-stock guidelines.....	24
Loading media.....	25
Main input tray.....	25
Priority feed slot.....	25
Specific types of media	25
Setting media types.....	26
Set the media type.....	26

3 Maintenance

Life expectancies of parts that wear	28
Cleaning the product.....	30
Cleaning the print path.....	31
Cleaning the print-cartridge area.....	32
Cleaning the pickup roller.....	34
User-replaceable parts	35
Replacing the pickup roller.....	35
Replacing the separation pad.....	38
Replacing the main input tray (paper-pickup tray assembly).....	40
Replacing the output-bin extension (delivery-tray assembly).....	41
Jams.....	42
Clearing jams.....	42
Typical media jam locations.....	42
Removing a jammed page.....	43

4 Operational overview

Basic functions.....	46
Formatter system.....	47
Central processing unit	47
RAM.....	47
USB interface.....	47
Parallel interface (HP LaserJet 1015 printer only).....	47
Control panel.....	47
Draft mode (EconoMode).....	48
HP Memory Enhancement technology (MEt).....	48
Enhanced I/O	48
PJL overview	49
Printer functions.....	50
Engine control system (engine control unit and power assembly).....	50
Printer-engine-control system.....	51
Printer laser/scanner unit	52
Power system on the engine power assembly.....	53
Image-formation system.....	54
The seven image-formation processes	55
Print cartridge.....	56
Printer paper-feed system.....	56
Jam detection	58

Conditions of jam detection.....	58
Solenoid, sensors, switches, and motor.....	58
Basic sequence of operation (formatter-to-printer).....	60

5 Removal and replacement

Removal and replacement strategy.....	64
Required tools	64
Before performing service.....	64
Print cartridge	65
Differences between the HP LJ 1010 series printer models.....	66
Parts removal order	67
User-replaceable parts	68
Replacing the pickup roller	68
Replacing the separation pad.....	71
Replacing the main input tray (paper-pickup tray assembly).....	73
Replacing the output-bin extension (delivery-tray assembly).....	74
Covers.....	75
Right-side cover.....	75
Left-side cover.....	77
Rear panel and top-cover assembly.....	77
Front cover.....	82
Internal assemblies.....	84
Transfer-roller assembly.....	84
Engine-power assembly.....	87
Fuser (fixing) assembly.....	89
Paper-pickup assembly.....	91
Engine control unit (ECU) assembly.....	92
Laser/scanner assembly.....	96

6 Troubleshooting

Basic troubleshooting.....	98
Troubleshooting checklist.....	98
Control-panel power-on functions (HP LaserJet 1010 series printers).....	100
Control-panel pages (HP LaserJet 1010 series printers only).....	101
Control-panel lights (HP LaserJet 1010 series printers).....	102
Control-panel light patterns (HP LJ 1010 series printers).....	102
Fatal errors (HP LJ 1010 series printers).....	105
Control-panel lights (HP LaserJet 1020 printer).....	106
Status-light patterns.....	106
Jams.....	108
Clearing jams.....	108
Typical media jam locations.....	108
Removing a jammed page.....	108
Print-quality troubleshooting.....	111
Print-cartridge problems.....	111
Checking the print cartridge.....	111
To redistribute toner in the print cartridge.....	111
Solving print-quality problems.....	111
Solving paper-feed problems.....	122
Functional checks.....	124

Half self-test functional check.....	124
To perform a half self-test check.....	124
To perform other checks.....	124
Drum-rotation functional check	126
High-voltage-contacts check.....	127
To check the print-cartridge contacts	127
To check the printer high-voltage contacts	128
Troubleshooting tools.....	129
Repetitive-image-defect ruler.....	129
Circuit diagram	130
Solenoid, sensors, switches, and motor.....	131

7 Parts and diagrams

Ordering parts and supplies.....	134
Parts.....	134
Related documentation and software.....	134
Parts that wear	134
Accessories and consumables.....	135
Accessories.....	135
Common hardware	137
How to use the parts lists and diagrams.....	137
Printer exchange/parts.....	138
Major components.....	140
Alphabetical parts list.....	143
Numerical parts list.....	146

Index.....	149
-------------------	------------

List of tables

Table 1-1	Physical specifications.....	9
Table 1-2	Performance.....	9
Table 1-3	Environmental specifications (HP LJ 1010 series printers and HP LJ 1020 printer)	9
Table 1-4	Power requirements.....	10
Table 1-5	Power consumption (average, in watts).....	10
Table 1-6	Acoustic emissions.....	11
Table 2-1	Media sizes.....	21
Table 3-1	Life expectancies of parts that wear.....	28
Table 4-1	Basic sequence of operation.....	60
Table 6-1	Basic troubleshooting	98
Table 6-2	Power-on functions: time ranges (HP LJ 1010 series printers only).....	100
Table 6-3	Control-panel pages: time ranges (HP LJ 1010 series printers only).....	101
Table 6-4	Control-panel light patterns (HP LJ 1010 series printers).....	102
Table 6-5	Control-panel light patterns (HP LJ 1020 printer).....	106
Table 6-6	Solving print-quality problems.....	111
Table 6-7	Solving paper-feed problems.....	122
Table 7-1	Technical support websites.....	134
Table 7-2	Accessories.....	135
Table 7-3	Printer exchange/parts.....	139
Table 7-4	Major components.....	141
Table 7-5	Alphabetical parts list.....	143
Table 7-6	Numerical parts list.....	146

List of figures

Figure 1-1	Front and right-side view (HP LJ 1010 series printers).....	4
Figure 1-2	Back and left-side view (HP LJ 1010 series printers).....	5
Figure 1-3	Front and right-side view (HP LJ 1020 printer).....	6
Figure 1-4	Back and left-side view (HP LJ 1020 printer).....	6
Figure 1-5	Model- and serial-number label (HP LJ 1010 printer is shown).....	7
Figure 2-1	HP LaserJet 1010 series printer dimensions.....	18
Figure 2-2	HP LaserJet 1020 printer dimensions.....	18
Figure 2-3	Control-panel lights and buttons (HP LJ 1010 series printers).....	19
Figure 2-4	Control-panel lights (HP LJ 1020 printer).....	20
Figure 3-1	Main input tray (HP LaserJet 1020 printer shown).....	40
Figure 3-2	Output-bin extension	41
Figure 4-1	Basic configuration.....	46
Figure 4-2	Printer functional-block diagram.....	50
Figure 4-3	Laser/scanner operation.....	52
Figure 4-4	High-voltage power supply circuit.....	54
Figure 4-5	Image formation-block diagram.....	55
Figure 4-6	Printer paper path	57
Figure 4-7	Solenoid, sensors, switches, and motor.....	59
Figure 4-8	Printer timing diagram.....	61
Figure 5-1	Removing the print cartridge.....	65
Figure 5-2	HP LaserJet 1015 parallel port.....	66
Figure 5-3	Parts-removal block diagram.....	67
Figure 5-4	Main input tray (HP LaserJet 1020 printer shown).....	73
Figure 5-5	Output-bin extension	74
Figure 5-6	Remove the right-side cover (1 of 4; HP LJ 1020 printer shown).....	75
Figure 5-7	Remove the right-side cover (2 of 4; HP LJ 1020 printer shown).....	75
Figure 5-8	Remove the right-side cover (3 of 4; HP LJ 1020 printer shown).....	76
Figure 5-9	Remove the right-side cover (4 of 4; HP LJ 1020 printer shown).....	76
Figure 5-10	Remove the rear panel and top-cover assembly (1 of 6).....	77
Figure 5-11	Remove the rear panel and top-cover assembly (2 of 6).....	78
Figure 5-12	Remove the rear panel and top-cover assembly (3 of 6).....	78
Figure 5-13	Remove the rear panel and top-cover assembly (4 of 6; HP LJ 1020 printer shown).....	79
Figure 5-14	Remove the rear panel and top-cover assembly (5 of 6).....	79
Figure 5-15	Remove the rear panel and top-cover assembly (6 of 6).....	80
Figure 5-16	Reinstall the top-cover assembly (1 of 2).....	80
Figure 5-17	Reinstall the top-cover assembly (2 of 2).....	81
Figure 5-18	Remove the front cover (1 of 3).....	82
Figure 5-19	Remove the front cover (2 of 3).....	83
Figure 5-20	Remove the front cover (3 of 3).....	83
Figure 5-21	Remove the transfer roller (1 of 3).....	84

Figure 5-22	Remove the transfer roller (2 of 3).....	85
Figure 5-23	Remove the transfer roller (3 of 3).....	85
Figure 5-24	Remove the engine-power assembly (1 of 2; HP LJ 1020 printer shown).....	87
Figure 5-25	Remove the engine power assembly (2 of 2).....	88
Figure 5-26	Remove the fuser (fixing) assembly (1 of 2).....	89
Figure 5-27	Remove the fuser (fixing) assembly (2 of 2).....	90
Figure 5-28	Remove the paper-pickup assembly.....	91
Figure 5-29	Remove the ECU assembly (1 of 6).....	92
Figure 5-30	Remove the ECU assembly (2 of 6).....	93
Figure 5-31	Remove the ECU assembly (3 of 6).....	93
Figure 5-32	Remove the ECU assembly (4 of 6).....	94
Figure 5-33	Remove the ECU assembly (5 of 6).....	94
Figure 5-34	Remove the ECU assembly (6 of 6).....	95
Figure 5-35	Remove the laser/scanner assembly.....	96
Figure 6-1	Control-panel-lights legend.....	102
Figure 6-2	Control-panel lights (HP LJ 1020 printer).....	106
Figure 6-3	Control-panel-light legend (HP LJ 1020 printer).....	106
Figure 6-4	Check the fuser connections (HP LaserJet 1010 series shown).....	125
Figure 6-5	Print-cartridge high-voltage contacts.....	127
Figure 6-6	Printer high-voltage contacts.....	128
Figure 6-7	Repetitive-image-defect ruler.....	129
Figure 6-8	Circuit diagram.....	130
Figure 6-9	Solenoid, sensors, switches, and motor.....	131
Figure 7-1	HP LJ 1010 series and HP LJ 1020 product.....	138
Figure 7-2	Major components (HP LJ 1010 series shown).....	140

1 Product Information

This chapter provides general product information for HP LaserJet 1010 series printer and the HP LaserJet 1020 printer.

- [Product configurations](#)
- [Overview of product](#)
- [Product specifications](#)
- [Extended warranty](#)
- [Print-cartridge information](#)
- [Regulatory information](#)

Product configurations

The HP LaserJet 1010 series printers and the HP LaserJet 1020 printer are designed to print documents easily and with the laser quality that customers have come to expect from an HP LaserJet product. The following sections describe the configurations of the HP LaserJet 1010 series printers and the HP LaserJet 1020 printer.

HP LaserJet 1010 printer

The HP LaserJet 1010 printer (HP LJ 1010) is the base model in the HP LaserJet 1010 series printers. It offers the following features:

- Prints up to 12 pages per minute (ppm)
- 10 seconds or less to first page out
- 600 x 600 dpi
- 150-sheet input capacity (75-g/m² [20-lb] media)
- 125-sheet output bin capacity
- A priority feed slot
- A horizontal paper-feed path
- 8 MB of RAM (not expandable)
- A host-based driver
- A USB port

HP LaserJet 1012 printer

The HP LaserJet 1012 printer (HP LJ 1012) is the mid-range model in the series. It offers all of the features of the HP LaserJet 1010 printer, plus the following features:

- Prints up to 14 ppm on A4-size media and 15 ppm on letter-size media
- FastRes 1200: 1200 dpi effective output quality (600 x 600 x 2 dpi with HP Resolution Enhancement technology [REt])
- Networking support through HP Jetdirect devices

HP LaserJet 1015 printer

The HP LaserJet 1015 printer (HP LJ 1015) is the top model in the series. It offers all of the features of the HP LaserJet 1012, plus the following features:

- 16 MB of RAM (not expandable)
- A host-based driver and HP PCL 5e driver
- A USB port and a parallel port

HP LaserJet 1020 printer

The HP LaserJet 1020 printer (HP LJ 1020) offers the following features:

- Prints up to 14 ppm for A4-size media and 15 ppm for letter-size media
- 10 seconds or less to first page out
- FastRes 1200: 1200 dpi effective output quality (600 x 600 x 2 dpi with HP Resolution Enhancement technology [REt])
- 150-sheet input capacity (75-g/m² [20-lb] media)
- 125-sheet output bin capacity
- A priority feed slot
- EconoMode (saves toner)
- Prints watermarks, booklets, and multiple pages per sheet (N-up), and can print the first page on different media from the remainder of the document
- 2 MB of RAM
- 2,000-page print cartridge
- A USB 2.0 Hi-Speed port

Overview of product

HP LaserJet 1010 series printers

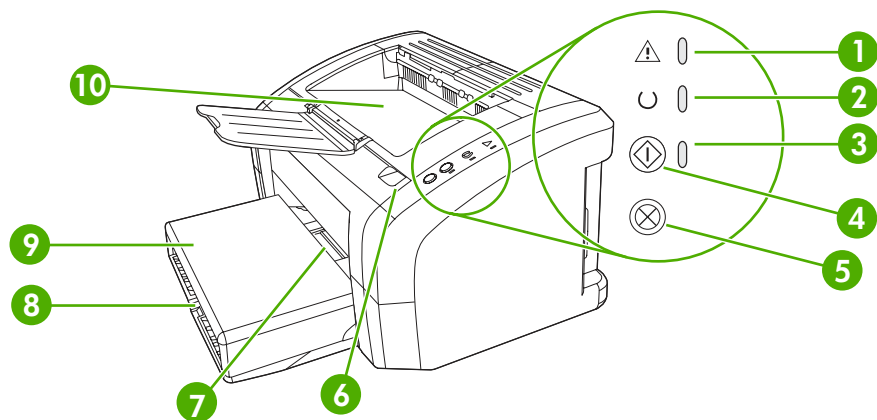


Figure 1-1 Front and right-side view (HP LJ 1010 series printers)

1	ATTENTION light
2	READY light
3	Go light
4	Go button
5	CANCEL JOB button
6	Print-cartridge door
7	Priority feed slot
8	Main input tray
9	Tray cover (only for the HP LaserJet 1012 printer and the HP LaserJet 1015 printer in some countries/regions)
10	Output bin

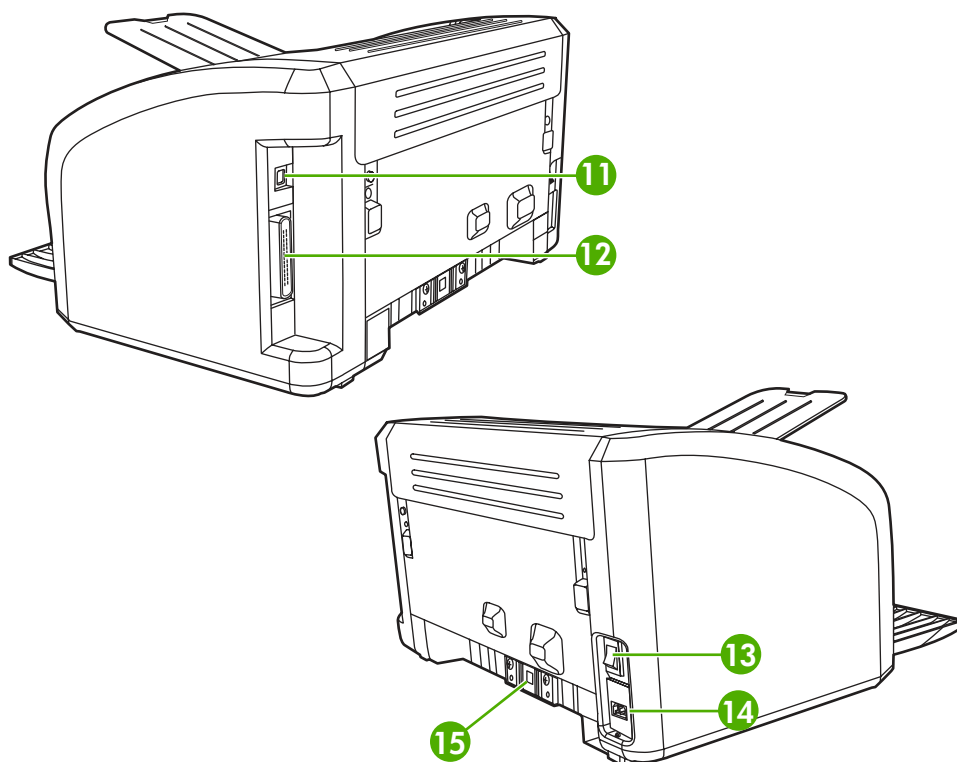


Figure 1-2 Back and left-side view (HP LJ 1010 series printers)

11	USB port
12	Parallel port (HP LaserJet 1015 printer only)
13	On/off switch
14	Power receptacle
15	Separation pad

HP LaserJet 1020 printer

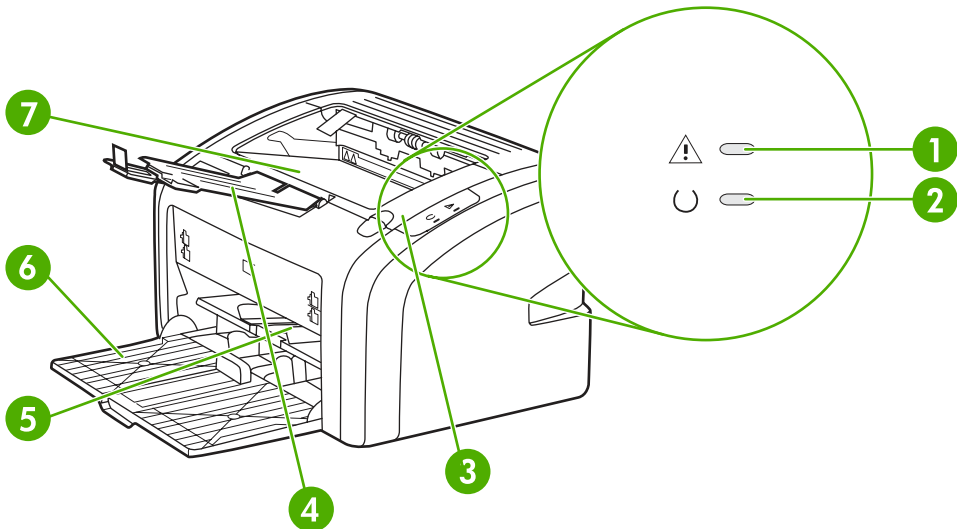


Figure 1-3 Front and right-side view (HP LJ 1020 printer)

1	ATTENTION light
2	READY light
3	Print-cartridge door
4	Output-media support
5	Priority feed slot
6	150-sheet main input tray
7	Output bin

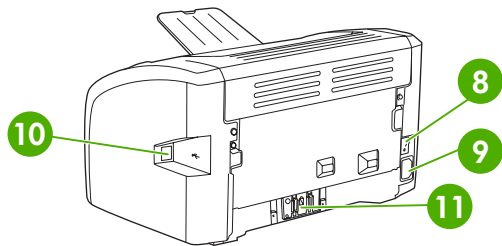


Figure 1-4 Back and left-side view (HP LJ 1020 printer)

8	On/off switch
9	Power receptacle
10	USB port
11	Separation pad

Model and serial numbers

The model number and serial number are listed on an identification label located on the back of the product.

The serial number contains information about the country/region of origin, and the revision level, production code, and production number of the product.

The label also contains power-rating and regulatory information.

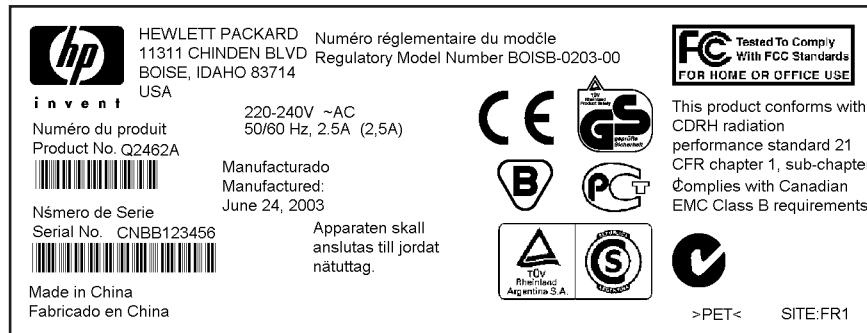


Figure 1-5 Model- and serial-number label (HP LJ 1010 printer is shown)

Hardware description

The HP LaserJet 1010 printer provides 600 x 600 dpi printing. The HP LaserJet 1012, 1015, and 1020 printers offer HP RET technology for 600 x 600 x 2 dpi printing (effectively 1200 dpi).

The printers print at 12 ppm (HP LaserJet 1010) or 15 ppm for letter-size paper and 14 ppm for A4-size paper (HP LaserJet 1012, 1015, and 1020). With 600 dpi printing for the HP LaserJet 1010 printer and an effective 1200 dpi printing resolution for the other models, the printers have exceptional text and graphics print quality. The simple control panels and improved paper-handling make these printers easy to use.

The main input tray has a 150-sheet (75-g/m² [20-lb] media) capacity for continuous, multiple-page printing. The priority feed slot is used to manually feed single sheets of most recommended media and holds up to ten sheets of 75-g/m² (20-lb) media. Both the main input tray and the priority feed slot are center-justified for all supported media sizes. The output bin holds up to 125 sheets of 75-g/m² (20-lb) media.

These printers have a very fast first-page-out, at less than 10 seconds to first page out. The base memory contains 8 MB of RAM for the HP LaserJet 1010 series printers and 2 MB for the HP LaserJet 1020 printer. These printers use an embedded 133 MHz processor.

The print engine has an average duty cycle of 1,000 pages per month (7,000 peak) or 50,000 total pages printed. The standard print-cartridge life is 2,000 pages, in accordance with ISO/IEC 19752.



NOTE Actual print cartridge life depends on specific usage.

Firmware description

The firmware in the printers includes these features:

- Host-based printing
- PCL 5e (HP LaserJet 1015 printer only)
- EconoMode functionality

Product specifications

This section details the specifications for the HP LaserJet 1010 series printers and the HP LaserJet 1020 printer.

Physical specifications

Table 1-1 Physical specifications

Model	Height	Depth	Width	Weight
HP LaserJet 1010 series printers and the HP LaserJet 1020 printer	209 mm (8.3 inches)	242 mm (9.5 inches)	370 mm (14.6 inches)	5.9 kg (13.0 lb)

Printer performance

Table 1-2 Performance

Model	Print resolution (normal)	Print speed (A4-size media)
HP LaserJet 1010 printer	600 x 600 dpi	12 ppm
HP LaserJet 1012 printer	600 x 600 dpi	14 ppm
HP LaserJet 1015 printer	600 x 600 dpi	14 ppm
HP LaserJet 1020 printer	600 x 600 dpi	14 ppm

¹ 1200 dpi effective output quality, 600 x 600 x 2 dpi with HP Resolution Enhancement technology (REt)

Environmental specifications

Table 1-3 Environmental specifications (HP LJ 1010 series printers and HP LJ 1020 printer)

Category	Specification
Operating environment (unit plugged into an alternating-current [ac] outlet)	<ul style="list-style-type: none">■ Temperature: 10° to 32.5°C (50° to 90.5°F)■ Humidity: 20 to 80% relative humidity (no condensation)
Storage environment (unit not plugged into an ac outlet)	<ul style="list-style-type: none">■ Temperature: 0° to 40°C (32° to 104°F)■ Humidity: 10 to 80% relative humidity (no condensation)

Electrical specifications

WARNING! Power requirements are based on the country/region where the printer is sold. Do not convert operating voltages. This might damage the printer and void the product warranty.

Table 1-4 Power requirements

Specification	110-volt models	220-volt models
Power requirements	110–127 V (±10%)	220–240 V (±10%)
	50/60 Hz (±2 Hz)	50/60 Hz (±2 Hz)
Rated current	4.0 amps	2.3 amps



WARNING! Power sources are not interchangeable.

Table 1-5 Power consumption (average, in watts)¹

Product model	Printing ²	Ready ²	PowerSave	Off
HP LaserJet 1010 printer	250 W	2 W	2 W	0 W
HP LaserJet 1012 printer	250 W	2 W	2 W	0 W
HP LaserJet 1015 printer	250 W	2 W	2 W	0 W
HP LaserJet 1020 printer	250 W	4 W	4 W	0 W

¹ Values are subject to change. See www.hp.com/support/lj1010 or www.hp.com/support/lj1020 for current information.

² Power reported is highest value measured for printing using all standard voltages. HP LaserJet 1010 printer print speed is 12 ppm (letter size) and 12 ppm (A4 size). HP LaserJet 1012, 1015, and 1020 printer print speed is 15 ppm (letter size) and 14 ppm (A4 size).

Acoustic emissions

Table 1-6 Acoustic emissions¹²

Sound power level	Declared per ISO 9296
Printing	$L_{WA_d} = 6.2$ Bels (A) [62 dB (A)]
Ready	Inaudible
Sound pressure level—Bystander position	Declared per ISO 9296
Printing	$L_{pA_m} = 49$ dB (A)
Ready	Inaudible

- ¹ Values are subject to change. See www.hp.com/support/lj1010 for current information. Configuration tested: HP LaserJet 1010 printer using the standard tray, A4 paper, and simplex, continuous printing. HP LaserJet 1010 printer print speed is 12 ppm (letter size) and 12 ppm (A4 size). HP LaserJet 1012 and 1015 printer print speed is 15 ppm (letter size) and 14 ppm (A4 size).
- ² Values are subject to change. See www.hp.com/support/lj1020 for current information. Configuration tested: HP LaserJet 1020 printer using the standard tray, A4 paper, and simplex, continuous printing. During other operations, acoustic emissions might vary.

Extended warranty

In most countries/regions, HP Care Pack provides additional coverage, beyond standard warranty for the HP device and for all HP-supplied internal components. This hardware maintenance can uplift the standard warranty, for example, from next-day to same-day service, or extend it up to 5 years. The HP Care Pack can provide Express Exchange or onsite service. For more information, see the support flyer that came with the device for the appropriate phone numbers and information.

Print-cartridge information

The print cartridge is designed to simplify replacement of the major consumable parts. The print cartridge contains the printing mechanism and a supply of toner.

The standard print-cartridge life is 2,000 pages, in accordance with ISO/IEC 19752.



NOTE Actual print cartridge life depends on specific usage.

Refilled print cartridges

While Hewlett-Packard does not prohibit the use of refilled print cartridges during the warranty period or while the product is under a maintenance contract, use of refilled cartridges is not recommended for the following reasons:

- Repairs resulting from the use of refilled cartridges are not covered under Hewlett-Packard warranty or maintenance contracts.
- Hewlett-Packard has no control or process to ensure that a refilled cartridge functions at the high level of reliability of a new HP LaserJet print cartridge. Hewlett-Packard also cannot predict the long-term reliability effect on the product from using the different toner formulations that are found in refilled cartridges.
- The print quality of HP LaserJet print cartridges influences the customer's perception of the product. Hewlett-Packard has no control over the actual print quality of a refilled cartridge.
- Parts that are critical to print quality might not be replaced when the cartridge is refilled with toner.

Recycling print cartridges

In order to reduce waste, Hewlett-Packard offers a recycling program. Cartridge components that do not wear out are recycled. Plastics and other materials are recycled. Hewlett-Packard pays the shipping costs from the user to the recycling plant (within the United States). To join this recycling effort, follow the instructions inside the print cartridge box. See www.hp.com/recycle for more information.

Regulatory information

FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect equipment to an outlet on a circuit different from that to which the receiver is located.
- Consult your dealer or an experienced radio/TV technician.



NOTE Any changes or modifications to the printer that are not expressly approved by Hewlett-Packard could void the user's authority to operate this equipment. Use of a shielded interface cable is required to comply with the Class B limits of Part 15 of FCC rules.

Canadian DOC regulations

Complies with Canadian EMC Class B requirements.

«Conforme à la classe B des normes canadiennes de compatibilité électromagnétiques. «CEM».»

Korean EMI statement

사용자 안내문 (B급 기기)

이 기기는 비업무용으로 전자파장해 검정을 받은 기기로서, 주거 지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Laser statement for Finland

LASERTURVALLISUUS

LUOKAN 1 LASERLAITE

KLASS 1 LASER APPARAT

HP LaserJet 1010, HP LaserJet 1012, HP LaserJet 1015, HP LaserJet 1020-laserkirjoitin on käyttäjän kannalta turvallinen luokan 1 laserlaite. Normaalissa käytössä kirjoittimen suojakoteloINTI estää lasersäteen pääsyn laitteen ulkopuolelle. Laitteen turvallisuusluokka on määritetty standardin EN 60825-1 (1994) mukaisesti.

VAROITUS!

Laitteen käyttäminen muulla kuin käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än i bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

HUOLTO

HP LaserJet 1010, HP LaserJet 1012, HP LaserJet 1015, HP LaserJet 1020 -kirjoittimen sisällä ei ole käyttäjän huollettavissa olevia kohteita. Laitteen saa avata ja huoltaa ainoastaan sen huoltamiseen koulutettu henkilö. Tällaiseksi huoltotoimenpiteeksi ei katsota väriainekasetin vaihtamista, paperiradan puhdistusta tai muita käyttäjän käsikirjassa lueteltuja, käyttäjän tehtäväksi tarkoitettuja ylläpitotoimia, jotka voidaan suorittaa ilman erikoistyökaluja.

VARO!

Mikäli kirjoittimen suojakotelo avataan, olet alttiina näkymättömälle lasersäteilylle laitteen ollessa toiminnassa. Älä katso säteeseen.

VARNING!

Om laserprinterns skyddshölje öppnas då apparaten är i funktion, utsättas användaren för osynlig laserstrålning. Betrakta ej strålen. Tiedot laitteessa käytettävän laserdiodin säteilyominaisuuksista:

Aallonpituus 785-800 nm

Teho 5 mW

Luokan 3B laser

2 Installation and operation

This chapter provides an overview of the appropriate operating environment, describes the control panel, describes media requirements, and describes how to load print media.

- [Operating environment](#)
- [Identifying the control-panel components](#)
- [Media specifications](#)
- [Guidelines for using media](#)
- [Loading media](#)
- [Setting media types](#)

Operating environment

Place the product on a sturdy, level surface in a well-ventilated area that meets the following environmental requirements:

- Temperature: 10° to 32.5°C (50° to 90.5°F)
- Humidity: 20 to 80% relative humidity (no condensation)
- Away from direct sunlight, open flames, and ammonia fumes
- With sufficient space around the product to accommodate access and ventilation requirements

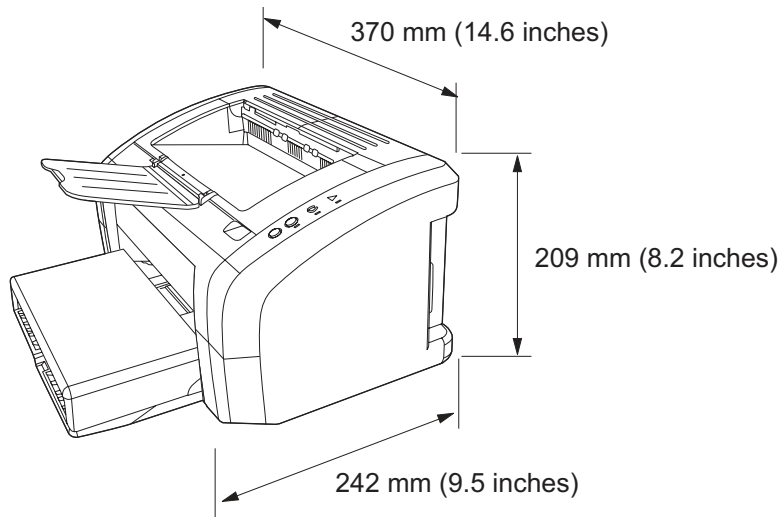


Figure 2-1 HP LaserJet 1010 series printer dimensions

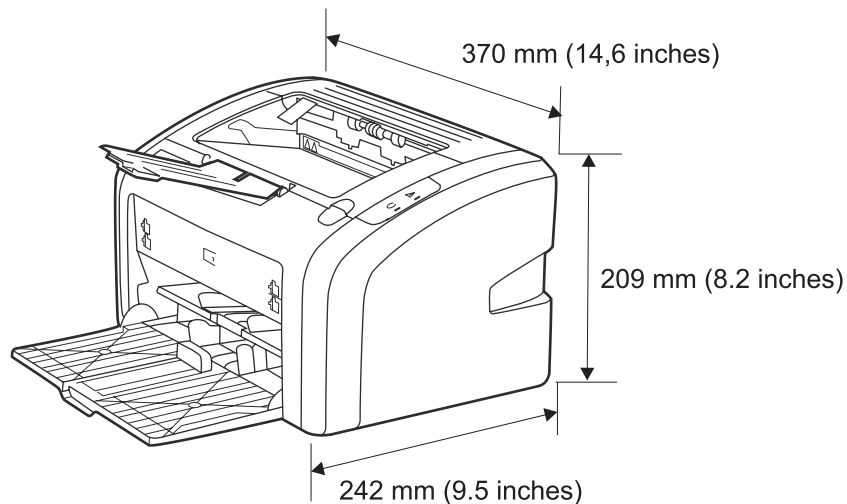


Figure 2-2 HP LaserJet 1020 printer dimensions

Identifying the control-panel components

The printer control panel has three lights and two buttons. These lights produce patterns that identify printer status.

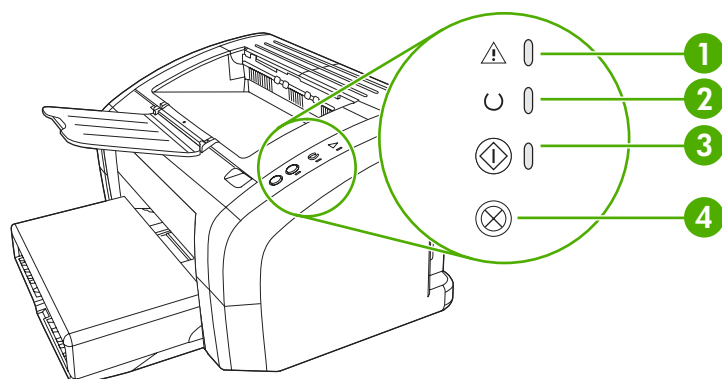


Figure 2-3 Control-panel lights and buttons (HP LJ 1010 series printers)

1	ATTENTION light: Indicates that the print-cartridge door is open, print cartridge is missing, or other errors.
2	READY light: Indicates that the printer is ready to print.
3	Go button and light: To print a demo page, or to continue printing while in manual-feed mode, press and release the Go button. To print a configuration page, press and hold the Go button for between 5 and 10 seconds, until the ATTENTION and READY lights flash. To run a cycle to clean the paper path by using a transparency, press and hold the Go button for at least 10 seconds until the ATTENTION and READY lights remain on.
4	CANCEL JOB button: When the printer is processing data, press the CANCEL JOB button to cancel the print job.



NOTE The two printer buttons, **Go** and **CANCEL JOB**, are mechanically linked and activate the same switch on the formatter. The formatter switch performs the correct function, based on the state of the printer, when either button is pressed.

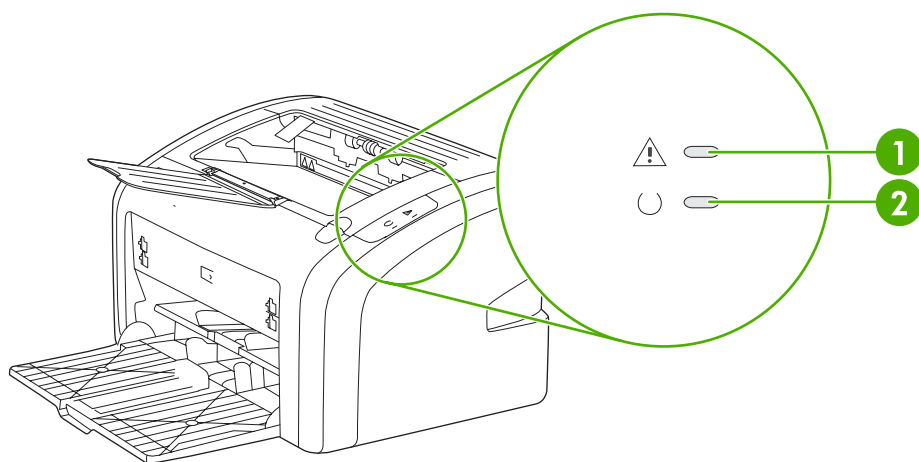


Figure 2-4 Control-panel lights (HP LJ 1020 printer)

1	ATTENTION light: Indicates that the print-cartridge door is open, print cartridge is missing, and other errors.
2	READY light: Indicates that the printer is ready to print.

Media specifications

The printers accept a variety of media. Properties such as weight, grain, and moisture content are important factors that affect printer performance and output quality. Media should conform to the guidelines in the User Guide. Media that does not meet HP guidelines might cause poor print quality, increased media jams, or premature wear on the printer, which might require printer repair.

CAUTION Damage that is caused by using media that does not meet HP specifications is not covered by the HP warranty or service agreements.

Supported media sizes

The printer supports media within this size range:

- **Minimum:** 76 x 127 mm (3 x 5 inches)
- **Maximum:** 216 x 356 mm (8.5 x 14 inches)

Table 2-1 Media sizes

Paper type	Metric	English
Letter	216 x 279 mm	8.5 x 11 inches
Legal	216 x 356 mm	8.5 x 14 inches
Executive	184 x 267 mm	7.25 x 10.5 inches
A4	210 x 297 mm	8.25 x 11.75 inches
COM10 envelopes	105 x 241 mm	4.13 x 9.5 inches
DL envelopes	110 x 220 mm	4.33 x 8.67 inches
C5 envelopes	162 x 229 mm	6.4 x 9 inches
B5 envelopes	176 x 250 mm	6.9 x 9.85 inches
Monarch envelopes	98.5 x 191 mm	3.88 x 7.5 inches
Labels	(216 x 279 mm)	(8.5 x 11 inches)
Custom-size media	custom (within acceptable range)	custom (within acceptable range)



NOTE Narrow and heavy media can cause the printer to print more slowly.

Guidelines for using media

HP LaserJet printers produce documents that have excellent print quality. They can print on a variety of media types, such as paper (including up to 100% recycled fiber content paper), envelopes, labels, transparencies, and custom-sized media.

Paper and transparencies

Paper must be of good quality and free of cuts, nicks, tears, spots, loose particles, dust, wrinkles, holes, and curled or bent edges. Check the label on the paper package for details about the type of paper (such as bond or recycled).

Some paper causes print-quality problems, jamming, or damage to the printer.



NOTE Do not use letterhead that is printed with low-temperature inks, such as those used in some types of thermography, raised letterhead, or colored paper or preprinted forms that use inks incompatible with the printer temperature, which is 200°C (392°F) for 0.1 second.

Transparencies must be able to withstand 200°C (392°F), the maximum print temperature.

Common media problems table

Symptom	Problem with paper	Solution
Poor print quality or toner adhesion, or problems with feeding	Too moist, too rough, too smooth, embossed, or from a faulty paper lot	Try another kind of paper that is between 100 and 250 Sheffield and has 4% to 6% moisture content.
	The correct media type is not selected in the Printer Properties dialog box.	Select the correct media type. See Setting media types on page 26 .
Dropouts, jamming, or curl	Stored improperly	Store paper flat in its moisture-proof wrapping.
Increased gray background shading	Might be too heavy	Use lighter paper.
Excessive curl, or problems with feeding	Too moist, wrong grain direction, or short-grain construction	Use long-grain paper or change the media type to light.
Jamming, or damage to printer	Cutouts or perforations	Do not use paper that has cutouts or perforations.
	Damaged media	Do not use media that has been previously run through a printer or copier.
Problems with feeding	Ragged edges	Use good-quality paper.
Moisture on the trailing edge of the paper	Too moist (media is steaming when it exits the printer)	Store paper in a low humidity area or air tight container or change the media type to light.

Labels

When selecting labels, consider the following factors:

- **Adhesives:** The adhesive material should be stable at 200°C (392°F), the printer's maximum temperature.
- **Arrangement:** Only use labels with no exposed backing between them. Labels can peel off sheets that have spaces between the labels, causing serious jams.
- **Curl:** Before printing, labels must lie flat with no more than 13 mm (0.5 inch) of curl in any direction.
- **Condition:** Do not use labels with wrinkles, bubbles, or other indications of separation. Never use a sheet of labels that has already been sent through the printer.

Envelopes


Envelope construction is critical. Envelope fold lines can vary considerably, not only between manufacturers but also within a box from the same manufacturer. Successful printing on envelopes depends on the quality of the envelopes. When selecting envelopes, consider the following factors:

- **Weight:** The weight of the envelope paper should not exceed 105 g/m² (28 lb), or jamming might result.
- **Construction:** Before printing, envelopes should lie flat with less than 6 mm (0.25 inch) curl and should not contain air. Envelopes that trap air may cause problems.
- **Condition:** Make sure that the envelopes are not wrinkled, nicked, or otherwise damaged.
- **Sizes:** From 90 x 160 mm (3.5 x 6.3 inches) to 178 x 254 mm (7 x 10 inches).

Store envelopes flat. If air is trapped in an envelope, creating an air bubble, the envelope might wrinkle during printing.

Envelopes with double-side seams

An envelope with double-side-seam construction (vertical seams at both ends of the envelope rather than diagonal seams) is more likely to wrinkle. Make sure the seam extends all the way to the corner of the envelope as shown in top figure of the following illustration:

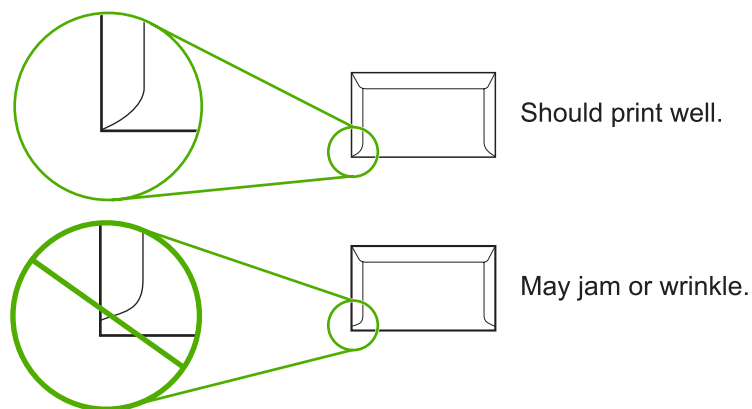

Envelopes with adhesive strips or flaps

Envelopes with a peel-off adhesive strip or with more than one flap that folds over to seal must use adhesives compatible with the heat and pressure in the printer: 200°C (392°F). The extra flaps and strips might cause wrinkling, creasing, or jams.

Card stock and heavy media

For optimum performance, do not use paper heavier than 157-g/m² (42-lb). Paper that is too heavy might cause misfeeds, stacking problems, jams, poor toner fusing, poor print quality, or excessive mechanical wear.

Card-stock construction

- **Smoothness:** 135- to 157-g/m² (36- to 42-lb) card stock should have a smoothness rating of 100 to 180 Sheffield. 60- to 135-g/m² (16- to 36-lb) card stock should have a smoothness rating of 100 to 250 Sheffield.
- **Construction:** Card stock should lie flat with less than 5 mm (0.2 inch) of curl.
- **Condition:** Make sure that the card stock is not wrinkled, nicked, or otherwise damaged.
- **Sizes:** Only use card stock within the following size ranges:
 - **Minimum:** 76 x 127 mm (3 x 5 inches)
 - **Maximum:** 216 x 356 mm (8.5 x 14 inches)

Card-stock guidelines

- Set margins at least 2 mm (0.08 inch) away from the edges.

Loading media

Loading media in the HP LaserJet 1010 series printers and the HP LaserJet 1020 printer is simple and straightforward.

This section describes loading bulk media to print.

Main input tray

The main input tray holds up to 150 sheets of 75-g/m² (20-lb) paper or a 25 mm (0.98 inch) stack of heavier media. Load media with the top forward and the side to be printed on facing up. To prevent jams and skew, always adjust the side and rear media guides.

Priority feed slot

Use the priority feed slot to feed a single sheet of a recommended media for manual feeding and special operations. It can hold up to ten pages of 75-g/m² (20-lb) paper, but is best used for feeding one sheet at a time of paper, heavier paper (163-g/m² [42-lb]), or card stock, or a single envelope or transparency. Load media with the top forward and the side to be printed facing up. To prevent jams and skew, always adjust the side media guides.

If you try to print on media that is wrinkled, folded, or damaged in any way, a jam might occur. See [Jams on page 42](#).



NOTE When you add new media, make sure that you remove all of the media from the input tray and straighten the stack of new media. This helps prevent multiple sheets of media from feeding through the printer at one time, and therefore reduces jams.

Specific types of media

- **Transparencies and labels:** Load transparencies and labels with the top forward and the side to be printed facing up. See the user guide for more information.
- **Envelopes:** Load envelopes with the narrow, stamp side forward and the side to be printed facing up. See the user guide for more information.
- **Letterhead or preprinted forms:** Load with the top forward and the side to be printed facing up. See the user guide for more information.
- **Cards and custom-sized media:** Load with the narrow side forward and the side to be printed facing up. See the user guide for more information.

Setting media types

Use the procedure in this section to select the correct type of media for the print job. An incorrect media type setting might cause image-quality problems.

Set the media type

- 1 Open the **Printer Properties** dialog box.
- 2 Click **Printer Preferences**.
- 3 Select the correct media type from the **Type Is** drop down menu.
- 4 Click **OK** to close the **Printer Preferences** dialog box.
- 5 Click **OK** to close the **Printer Properties** dialog box.

3 Maintenance

This chapter describes the life expectancy of parts that wear, printer cleaning, printer maintenance, and the replacement of user-replaceable parts.

- [Life expectancies of parts that wear](#)
- [Cleaning the product](#)
- [User-replaceable parts](#)
- [Jams](#)

Life expectancies of parts that wear

Inspect any parts that wear when servicing the product. Replace them as needed, based on failure or wear rather than on usage.

The following table lists approximate schedules for replacing consumables.

Table 3-1 Life expectancies of parts that wear

Description	Part number	Life (estimated)	Remarks
Print cartridge (user-replaceable)	Q2612A	2,000 pages	When print becomes faint, redistribute the toner in the cartridge by gently rotating the cartridge, or replace the cartridge.
		 NOTE The declared cartridge yield value is stated in accordance with ISO/IEC 19752. For more information, see www.hp.com/go/pageyield .	
Pickup roller	RL1-0266-000CN	50,000 pages	Affects paper pickup
Printer separation pad	RM1-0648-000CN	50,000 pages	Affects paper separation (feeding one page at a time)
Fuser assembly (110–127 V)	RM1-0649-000CN (HP LJ 1010 series) RM1-2086-000CN (HP LJ 1020 printer)	50,000 pages	Can affect print quality and paper movement
Fuser assembly (220-240 V)	RM1-0655-000CN (HP LJ 1010 series) RM1-2087-000CN (HP LJ 1020 printer)	50,000 pages	Can affect print quality and paper movement
HP LJ 1010 printer 110 V (exchange)	Q2460–69001	50,000 pages	Maximum life
HP LJ 1010 printer 220 V (exchange)	Q2460–69002	50,000 pages	Maximum life
HP LJ 1012 printer 110 V	Q2461–69001	50,000 pages	Maximum life
HP LJ 1012 printer 220 V (exchange)	Q2461–69002	50,000 pages	Maximum life
HP LJ 1015 printer 110 V (exchange)	Q2462–69001	50,000 pages	Maximum life
HP LJ 1015 printer 220 V (exchange)	Q2460–69002	50,000 pages	Maximum life
HP LJ 1020 printer 110 V	Q5911-67056 (replacement) Q5911-69056 (refurbished) Q5911-67001 (exchange engine w/formatter)	50,000 pages	Maximum life
HP LJ 1020 printer 220 V	Q5911-67055 (replacement)	50,000 pages	Maximum life

Table 3-1 Life expectancies of parts that wear (continued)

Description	Part number	Life (estimated)	Remarks
	Q5911-69055 (refurbished)		
	Q5911-67002 (exchange engine w/formatter)		

Cleaning the product

! **WARNING!** Before you perform these steps, unplug the printer to avoid shock hazard.

To maintain quality, thoroughly clean the printer at the following times:

- Any time a new print cartridge is installed
- After printing approximately 2,000 pages
- Whenever print-quality problems appear

Clean the outside of the printer with a water-dampened cloth. Clean the inside with only a dry, lint-free cloth (such as a lens tissue).



WARNING! Avoid touching the heating element in the fuser. It might be very hot and can cause burns.



CAUTION To avoid permanent damage to the printer, do not use ammonia-based or ethyl alcohol-based cleaners on or around the printer.

CAUTION Do not touch the surface of the black-sponge transfer roller. Contaminants on the roller can cause print-quality problems.

Cleaning the print path

The HP LJ 1010 series and the HP LaserJet 1020 printer feature a special cleaning mode to clean the paper path.



NOTE This process requires using a transparency to remove dust and toner from the print paper path. Do not use bond or rough paper.

Make sure that the transparency that is used in this cleaning process meets the media requirements for the printer.

If transparency film is unavailable, use copier-grade paper (70 to 90 g/m², or 18 to 24 lb) that has a smooth surface. If you must use paper, perform the procedure two or three times to ensure thorough cleaning.

- 1 Make sure that the printer is idle and the **READY** light is on.
- 2 Load the media in the input tray.
- 3 Follow the appropriate step below to process the cleaning page.
 - **HP LaserJet 1010 series printer:** Open the HP Toolbox. Click the **Troubleshooting** tab, and then click **Print Quality Tools**. Select the cleaning page.
 - **HP LaserJet 1020 printer:** Open the **Printer Properties** dialog box. Click the **Configure** tab, and then select **Start** in the **Cleaning Page** box. Follow the instructions in the **Cleaning Utility** dialog box.




NOTE HP LJ 1010 series printers: The cleaning process can also be initiated by holding down the **Go** button for at least 12.5 seconds (for information about other printer pages, see [Control-panel pages \(HP LaserJet 1010 series printers only\) on page 101](#)). The cleaning process takes approximately 3 minutes. The cleaning page stops periodically during the cleaning process. Do not turn the printer off until the cleaning process has been completed. You might need to repeat the cleaning process several times to thoroughly clean the printer.

NOTE HP LJ 1020 printer: The cleaning process takes approximately 3 minutes. The cleaning page stops periodically during the cleaning process. Do not turn the printer off until the cleaning process has been completed. You might need to repeat the cleaning process several times to thoroughly clean the printer.


Cleaning the print-cartridge area

You do not need to clean the print-cartridge area often. However, cleaning this area can improve the quality of printed sheets.

- 1 Turn off the printer, unplug and remove the power cord. Wait for the printer to cool.

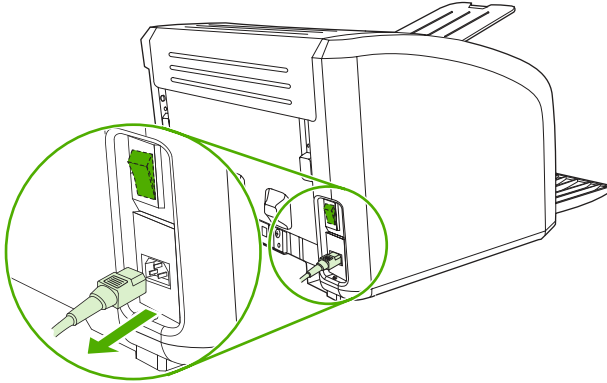


- 2 Open the print-cartridge door, and remove the print cartridge (HP LJ 1010 series printer shown).

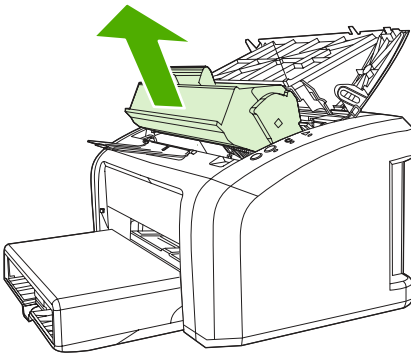


CAUTION To prevent damage, do not expose the print cartridge to light. Cover the print cartridge, if necessary. Also, do not touch the black-sponge transfer roller inside the printer. By doing so, you can damage the printer.


- 3 With a dry, lint-free cloth, wipe any residue from the media-path area and the print-cartridge cavity.

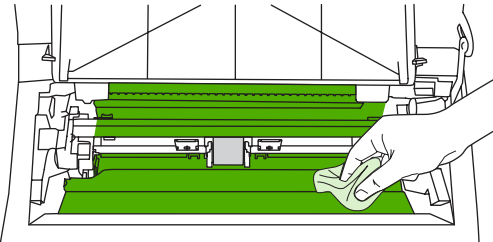

- 4 Replace the print cartridge, and close the print-cartridge door (HP LJ 1010 series printer shown).

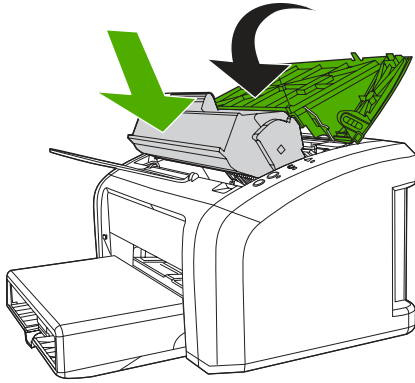

- 5 Plug in the printer, and then turn it on.

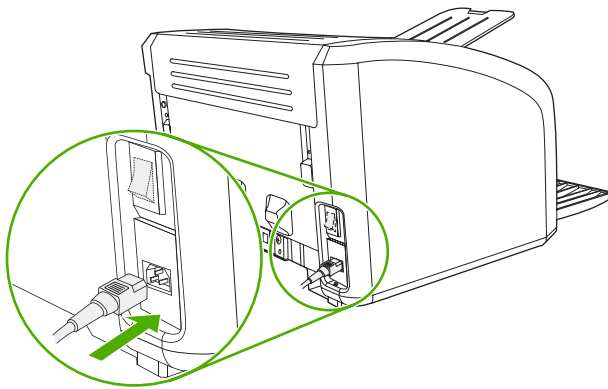


Cleaning the pickup roller


If you want to clean the pickup roller rather than replace it, use the following instructions.

Remove the pickup roller as described in steps 1 through 5 of [Replacing the pickup roller on page 35](#). With the roller outside the printer, use the following steps to complete the cleaning.


- 1 Dampen a lint-free cloth with water and scrub the roller.

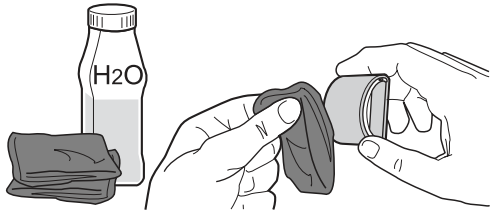

- 2 Using a dry, lint-free cloth, wipe the pickup roller to remove loosened dirt.

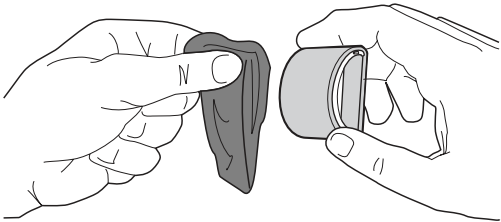

- 3 Allow the pickup roller to dry completely before you reinstall it in the printer. To reinstall the pickup roller, see steps 6 through 9 of [Replacing the pickup roller on page 35](#).

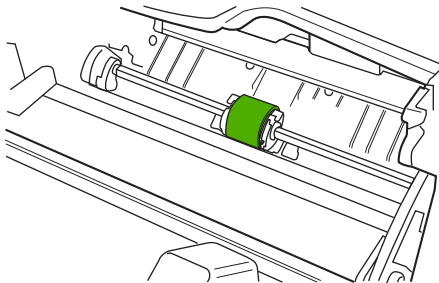


User-replaceable parts


To order a new pickup roller or separation pad, go to www.partsdirect.hp.com.

Replacing the pickup roller


If the printer regularly misfeeds (no media feeds through) and cleaning the pickup roller does not fix the problem, replace the pickup roller.

 **CAUTION** Failure to complete all of the steps in this procedure might damage the product.


- 1 Turn off the printer, unplug and remove the power cord. Wait for the printer to cool.

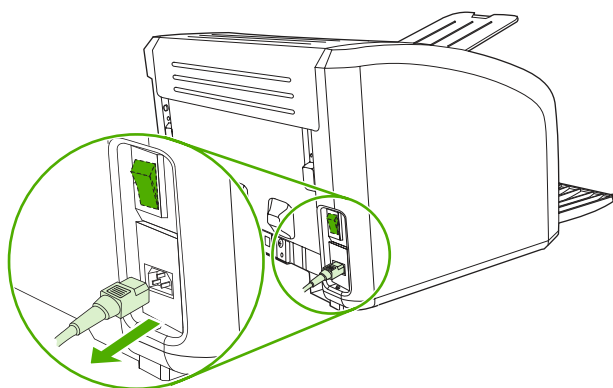

- 2 Open the print-cartridge door, and remove the print cartridge (HP LJ 1010 series printer shown).

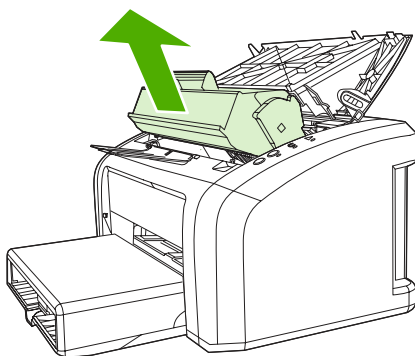


- 3 Locate the pickup roller (HP LJ 1010 series printer shown).

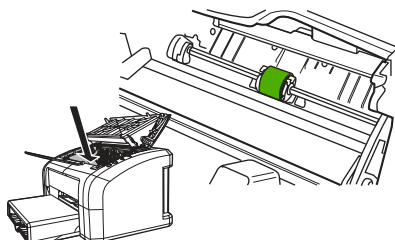


- 4 Gently release the small, white tabs on each side of the pickup roller by pushing them away from the roller, and then rotate the pickup roller toward the front.

CAUTION Use gentle pressure to release the small, white tabs to avoid breaking them.

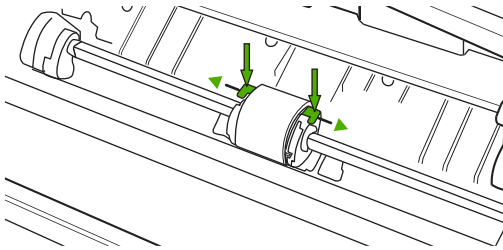


- 5 Gently pull the pickup roller up and out.

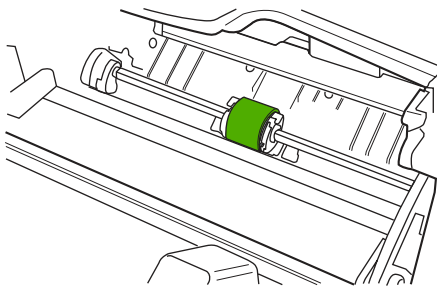


- 6 Position the new pickup roller in the slot of the previous pickup roller.




NOTE Circular and rectangular pegs on each side prevent you from incorrectly positioning the pickup roller.

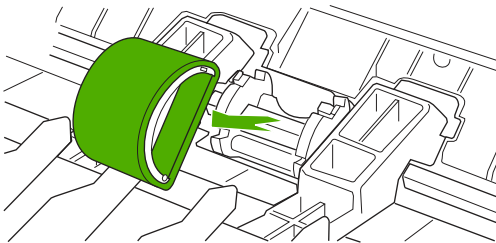


- 7 Rotate the top of the new pickup roller into position until the white tabs on each side of the roller snap the roller into place.

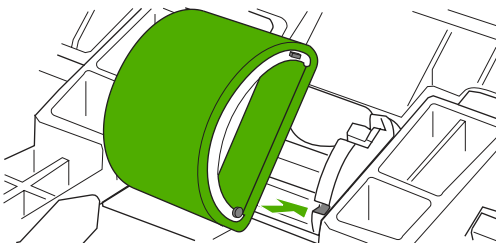

- 8 Reinstall the print cartridge, and close the print-cartridge door.

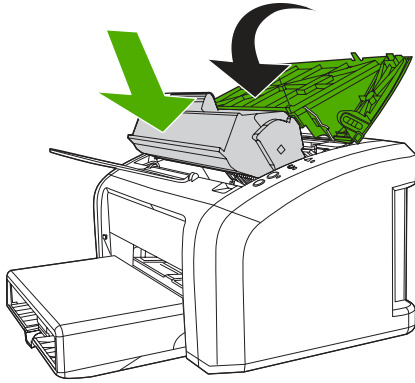

- 9 Plug in the printer, and then turn it on.

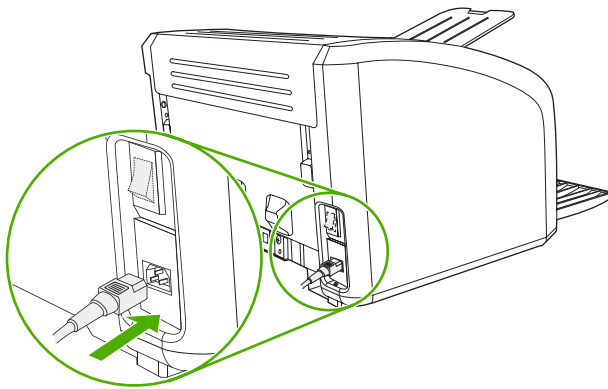

Replacing the separation pad


If the printer regularly pulls multiple sheets of media at a time, you might need to change the separation pad. Recurring feed problems might indicate that the separation pad is worn.

Normal use with good-quality media causes wear. The use of poor-quality media might require more frequent replacement of the separation pad.




NOTE Before you change the separation pad, clean the pickup roller. See [Cleaning the pickup roller on page 34](#). To order parts, go to www.partsdirect.hp.com.


- 1 Turn off the printer, unplug and remove the power cord. Wait for the printer to cool.

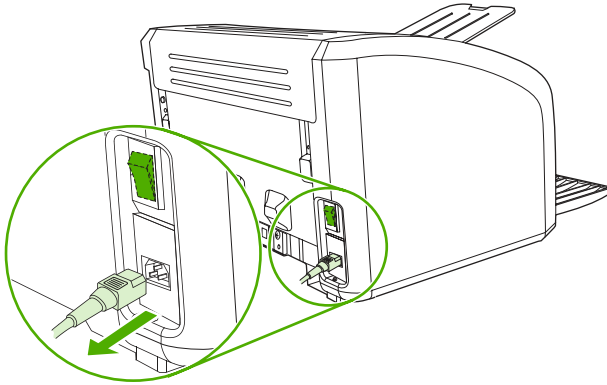


- 2 At the back of the printer, use a #2 Phillips screwdriver to unscrew the two screws that hold the separation pad in place.

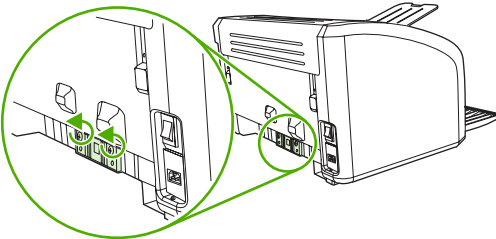


- 3 Remove the separation pad.

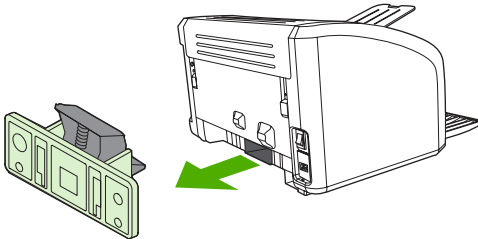

- 4 Insert the new separation pad, and screw it in place.

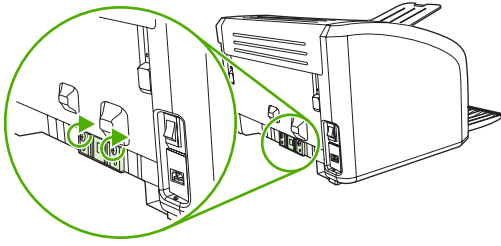

- 5 Plug the printer in, and then turn it on.

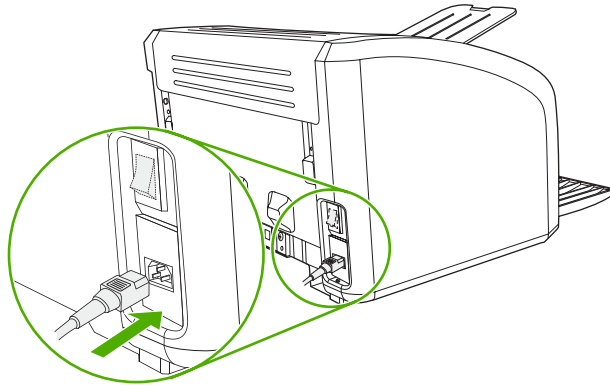

Replacing the main input tray (paper-pickup tray assembly)

If you break or damage the main input tray (also called the paper-pickup tray assembly), you can replace it. To order parts, go to www.partsdirect.hp.com.

- 1 Carefully flex the main input tray just enough to release one side.



NOTE Be careful not to break the hinge points.



Figure 3-1 Main input tray (HP LaserJet 1020 printer shown)

- 2 Remove the main input tray.

Replacing the output-bin extension (delivery-tray assembly)

If you break or damage the output-bin extension (also called the delivery-tray assembly), you can replace it. To order parts, go to www.partsdirect.hp.com.

- 1 Carefully flex the sides of output-bin extension just enough to release the hinge pins.



NOTE Be careful not to break the hinge pins (callout 1).

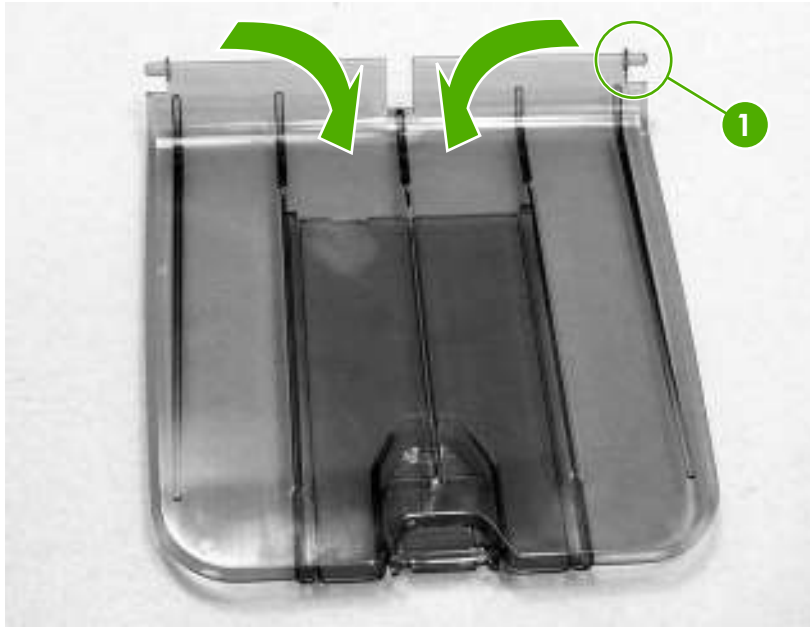


Figure 3-2 Output-bin extension

- 2 Remove the output-bin extension.

Jams

Clearing jams

CAUTION Do not use sharp objects, such as tweezers or needle nose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

CAUTION Always pull jammed media in the direction it would travel through the paper path. *Do not* pull jammed media against the direction of travel through the paper path to avoid damage to the printer.

To prevent damage to the printer when clearing jams, including jams in the output bin, always open the print-cartridge door and remove the print cartridge. Keep the door open and the cartridge out until the jam has been cleared. Opening the print-cartridge door and removing the print cartridge relieves tension on the printer rollers, which prevents damage to the printer and makes the removal of jammed pages easier.

Occasionally, media becomes jammed during a print job. You are notified of a media jam by an error from the software and the printer control panel lights. See [Control-panel lights \(HP LaserJet 1010 series printers\) on page 102](#).

The following are some of the causes of media jams:

- The input trays are loaded improperly or are too full. See [Loading media on page 25](#).



NOTE When you add new media, always remove all of the media from the input tray and straighten the stack of new media. This helps prevent multiple sheets of media from feeding through the printer at one time, reducing media jams.

- The media does not meet HP specifications. See [Media specifications on page 21](#).

Typical media jam locations

- **Print cartridge area:** See [Removing a jammed page on page 43](#).
- **Input tray area:** If the page is still sticking out of the input tray, gently try to remove it from the input tray without tearing the page. If you feel resistance, see [Removing a jammed page on page 43](#).
- **Output path:** If the page is sticking out of the output bin, see [Removing a jammed page on page 43](#).



NOTE There might be loose toner in the printer after a media jam. This toner clears up after a few sheets are printed.

Removing a jammed page


Use the procedures in this section to remove a jam.

CAUTION Media jams might result in loose toner on the page. If you get any toner on your clothes, wash them in cold water. *Hot water will permanently set the toner into the fabric.*

CAUTION To prevent damage to the printer when clearing jams, including jams in the output bin, always open the print cartridge door and remove the print cartridge.

To prevent damage to the print cartridge, minimize its exposure to direct light. Cover the print cartridge with a sheet of paper.

- 1 Open the print cartridge door, and remove the print cartridge.

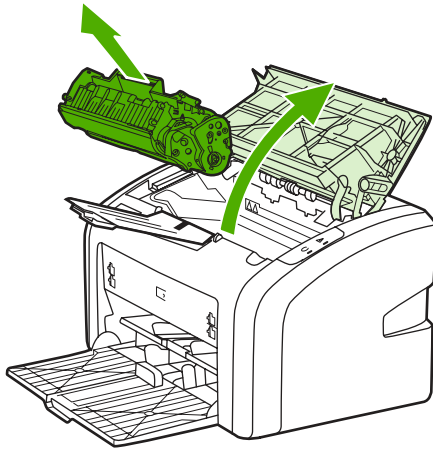


- 2 Grasp the middle edge of the side of the media that is most visible, and carefully pull it free from the printer.




CAUTION Do not use sharp objects, such as tweezers or needle nose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

CAUTION Always pull jammed media in the direction it would travel through the paper path. *Do not* forcefully pull jammed media against the direction of travel through the paper path to avoid damage to the printer.

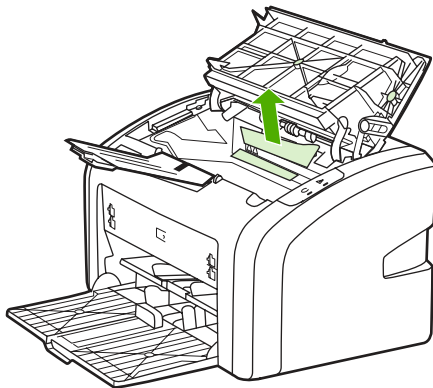

- 3 When you have removed the jammed media, replace the print cartridge, and close the print cartridge door.

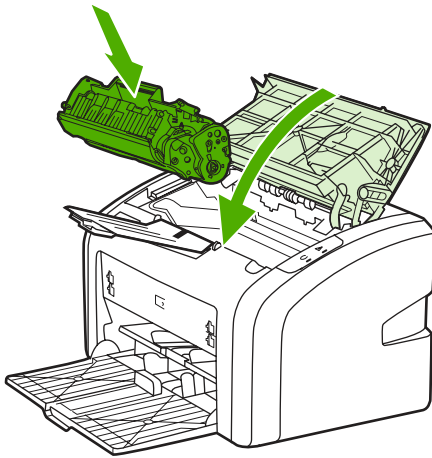

After clearing a media jam, you might need to turn the printer off then on again.



NOTE When you add new media, remove all of the media from the input tray and straighten the stack of new media.

4 Operational overview

This chapter describes the general components of the HP LaserJet 1010 series printers and the HP LaserJet 1020 printer, and the theory of operation for the printers.

- [Basic functions](#)
- [Formatter system](#)
- [Printer functions](#)

Basic functions

The following are the major systems of the printer:

- Formatter and I/O functions
 - Formatter system
- Printer functions and operation
 - Engine-control system (engine control unit [ECU] and engine power assembly)
 - Image-formation system
 - Paper-feed system

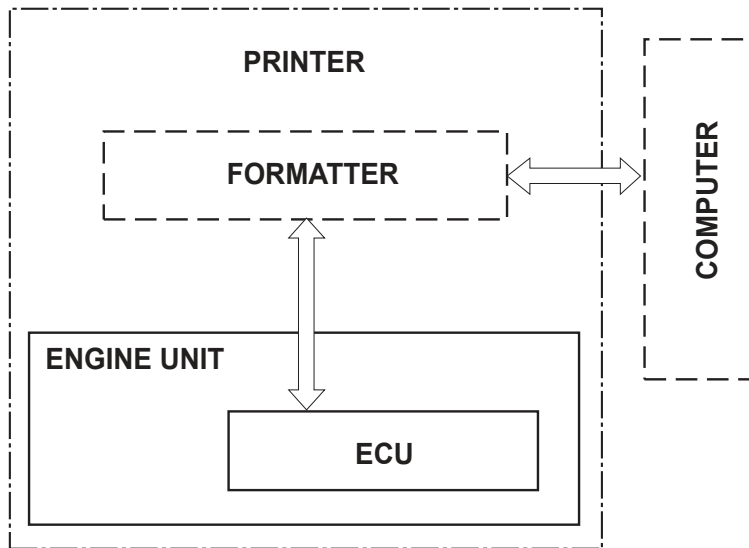


Figure 4-1 Basic configuration

Formatter system

The formatter coordinates the major systems. It is responsible for the following tasks:

- Receiving and processing print data from the printer interface (the computer)
- Monitoring the control panel and relaying printer-status information
- Coordinating image formation and timing with the print engine
- Communicating with the host computer through the bidirectional interface

The formatter receives print data from the parallel interface or the universal serial bus (USB) interface and converts it into a dot image. The ECU synchronizes the image-formation system with the paper-feed system and signals the formatter to send the print-image data to the laser system. The formatter sends the print-image data (dots) in the form of a video signal, and the printing process begins.

Central processing unit

The formatter uses an embedded Coldfire V4 microprocessor operating at 133 MHz.

RAM

- One bank of nonvolatile RAM (NVRAM) stores parameters.
- Dynamic random access memory (DRAM) provides temporary storage of the product program code and print data.
- The HP LaserJet 1010 and 1012 printers have 8 MB of RAM.
- The HP LaserJet 1015 printer has 16 MB of RAM.
- The HP LaserJet 1020 printer has 2 MB of RAM.

USB interface

The formatter receives incoming data through the USB interface. This interface provides high-speed, two-way communication between the printer and the host, allowing applications on the host computer to change printer settings and monitor printer status. The USB interface is compatible with the USB 2.0 specification.

Parallel interface (HP LaserJet 1015 printer only)

If the parallel interface on the HP LaserJet 1015 printer is used, the formatter receives incoming data through bidirectional ECP. Like the USB interface, the parallel interface supports high-speed, two-way communication between the printer and the host, so applications on the host computer can change printer settings and monitor printer status. Use an IEEE 1284-compliant parallel cable.

Control panel

The control panel consists of the following components:

- Three status lights (HP LJ 1010 series printers) or two status lights (HP LJ 1020 printer)
- Go and CANCEL JOB buttons (HP LJ 1010 series printers)

Draft mode (EconoMode)

Depending on which driver is used, selecting draft or EconoMode from the driver allows the product to use less toner, extending the life of the print cartridge. There is a change in print quality when this setting is used.



NOTE HP does not recommend the full-time use of EconoMode. If EconoMode is used full-time when the average toner coverage is very low, it is possible that the toner supply will outlast the mechanical parts of the print cartridge.

HP Memory Enhancement technology (MEt)

HP MEt effectively doubles the standard memory through a variety of font- and data-compression methods.

Enhanced I/O

The Enhanced I/O feature uses printer memory to store data that the printer receives from the host computer. When Enhanced I/O is enabled, you can send more data to the printer in less time, so that you can return to your software program sooner. Enhanced I/O has the following options:

- **Auto:** The product uses Enhanced I/O memory allocation to increase the speed of data transfer from the host computer to the printer, if necessary. The default setting is Auto.
- **Off:** The printer uses the minimum amount of product memory for storing data that the host computer sends.
- **Page protect:** The formatter creates the entire page image in page-buffer memory before physically moving the media through the printer. This process ensures that the entire page is printed.

Page complexity (ruling lines, complex graphics, or dense text) can exceed the printer's ability to create the page image quickly enough to keep pace with the image-formation process. If the page-protect feature is disabled and a page is too complex, the page might print in parts (for example, the top half on one page and the bottom half on the next page). Some print-data loss is likely in these instances, and the **ATTENTION** light on the control panel will illuminate.

PJL overview

When the host computer is connected through the parallel port on the HP LaserJet 1015 printer, Printer Job Language (PJL) is an integral part of configuration (in addition to the standard PCL). When an IEEE 1284-compliant parallel cable (standard ECP cabling) is attached, PJL provides the following functions:

- **Two-way communication** with the host computer through a bidirectional parallel connection. The printer can communicate information to the host (such as the control-panel status).
- **Isolation of print environment settings** from one print job to the next. For example, if a print job is sent to the printer in landscape mode, the subsequent print jobs print in landscape only if they are formatted for landscape printing.



NOTE Because PJL commands can be sent to the printer only from an MS-DOS command prompt and through a parallel cable, only the HP LaserJet 1015 printer offers the PJL feature. MS-DOS applications are not supported over a USB interface.

Printer functions

Printer functions are divided into five groups:

- Engine control
- Formatter
- Image formation
- Laser/scanner
- Pickup and feed

The following figure is a block diagram of the printer:

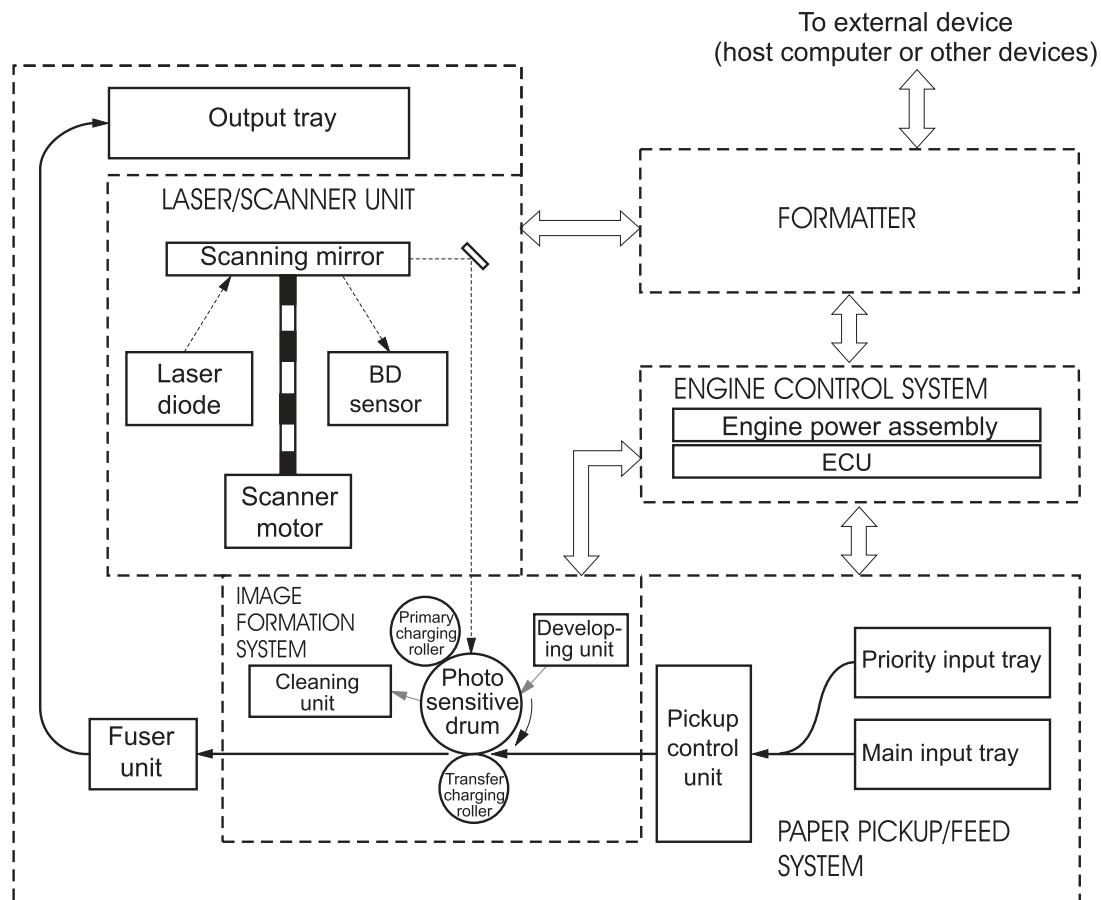


Figure 4-2 Printer functional-block diagram

Engine control system (engine control unit and power assembly)

The engine control system coordinates all print engine activities. The engine control system includes both the engine control unit (ECU) PCA and the engine-power-assembly PCA.



NOTE In other HP LaserJet products, the ECU and power functions are combined onto one PCA known as the controller PCA or the DC controller PCA. In the HP LaserJet 1010 series printers, the control functions are primarily relegated to the ECU PCA, and the power functions are relegated to the engine-power-assembly PCA.

The ECU controls the following systems and functions:

- **Printer-engine control**

- Paper-motion monitoring and control (printing)
- Motor

- **Printer laser/scanner unit**

The engine-power assembly provides the following features in the power system:

- AC power distribution
- DC power distribution
- Overcurrent/overvoltage protection
- High-voltage power distribution

Printer-engine-control system

Paper motion monitoring and control

The ECU controls paper motion in the printer by continuously monitoring the two paper sensors and coordinating the timing with the other print processes.

For a detailed explanation of paper movement and the interaction of the sensors and pickup solenoid with the paper-movement process, see [Printer paper-feed system on page 56](#).

Motor

The ECU controls the motor. The motor drives all of the paper movement in the printer.

Printer laser/scanner unit

The ECU sends signals to the laser/scanner assembly to modulate the laser diode on and off modes and to drive the laser/scanner motor.

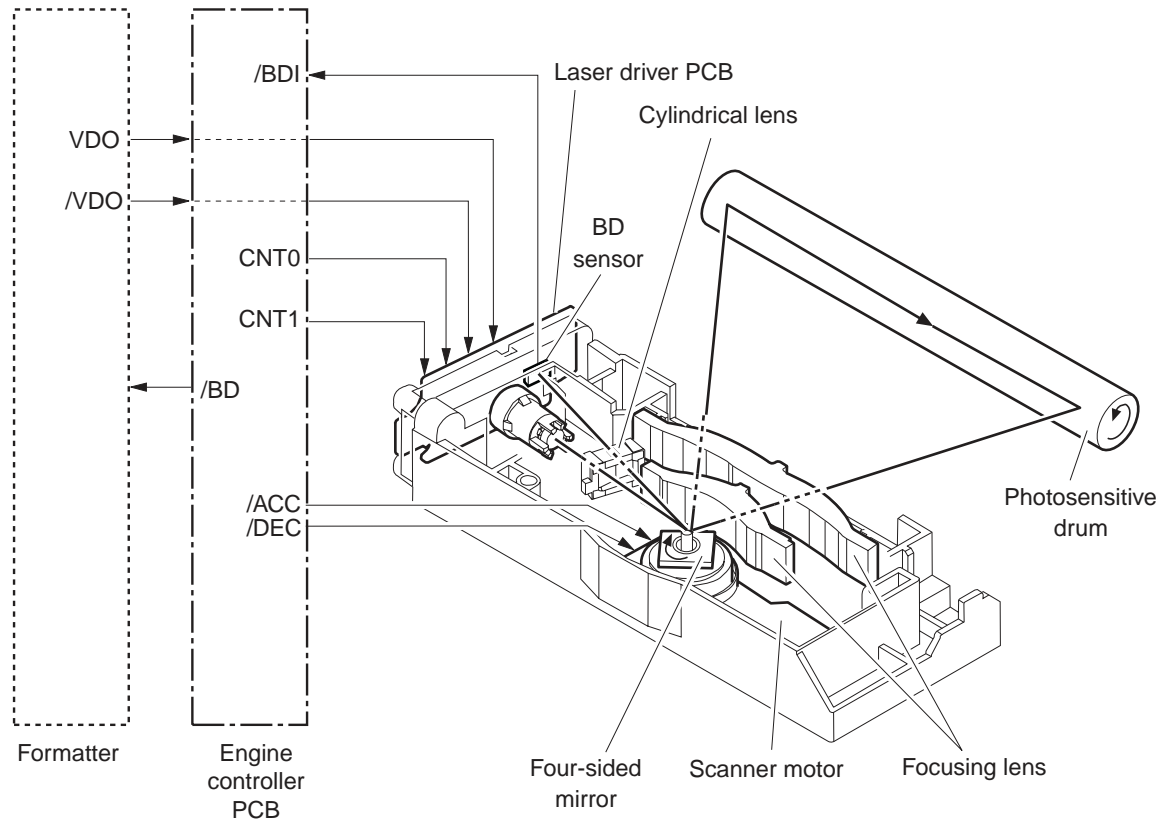


Figure 4-3 Laser/scanner operation

Power system on the engine power assembly

The engine-power assembly provides the ac, dc, and high-voltage power supply circuits.

AC power distribution

The ac power circuitry supplies ac voltage whenever the power cord is connected to the ac power source and the power switch is on. AC voltage is distributed to the dc power supply circuitry and to the ac driver circuitry, which controls ac voltage to the fuser-assembly heating element.

DC power distribution

The dc power distribution circuitry, located on the engine-power assembly, distributes +3.3 Vdc, +5 Vdc, and +24 Vdc as follows:

■ +3.3 Vdc	ECU, sensors, formatter
■ +5 Vdc	Parallel interface on the HP LJ 1015 printer formatter
■ +24 Vdc	Main motor, laser/scanner motor, solenoid, high-voltage power supply, fuser, safety circuit, door switch



CAUTION

Overcurrent/overvoltage

Two overvoltage devices are in this printer:

- Fuse F101 provides overcurrent protection for the fusing-system circuitry.
- Fuse F102 (110 V printers only) provides overcurrent protection to the printer dc power-supply circuitry.

You can check or replace the fuses by removing the left cover. If either of these fuses fails, replace the engine-power assembly.

High-voltage power distribution

The high-voltage power supply applies an overlap of dc and ac voltage to the primary-charging roller and to the developing roller. This circuit also applies a positive or negative dc voltage to the transfer roller according to the instructions from the engine-control unit.

This circuit also controls the image density by changing the primary ac voltage and the developing ac bias according to the print-density setting. See [Setting media types on page 26](#).

The high-voltage power supply is disabled when the print-cartridge door is open.

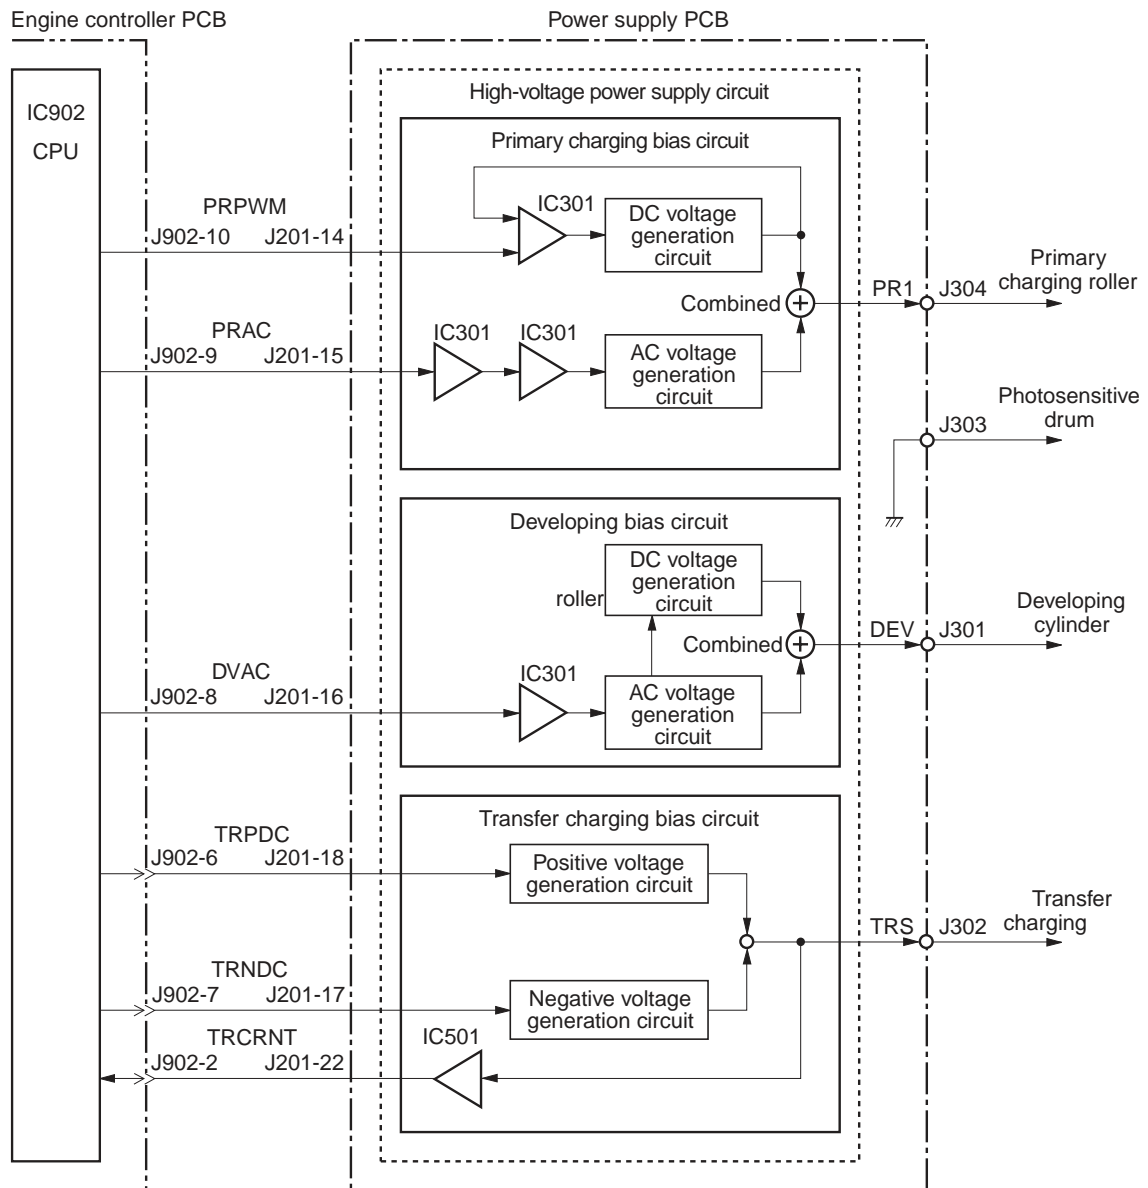


Figure 4-4 High-voltage power supply circuit

Image-formation system

Laser printing requires the interaction of several different technologies, including electronics, optics, and electrophotographic, to provide a printed page. Each process functions independently and must be coordinated with the other printer processes. Image formation consists of seven processes, which are described in the following section.

The seven image-formation processes

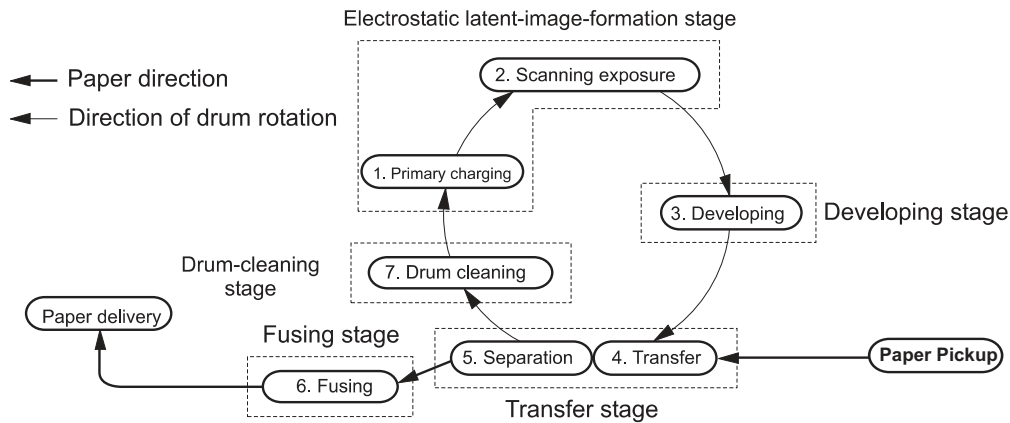


Figure 4-5 Image formation-block diagram

- 1 Conditioning stage (primary charging)**—This process applies a uniform negative charge to the surface of the drum with the primary charging roller, which is located in the print cartridge. The primary charging roller is coated with conductive rubber. An ac bias is applied to the roller to erase any residual charges from any previous image. In addition, the primary charging roller applies a negative dc bias to create a uniform negative potential on the drum surface. The print density setting modifies the dc voltage.
- 2 Writing stage (scanning exposure)**—During this process, a modulated laser diode projects the beam onto a rotating scanning mirror. As the mirror rotates, the beam reflects off the mirror, first through a set of focusing lenses, then off a mirror, and finally through a slot in the top of the print cartridge, and onto the photosensitive drum. The beam sweeps the drum from left to right, discharging the negative potential wherever the beam strikes the surface. This creates a latent electrostatic image, which later is developed into a visible image. Because the beam sweeps the entire length of the drum while the drum rotates, the entire surface area of the drum can be covered. At the end of each sweep, the beam strikes the beam-detect lens, generating the beam-detect signal (BD signal). The BD signal is sent to the ECU where it is converted to an electrical signal used to synchronize the output of the next scan line of data.
- 3 Developing stage**—During this process, the latent electrostatic image is present on the drum. The toner particles obtain a negative surface charge by rubbing against the developing cylinder, which is connected to a negative dc supply. The negatively charged toner is attracted to the discharged (exposed, grounded) areas of the drum, and it is repelled from the negatively charged (unexposed) areas.
- 4 Transfer stage**—During this process, the toner image on the drum surface is transferred to the media. The transfer roller applies a positive charge to the back of the media, which attracts the negatively charged toner on the drum surface to the media. After separation, the drum is cleaned and conditioned for the next image.
- 5 Separation stage**—During this process, the media separates from the drum. To stabilize the feed system and prevent toner dropouts on the printed image at low temperature and humidity, the static eliminator reduces the charge on the back of the media.

- 6 Fusing stage**—During this process, the heat and pressure fuse the toner into the media to produce a permanent image. The media passes between a heated fusing element and a soft pressure roller, which melt the toner and press it into the media.
- 7 Drum-cleaning stage**—During this process, the cleaning blade is in contact with the surface of the drum at all times. As the drum rotates during printing, the cleaning blade wipes excess toner off the drum and stores it in the waste toner receptacle.

Print cartridge


As the focal point of the image-formation system, the print cartridge contains toner and houses the cleaning, conditioning, and developing stages of the process. The print cartridge contains the photosensitive drum, primary-charging roller, developing station, toner cavity, and cleaning station. By including these components (which wear, degrade, or are consumed) in the replaceable print cartridge, the need for many service calls is eliminated. The special photosensitive properties of the drum form an image on the drum surface and then transfer the image to media.

CAUTION The print cartridge does not include a light-blocking shutter. Do not expose the drum to light, which can permanently damage the drum. Protect the print cartridge whenever you remove it by covering it with paper.

Printer paper-feed system

The main input tray and the priority feed slot merge into one main input area. The printer senses the media as it enters the paper-feed path and passes the top-of-page sensor (PS801). It does not sense the presence of media before the beginning of the print cycle. The following steps occur when the printer receives a print job.

Step 1	The ECU activates the motor (M1). Paper motion begins when the ECU energizes the pickup solenoid (SL1).
Step 2	The paper pickup roller rotates once. The paper-lift plate pushes the media against the pickup roller.
Step 3	Using friction, the pickup roller grabs the top sheet and advances it to the feed-assembly drive-rollers. To ensure that only one sheet is fed, a main separation pad holds the remainder of the stack in place.
Step 4	The feed-assembly drive-rollers advance the media to the top-of-page sensor (PS801). This sensor informs the ECU of the exact location of the leading edge of media, so that the image being written on the photosensitive drum can be precisely positioned on the page.
Step 5	The feed-assembly drive-rollers then advance the media to the transfer area where the toner image on the photosensitive drum is transferred to the media.
Step 6	After the image is transferred, the media enters the fuser assembly where heat from the fuser and pressure from the pressure roller permanently bond the toner image to media. The paper-delivery sensor (PS803) determines that the media has successfully moved out of the fusing area.
Step 7	The fuser-assembly exit-rollers deliver media to the output bin face-down.

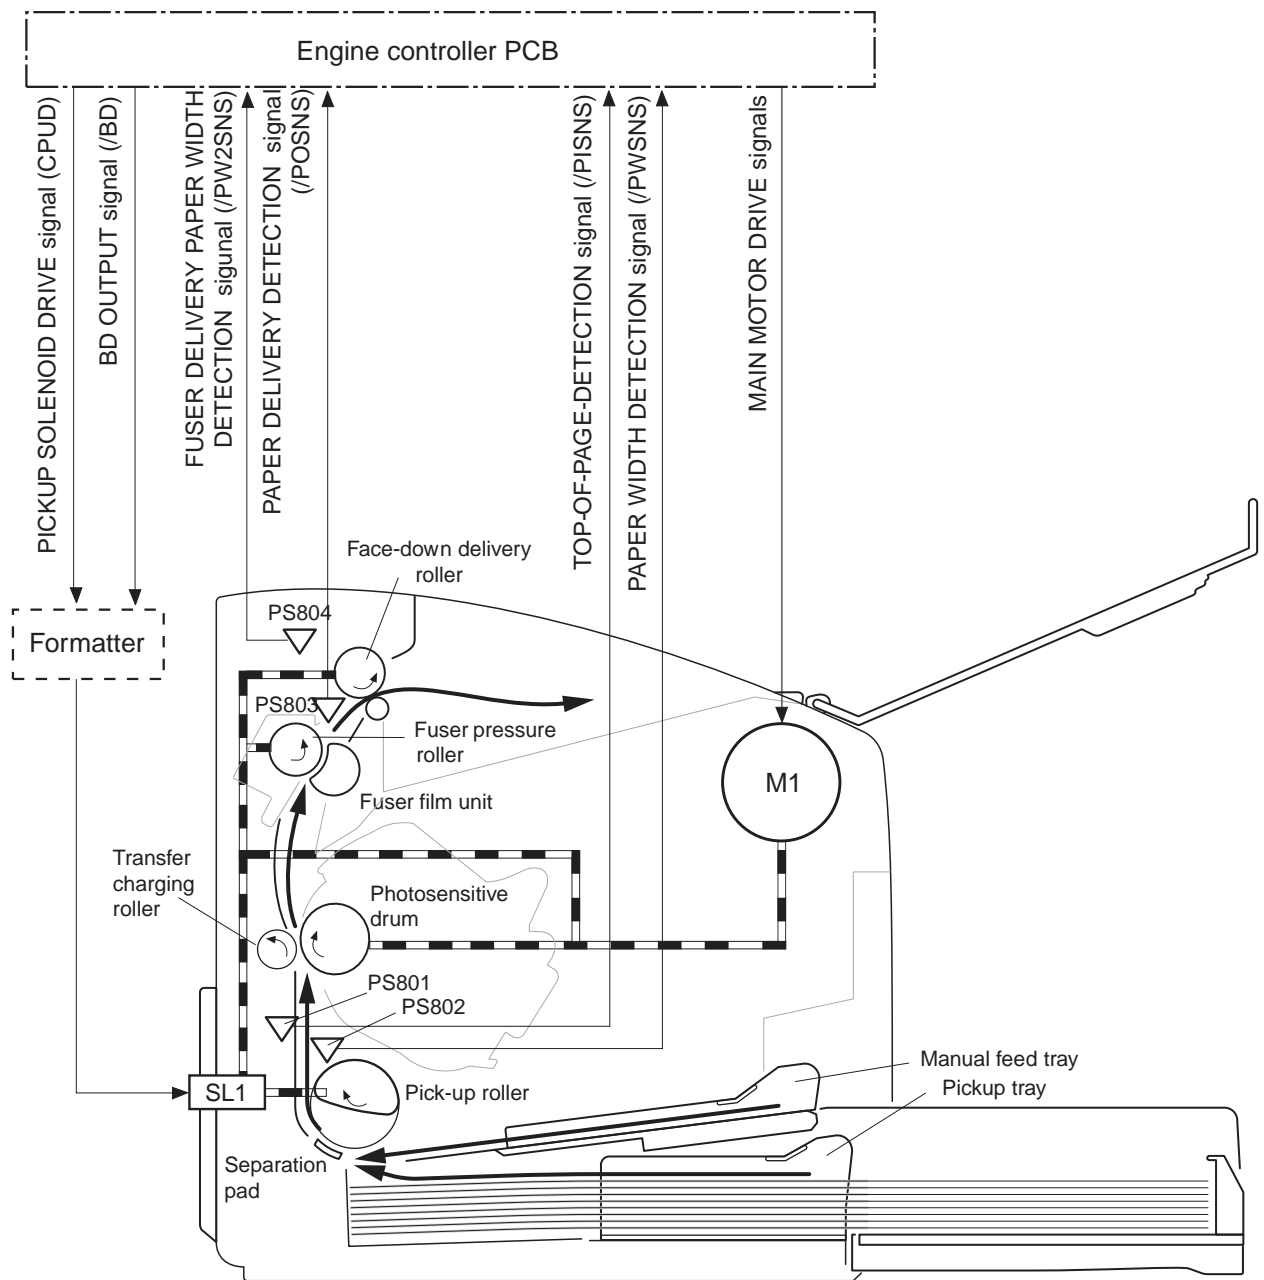

PS801: Top-of-page sensor
 PS802: Paper-width sensor
 PS803: Paper-delivery sensor
 PS804: Fuser delivery paper width sensor
 M1: Main motor
 SL1: Pickup solenoid

Figure 4-6 Printer paper path

Jam detection

The top-of-page sensor (PS801) and the paper-delivery sensor (PS803) detect media moving through the printer. If a jam is detected, the ECU immediately stops the printing process and the jam light on the control panel illuminates.

Conditions of jam detection

- **Pickup-delay jam**—Paper does not reach the top-of-page sensor (PS801) within 1.4 seconds after the pickup solenoid (SL1) has been turned on, a second pickup operation is attempted, and paper again does not reach the top-of-page sensor within 1.4 seconds.
- **Pickup stationary jam**—The top-of-page sensor (PS801) does not detect the trailing edge of media within 4.6 seconds of detecting the leading edge.
- **Delivery-delay jam**—The paper-delivery sensor (PS803) does not detect the leading edge of media within 2.1 seconds after the top-of-page sensor (PS801) detects the leading edge.
- **Wrapping jam**—The paper-delivery sensor (PS803) does not detect the trailing edge of the media within 1.5 seconds after the top-of-page sensor (PS801) detects the leading edge and within ten seconds after the paper-delivery sensor (PS803) detects the leading edge.
- **Delivery-stationary jam**—The paper delivery sensor (PS803) does not detect the leading edge of media within 2.2 seconds after the top-of-page sensor (PS801) detects the trailing edge.
- **Residual media jam**—The top-of-page sensor (PS801) or the paper-delivery sensor (PS803) detects media during the initial rotation period.
- **Door-open jam**—The top-of-page sensor (PS801) or the paper-delivery sensor (PS803) detects media while the print cartridge door is open.

Solenoid, sensors, switches, and motor

The following figure shows the locations of the solenoid, sensors, switches, and motor.

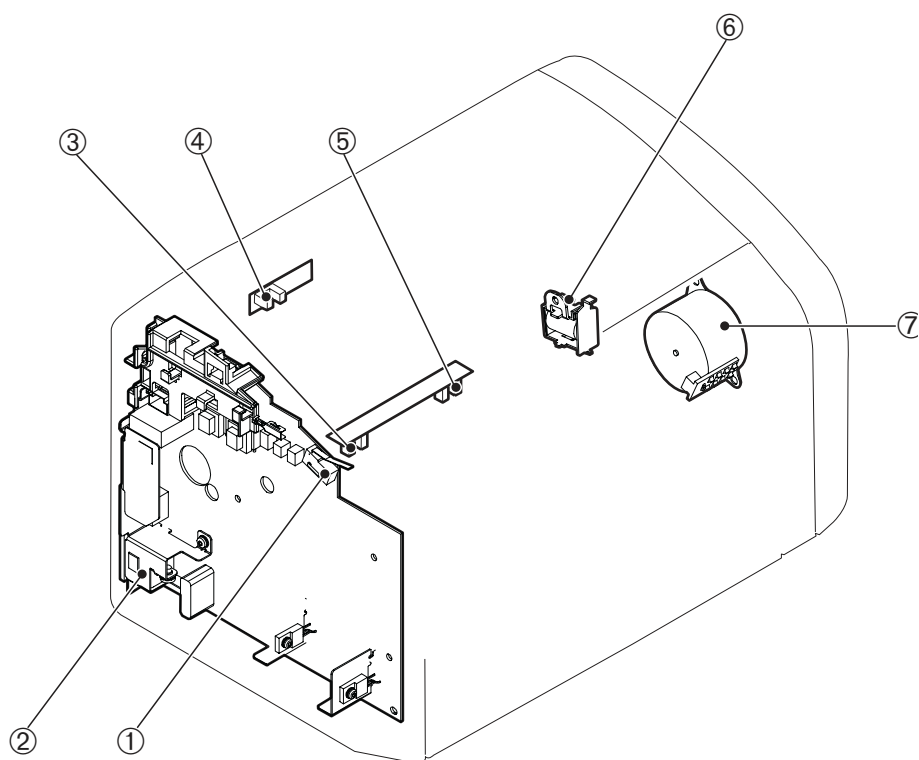


Figure 4-7 Solenoid, sensors, switches, and motor

1	The door switch detects whether the print-cartridge door is closed. Printing cannot continue until the print-cartridge door is closed.
2	Power switch
3	The paper-width sensor senses the width of the paper.
4	The paper-delivery sensor senses when paper has successfully moved out of the fusing area.
5	The top-of-page sensor detects the leading and trailing edges of the paper. It synchronizes the photosensitive drum and the top of the paper.
6	Solenoid
7	Motor

Basic sequence of operation (formatter-to-printer)

The microprocessor (CPU) on the ECU controls the printer operation sequence. The following events take place during normal printer operation.


Table 4-1 Basic sequence of operation

Period	Purpose	Remarks
WAIT: After the product is turned on until the end of the initial rotation of the main motor.	To clear the drum surface of potential and to clean the primary charging roller.	Detects whether or not the cartridge is installed.
STBY (Standby): From the end of the WAIT period or the LSTR period until the pickup command is sent from the formatter. Or, from the end of the LSTR period until the product is turned off.	To pause until the product is ready to print.	
INTR (Initial Rotation): After the pickup command has been sent from the formatter until the media reaches the top-of-page sensor (PS801).	To stabilize the photosensitive drum sensitivity in preparation for printing, and to clean the primary charging roller.	
PRINT (Print): From the end of the initial rotation until the primary voltage goes OFF.	To form images on the photosensitive drum based on the VIDEO signals (/VDO, VDO) sent from the formatter and to transfer the toner image onto the media.	
LSTR (Last Rotation Period): After the primary voltage goes OFF until the main motor stops rotating.	To deliver the last page, and to clean the primary charging roller.	When the pickup command is sent from the video controller, the printer enters the INTR period immediately after the end of the LSTR period.



NOTE The timing chart is for one sheet of A4-size media.

Figure 4-8 Printer timing diagram

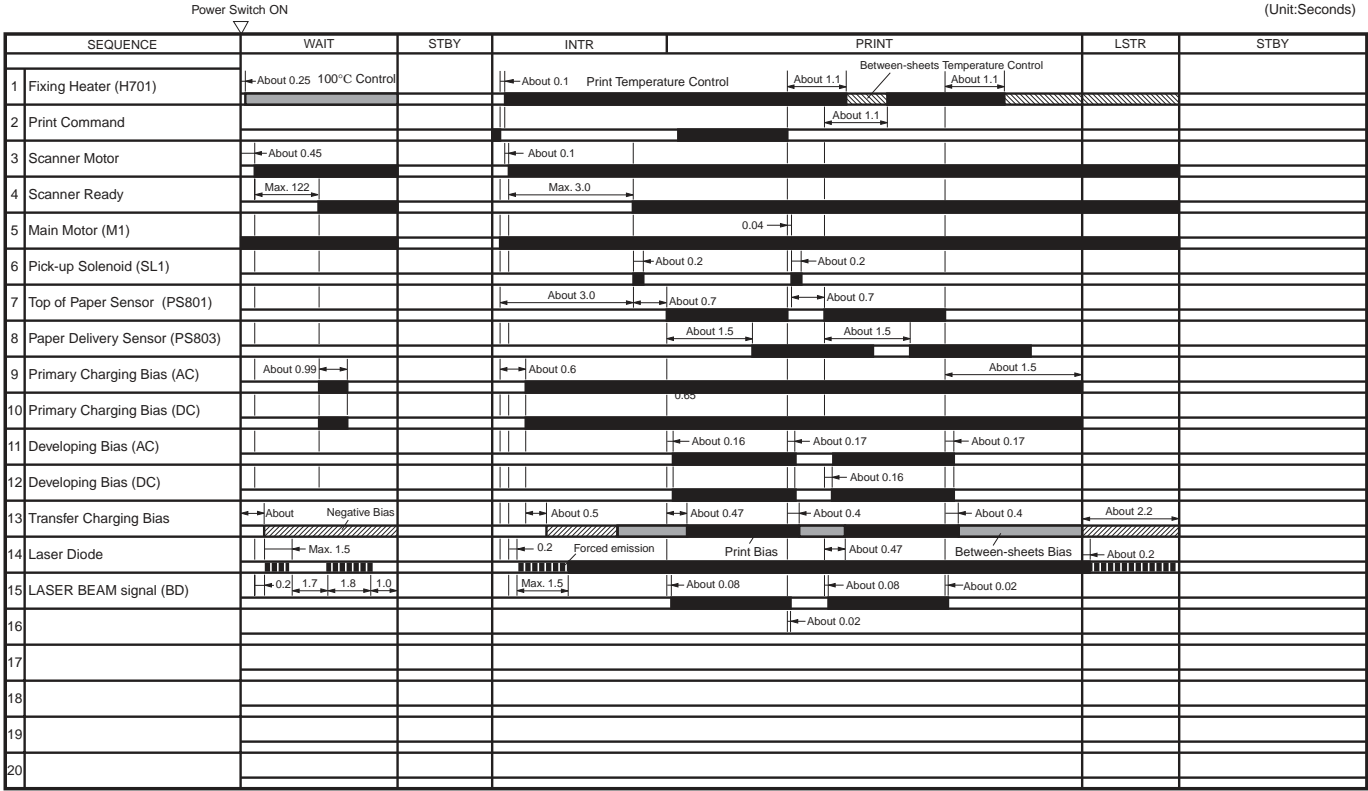

5 Removal and replacement

This chapter describes the removal and replacement of field-replaceable units (FRUs) only.

- [Removal and replacement strategy](#)
- [User-replaceable parts](#)
- [Covers](#)
- [Internal assemblies](#)

Removal and replacement strategy

This chapter contains detailed steps and images that show parts removal. Replacement is generally the reverse of removal. Occasionally, notes are included to provide directions for difficult or critical replacement procedures.

WARNING! Remove the power cord before attempting to service the product. If this warning is not followed, severe injury can result, as well as damage to the device. Certain functional checks during troubleshooting must be performed with power supplied to the product. However, the power supply should be disconnected during removal of any parts.

Sheet metal and plastic edges in the product can be sharp. Use caution when working on the product.

Never operate or service the printer with the protective cover removed from the laser/scanner assembly. The reflected beam, although invisible, can damage your eyes.



CAUTION Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation. If an ESD-protected workstation is not available, ground yourself by touching the sheet-metal chassis *before* touching an ESD-sensitive part.



NOTE To install a self-tapping screw, first turn it counterclockwise to align it with the existing thread pattern, and then carefully turn it clockwise to tighten. Do not overtighten. If a self-tapping screw-hole becomes stripped, repair the screw-hole or replace the affected assembly.

Required tools

- #2 Phillips screwdriver with magnetic tip
- Small flat-blade screwdriver
- Needle-nose pliers
- ESD mat



CAUTION Do not use a pozidrive screwdriver or any motorized screwdriver. These can damage screws or screw threads on the product.

CAUTION Do *not* pull directly on the wires when a connector is disconnected. *Always* pull on the plastic body of a connector to avoid damaging the connector wires.

Before performing service

- Remove all media.
- Unplug the power cable.
- Place the product on an ESD mat (if one is available).
- Remove the input-tray cover.
- Remove the print cartridge.

Print cartridge

- 1 Open the print-cartridge door on the top of the printer.
- 2 Remove the print cartridge.

CAUTION To prevent damage, do not expose the print cartridge to light. Cover it with a piece of paper.

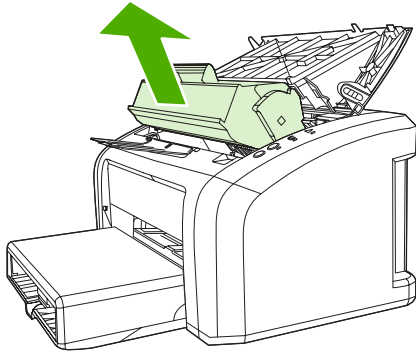


Figure 5-1 Removing the print cartridge

Differences between the HP LJ 1010 series printer models

With the exception of the nameplate and interface connectors, there are no physical differences between the HP LaserJet 1010 and HP LaserJet 1012 printers (these printers only have a USB connector). Only the firmware functionality is different.

The HP LaserJet 1015 printer has a parallel port (callout 1) in addition to the USB port.



NOTE The HP LaserJet 1020 printer has only a USB port.



Figure 5-2 HP LaserJet 1015 parallel port

Parts removal order

Use the following illustration to determine which parts must be removed before removing other parts.

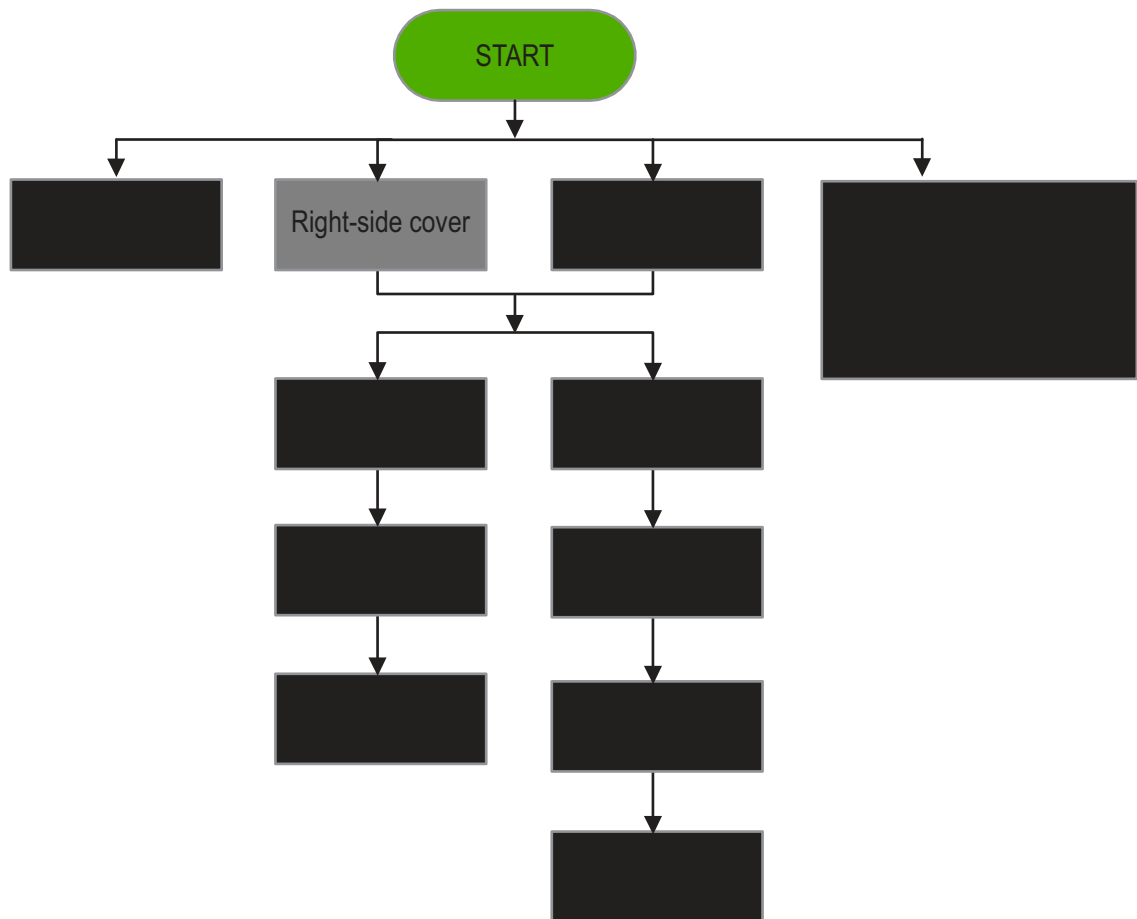



Figure 5-3 Parts-removal block diagram

User-replaceable parts


To order a new pickup roller or separation pad, go to www.partsdirect.hp.com.

Replacing the pickup roller


If the printer regularly misfeeds (no media feeds through) and cleaning the pickup roller does not fix the problem, replace the pickup roller.

 **CAUTION** Failure to complete all of the steps in this procedure might damage the product.


- 1 Turn off the printer, unplug and remove the power cord. Wait for the printer to cool.

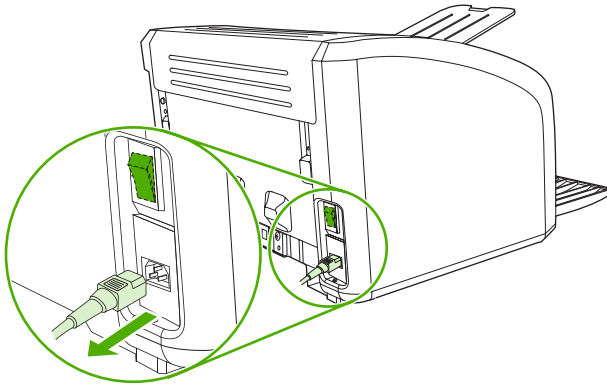

- 2 Open the print-cartridge door, and remove the print cartridge (HP LJ 1010 series printer shown).

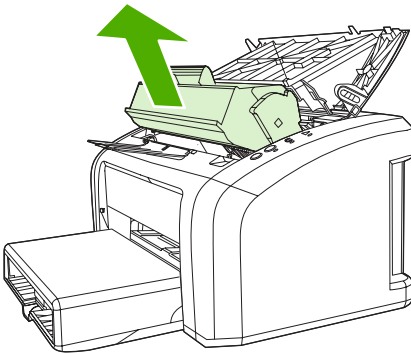


- 3 Locate the pickup roller (HP LJ 1010 series printer shown).

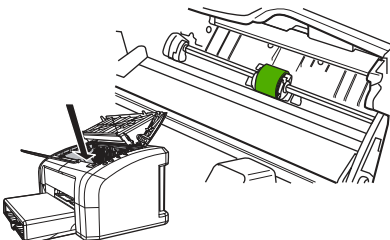


- 4 Gently release the small, white tabs on each side of the pickup roller by pushing them away from the roller, and then rotate the pickup roller toward the front.

CAUTION Use gentle pressure to release the small, white tabs to avoid breaking them.

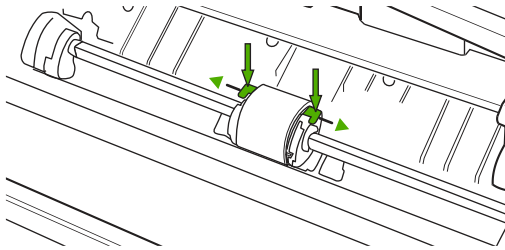


- 5 Gently pull the pickup roller up and out.

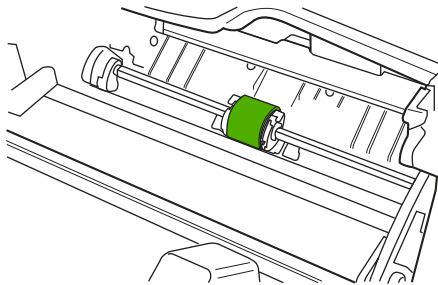


- 6 Position the new pickup roller in the slot of the previous pickup roller.




NOTE Circular and rectangular pegs on each side prevent you from incorrectly positioning the pickup roller.

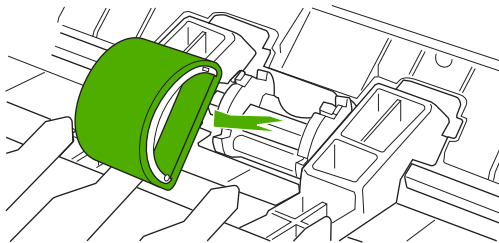


- 7 Rotate the top of the new pickup roller into position until the white tabs on each side of the roller snap the roller into place.

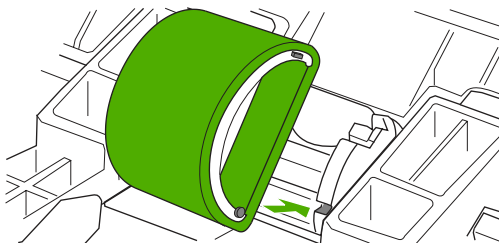

- 8 Reinstall the print cartridge, and close the print-cartridge door.

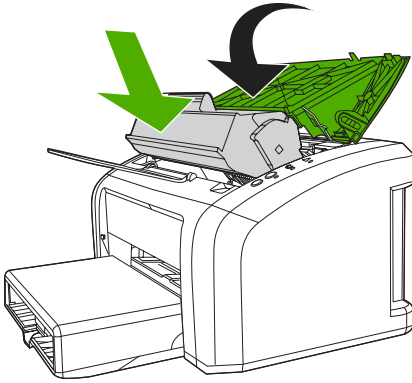

- 9 Plug in the printer, and then turn it on.

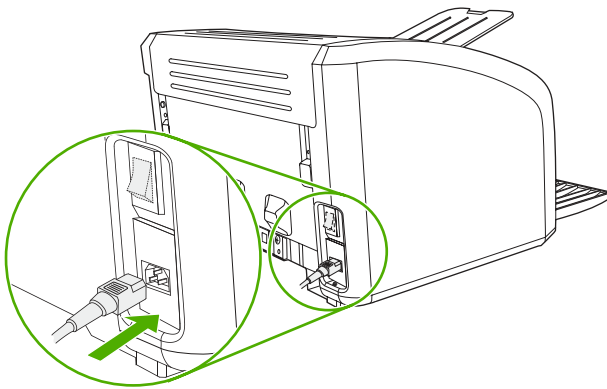

Replacing the separation pad


If the printer regularly pulls multiple sheets of media at a time, you might need to change the separation pad. Recurring feed problems might indicate that the separation pad is worn.

Normal use with good-quality media causes wear. The use of poor media might require more frequent replacement of the separation pad.




NOTE Before you change the separation pad, clean the pickup roller. See [Cleaning the pickup roller on page 34](#). To order parts, go to www.partsdirect.hp.com.


- 1 Turn off the printer, unplug and remove the power cord. Wait for the printer to cool.

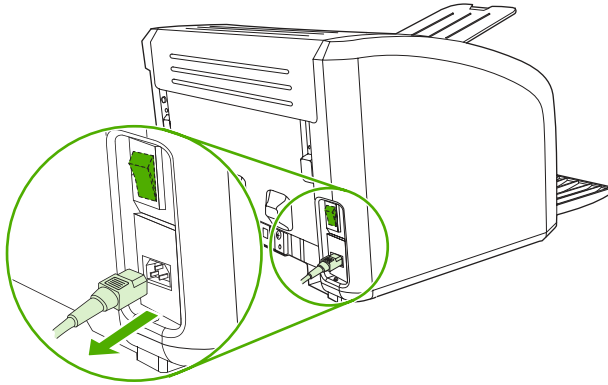


- 2 At the back of the printer, use a #2 Phillips screwdriver to unscrew the two screws that hold the separation pad in place.

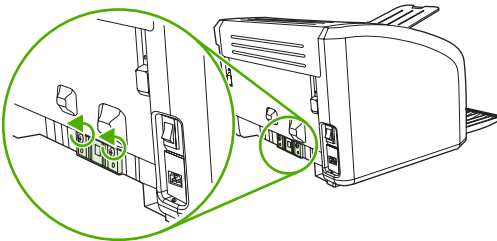


- 3 Remove the separation pad.

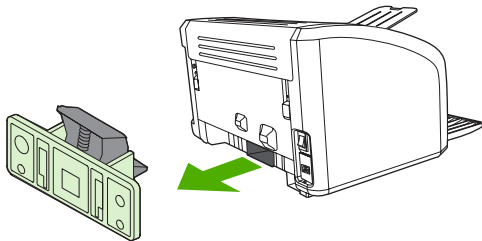

- 4 Insert the new separation pad, and screw it in place.

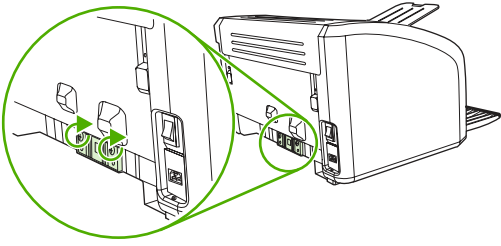

- 5 Plug the printer in, and then turn it on.

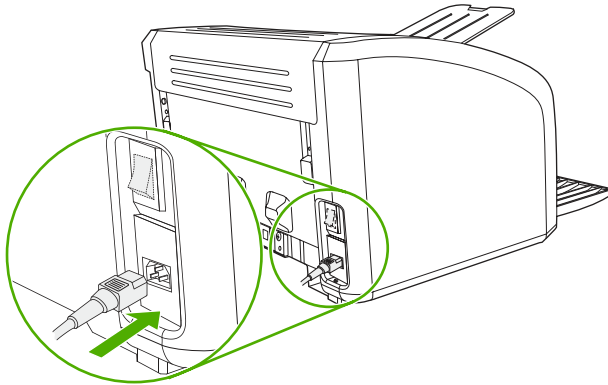

Replacing the main input tray (paper-pickup tray assembly)

If you break or damage the main input tray (also called the paper-pickup tray assembly), you can replace it. To order parts, go to www.partsdirect.hp.com.

- 1 Carefully flex the main input tray just enough to release one side.



NOTE Be careful not to break the hinge points.



Figure 5-4 Main input tray (HP LaserJet 1020 printer shown)

- 2 Remove the main input tray.

Replacing the output-bin extension (delivery-tray assembly)

If you break or damage the output-bin extension (also called the delivery-tray assembly), you can replace it. To order parts, go to www.partsdirect.hp.com.

- 1 Carefully flex the output-bin extension just enough to release the hinge pins.



NOTE Be careful not to break the hinge pins (callout 1).



Figure 5-5 Output-bin extension

- 2 Remove the output-bin extension.

Covers

Remove the covers to gain access to the internal replaceable parts.

Right-side cover

- 1 Before removing the cover, examine [Figure 5-6 Remove the right-side cover \(1 of 4; HP LJ 1020 printer shown\) on page 75](#) and note the location of tabs on the cover.

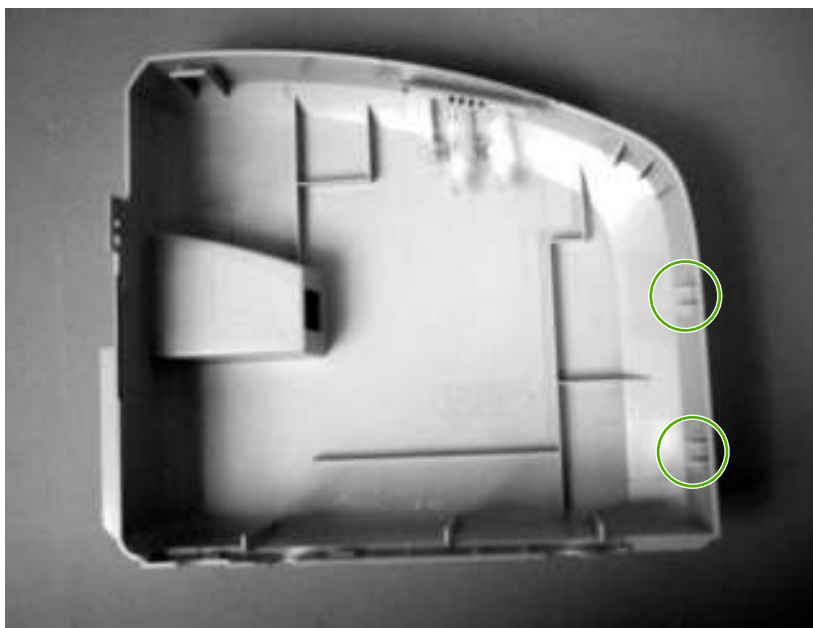


Figure 5-6 Remove the right-side cover (1 of 4; HP LJ 1020 printer shown)

- 2 Remove one screw (callout 1) and then release one tab (callout 2).

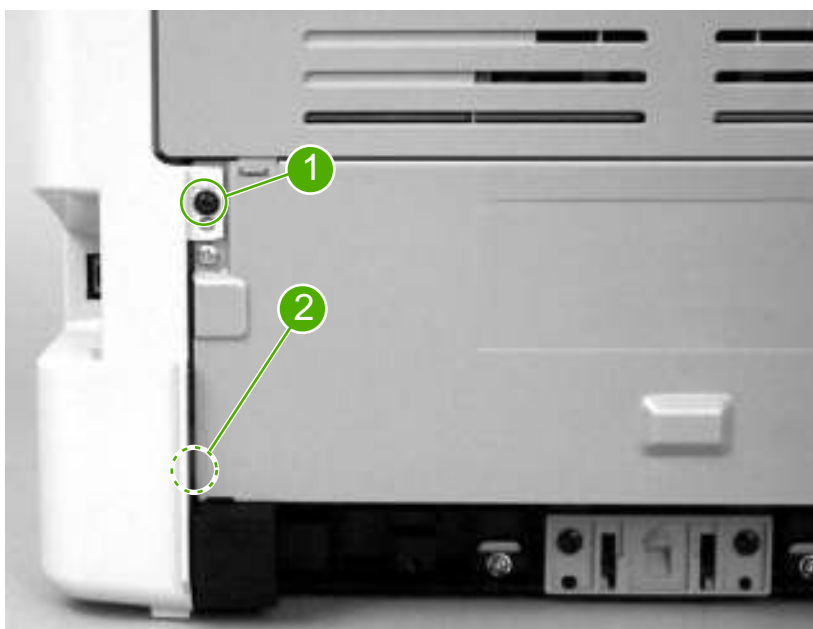


Figure 5-7 Remove the right-side cover (2 of 4; HP LJ 1020 printer shown)

- 3 Open the print-cartridge door. Grasp the cover, and carefully pry up on the cover to release one tab.



Figure 5-8 Remove the right-side cover (3 of 4; HP LJ 1020 printer shown)

- 4 Slightly rotate the back of the cover away from the product, and then slide the cover forward to remove it.



NOTE If the cover cannot be removed easily, release one additional tab that is located on the bottom of the printer near the center of the cover.



Figure 5-9 Remove the right-side cover (4 of 4; HP LJ 1020 printer shown)

Left-side cover

Removing the left-side cover is similar to removing the right-side cover. Use the steps and figures for removing the right-side cover, except start the procedure by examining the tabs on the *left side* and removing the screw on the *left side*.



NOTE If the cover cannot be removed easily, release one additional tab that is located on the bottom of the printer near the center of the cover.

Rear panel and top-cover assembly



NOTE This procedure removes the rear panel and the top-cover assembly (the assembly consists of the print-cartridge door and the fuser cover).

- 1 Remove the following assemblies.
 - Right-side cover. See [Right-side cover on page 75](#).
 - Left-side cover. See [Left-side cover on page 77](#).
- 2 Open the print-cartridge door.
- 3 Remove two screws from the top of the printer (callout 1).

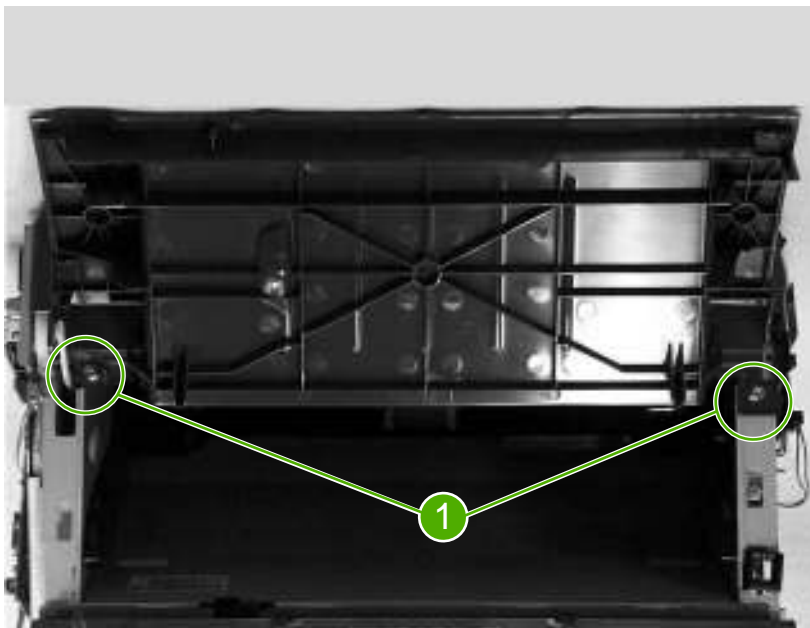


Figure 5-10 Remove the rear panel and top-cover assembly (1 of 6)

- 4 Squeeze the two retaining tabs on the plastic door-link clip to release it from the hinge arm on the print-cartridge door.

CAUTION Do not drop the clip into the gear assembly that is on the side of the printer.

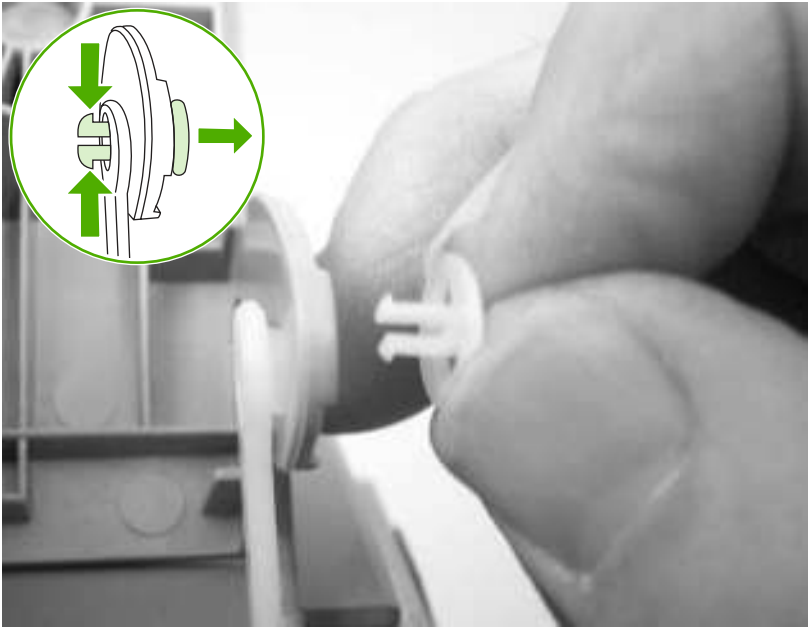


Figure 5-11 Remove the rear panel and top-cover assembly (2 of 6)



Hint Reinsert the plastic door-link clip in the hinge arm or store it with the screws to prevent losing it.



Figure 5-12 Remove the rear panel and top-cover assembly (3 of 6)

- 5 Remove one screw (callout 2) from the back of the product.

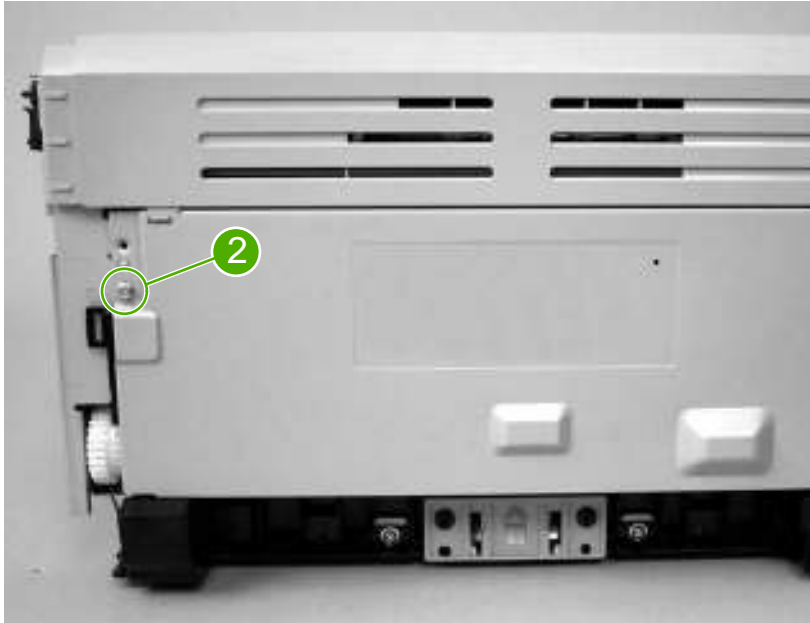


Figure 5-13 Remove the rear panel and top-cover assembly (4 of 6; HP LJ 1020 printer shown)

- 6 The top-cover assembly and metal rear-panel are interlocked with plastic tabs. Plastic tabs also secure the metal rear-panel at the bottom. Lift up the fuser cover at the top and pull it back slightly. Lift the rear panel up and off the tabs on the bottom.

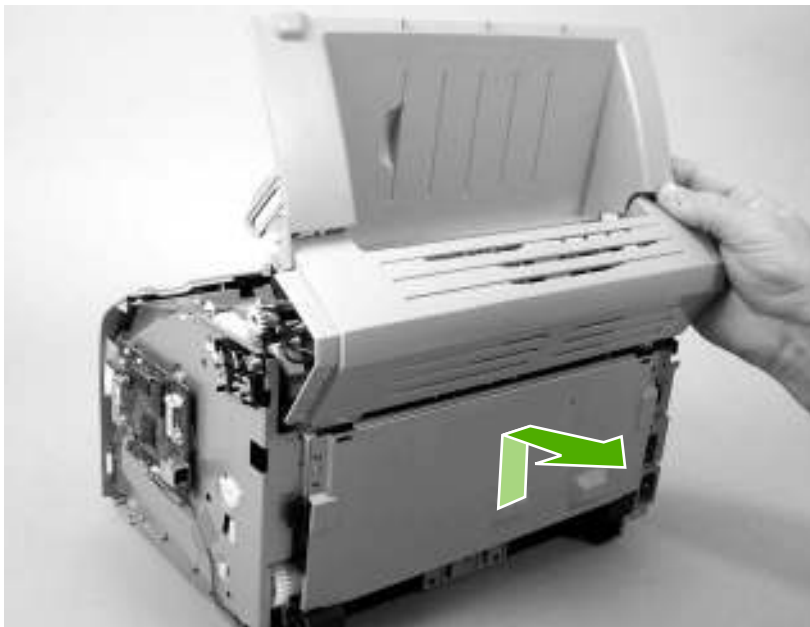


Figure 5-14 Remove the rear panel and top-cover assembly (5 of 6)

- 7 Lift up on the top-cover assembly to remove it.



Figure 5-15 Remove the rear panel and top-cover assembly (6 of 6)

Reinstalling the top-cover assembly

- 1 To reinstall the top-cover assembly, raise the two pressure-release levers.

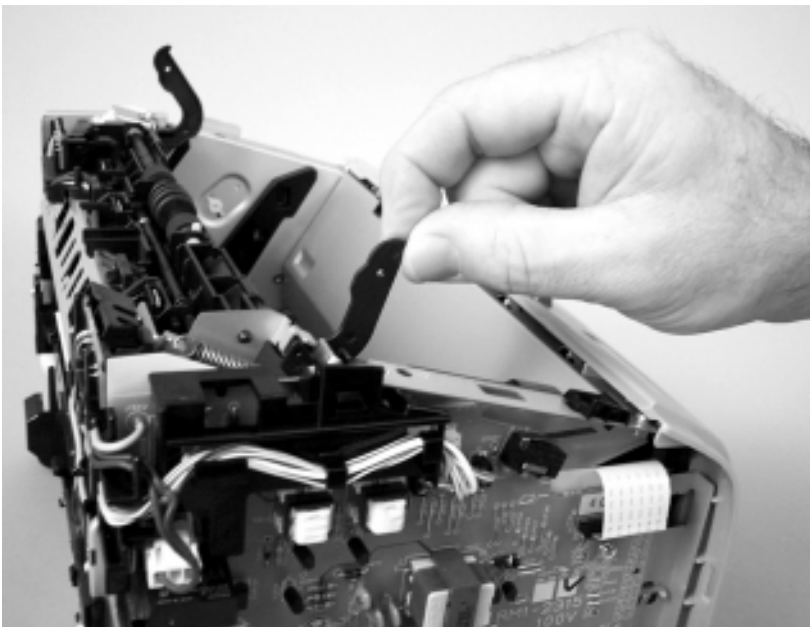


Figure 5-16 Reinstall the top-cover assembly (1 of 2)

- 2 Position the top-cover assembly over the pressure-release levers (callout 1), and lower it onto the chassis. Make sure that the pressure-release levers are inserted through the slots (callout 2) on the top-cover assembly.


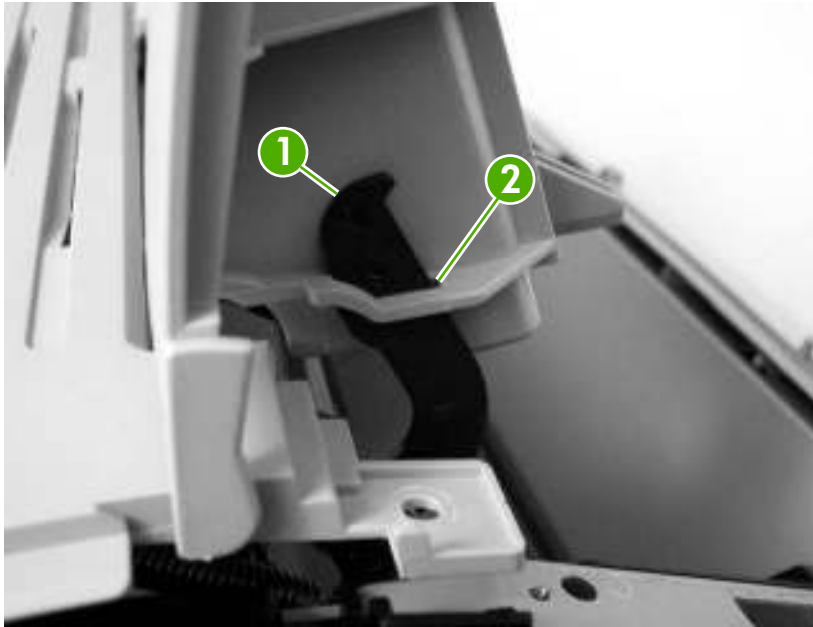


Figure 5-17 Reinstall the top-cover assembly (2 of 2)



CAUTION Make sure that the two plastic antistatic tabs are correctly positioned. The tabs must protrude into the output bin area.

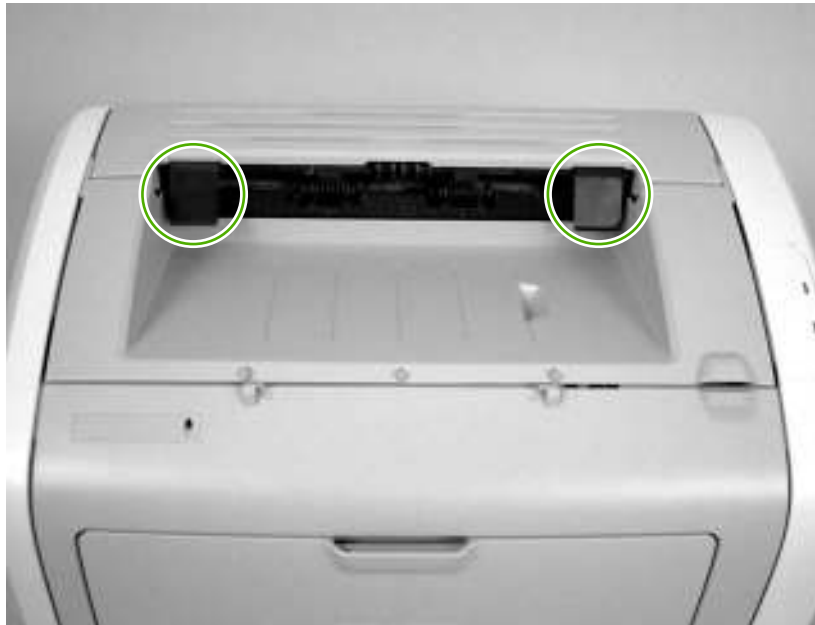

Front cover

- 1 Remove the following assemblies.
 - Right-side cover. See [Right-side cover on page 75](#).
 - Left-side cover. See [Left-side cover on page 77](#).
- 2 Before removing the cover, examine [Figure 5-18 Remove the front cover \(1 of 3\) on page 82](#) and note the locations of the plastic tabs at the top of the front cover. Open the print-cartridge door.



Figure 5-18 Remove the front cover (1 of 3)

- 3 Release the tab on the bottom right side of the front cover, and then pull the bottom of cover away from the chassis. Repeat this step for the left side of the front cover.

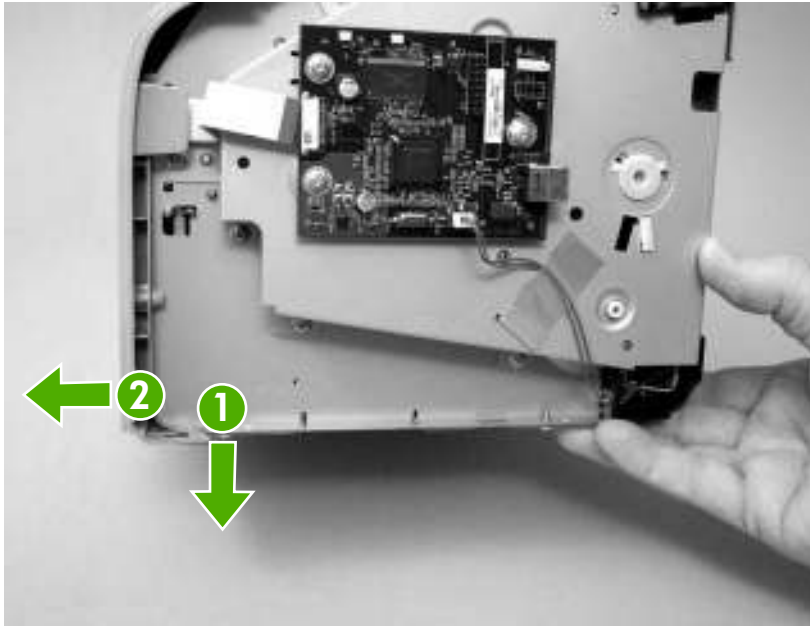


Figure 5-19 Remove the front cover (2 of 3)

- 4 With the bottom of the front cover released, pull up and back at the top of the cover while gently rocking it to release all of the tabs at the top, and remove the front cover.

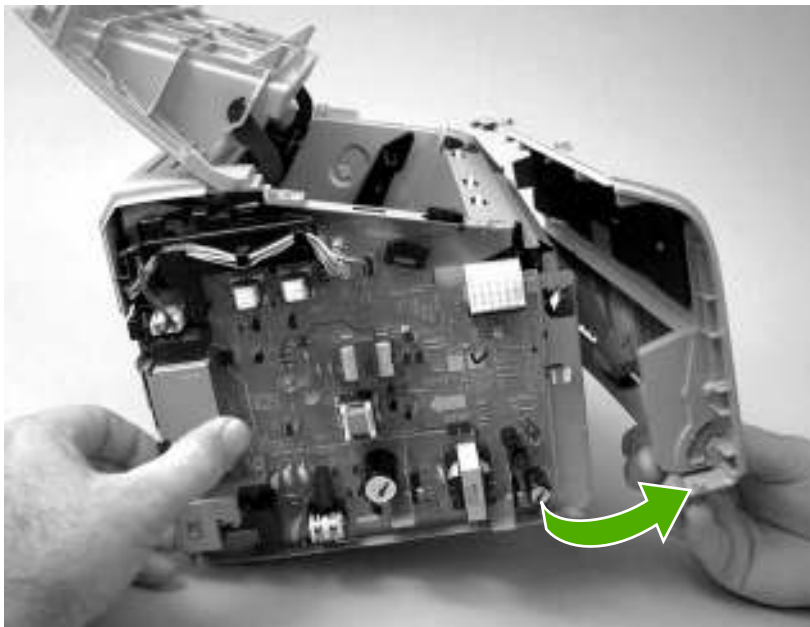


Figure 5-20 Remove the front cover (3 of 3)



Reinstallation tip When reinstalling the front cover, make sure that the tabs on the top of the cover are securely in place, and then press the bottom of the front cover into place.

Internal assemblies

When replacing internal assemblies, make sure to transfer any component parts that are not provided with the new assembly from the failed assembly to the new assembly. For example, sensor PCBs are not included with the fuser assembly or the paper-pickup assembly. The sensor PCB from the failed assembly must be transferred to the new assembly.

Transfer-roller assembly

Before proceeding, make sure it is absolutely necessary to remove the transfer roller.

CAUTION Be very careful not to break the paper guide that is removed during replacement of the transfer roller. This is not a service part. If the paper guide is broken, the entire printer must be replaced.

CAUTION Do not touch the black-sponge portion of the transfer roller. Skin oils and finger prints can cause print-quality problems.

- 1 Open the print-cartridge door, and then release the two tabs on the paper guide and rotate it up.

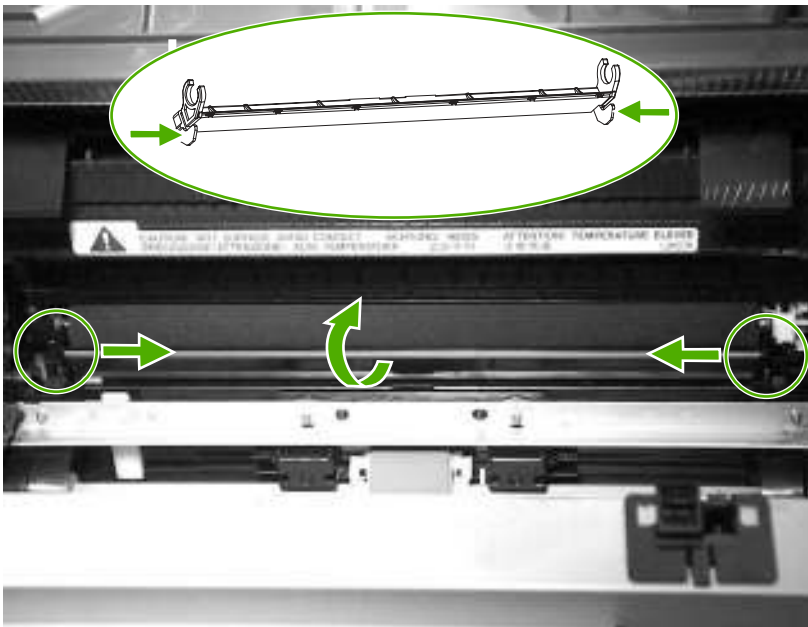


Figure 5-21 Remove the transfer roller (1 of 3)

- 2 The clamps on the paper guide fit over the bearings on the right and left ends of the transfer roller. *Do not touch the black-sponge portion of the transfer roller.* Grasp the right end of the paper guide and pull the clamp off the right bearing. Slide the paper guide slightly to the right, and the left clamp will slide off the left bearing.

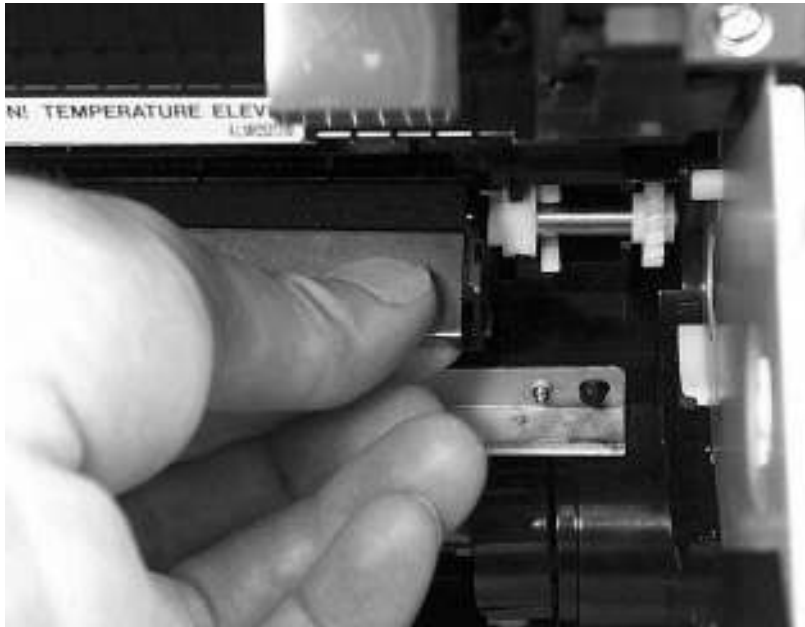


Figure 5-22 Remove the transfer roller (2 of 3)

- 3 Use needle-nose pliers or your fingers to squeeze the two small tabs on the transfer roller.



Figure 5-23 Remove the transfer roller (3 of 3)

- 4 Angle the transfer roller up while holding on to the gear on the right side. Slide the roller toward right side of the printer, and lift both the transfer roller and the transfer-roller guide out of the printer.



Reinstallation tip A small grounding spring is under the right transfer-roller bearing. When reinstalling the transfer roller, position this spring correctly under the right bearing. Reverse the removal process to install the new transfer roller. Then reinstall the paper guide by gently pressing the two ends of the guide onto the transfer-roller bearings until the clamps snap into place. Rotate the paper guide down until the tabs on both ends engage.

Engine-power assembly

1 Remove the following assemblies

- Right-side cover. See [Right-side cover on page 75](#).
- Left-side cover. See [Left-side cover on page 77](#).
- Top-cover assembly. See [Rear panel and top-cover assembly on page 77](#).
- Front cover. See [Front cover on page 82](#).

2 Disconnect six cables (callout 1) near the top of the power assembly.



CAUTION Do *not* pull directly on the wires when a connector is disconnected. *Always* pull on the plastic body of a connector to avoid damaging the connector wires.

3 Remove four screws (callout 2).

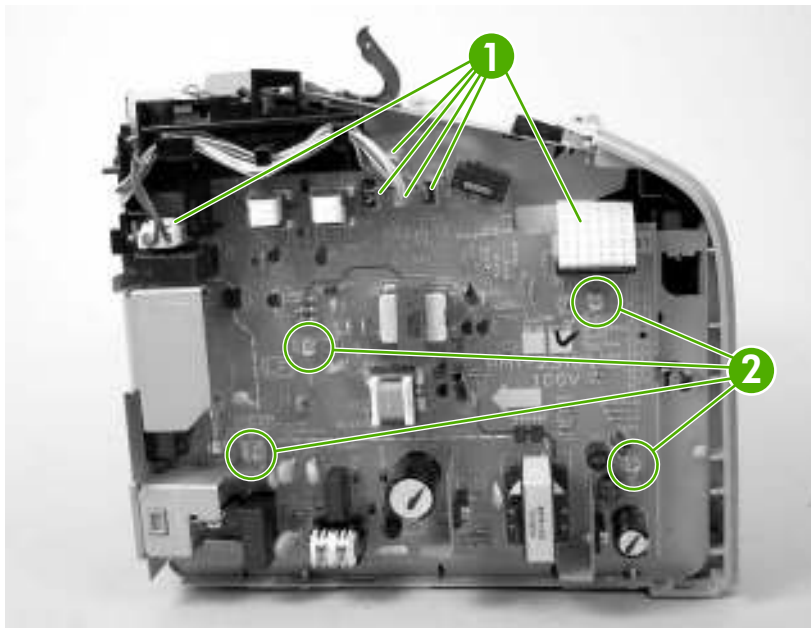


Figure 5-24 Remove the engine-power assembly (1 of 2; HP LJ 1020 printer shown)

- 4 Remove two screws from the back of the printer (callout 3), disconnect the high-voltage wire (callout 4) and then remove the engine-power assembly.



NOTE Be careful not to lose the two springs that are behind the engine-power assembly.

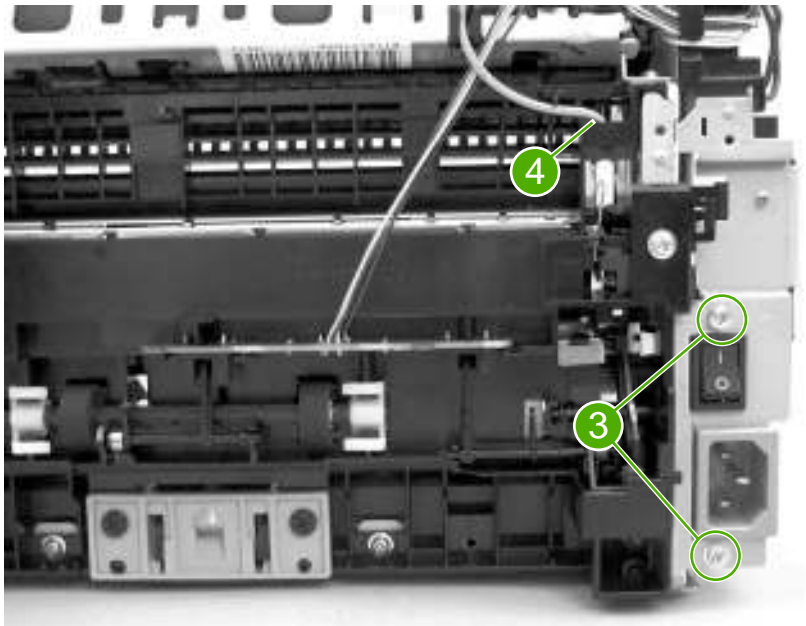


Figure 5-25 Remove the engine power assembly (2 of 2)



Reinstallation tip When reinstalling the engine-power assembly, make sure that the cable guide is correctly installed by clipping it onto the PCB at the top, back corner and onto the metal casing.

Fuser (fixing) assembly

- 1 Remove the following assemblies.
 - Right-side cover. See [Right-side cover on page 75](#).
 - Left-side cover. See [Left-side cover on page 77](#).
 - Top-cover assembly. See [Rear panel and top-cover assembly on page 77](#).
- 2 Disconnect cables, as necessary, from near the top of the engine-power assembly, and disconnect the high-voltage wire (callout 1) from the back of the printer.



CAUTION Do *not* pull directly on the wires when a connector is disconnected. *Always* pull on the plastic body of a connector to avoid damaging the connector wires.

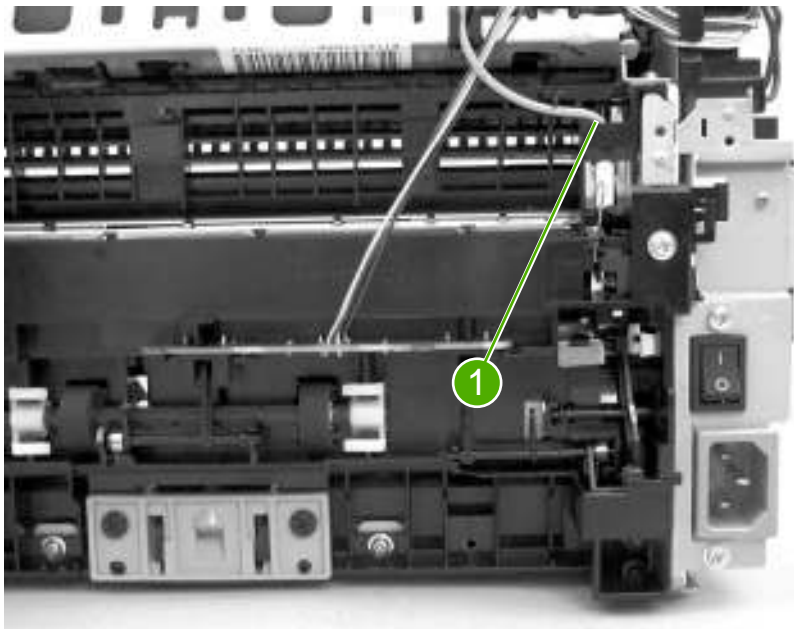


Figure 5-26 Remove the fuser (fixing) assembly (1 of 2)

- 3 Remove the wire harnesses from the plastic harness retainers.

- 4 Remove three screws (callout 2). (This figure shows the delivery-sensor PCB removed, but it is not necessary to remove this PCB in order to remove the fuser).

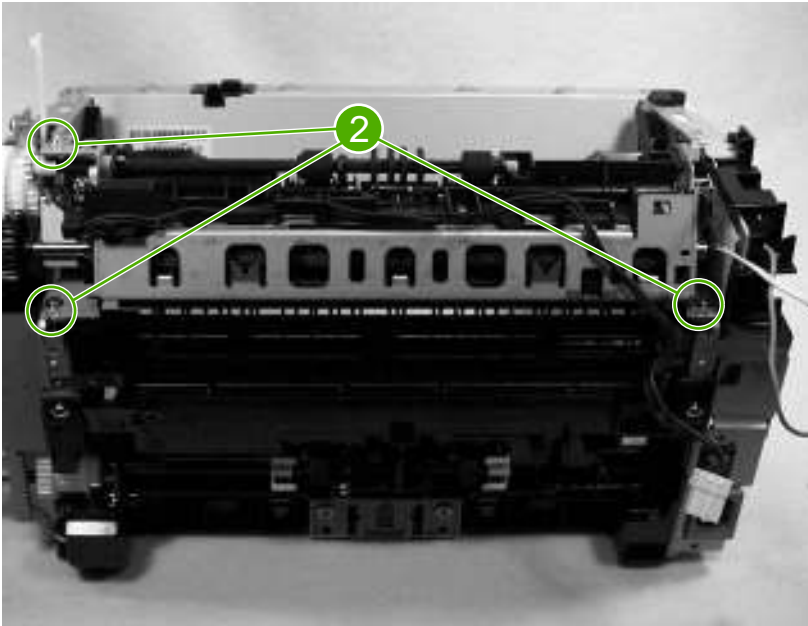


Figure 5-27 Remove the fuser (fixing) assembly (2 of 2)

- 5 Lift the end of the fuser assembly from the right side of the printer, and remove it.



Reinstallation tip When replacing the fuser assembly, be sure to transfer the delivery sensor PCB from the old fuser to the new one.



NOTE When reinstalling the fuser assembly, be careful not to break the plastic tab on the assembly.



Paper-pickup assembly

- 1 Remove the following assemblies.
 - Right-side cover. See [Right-side cover on page 75](#).
 - Left-side cover. See [Left-side cover on page 77](#).
 - Top-cover assembly. See [Rear panel and top-cover assembly on page 77](#).
 - Transfer roller. See [Transfer-roller assembly on page 84](#).
 - Fuser (fixing) assembly. See [Fuser \(fixing\) assembly on page 89](#).
- 2 Disconnect and unwind any additional wires as necessary to release the paper-pickup assembly. Unplug and unwind the wire from the solenoid to the formatter.



CAUTION Do *not* pull directly on the wires when a connector is disconnected. *A/ways* pull on the plastic body of a connector to avoid damaging the connector wires.

- 3 Remove six screws (callout 1), and then remove the paper-pickup assembly.

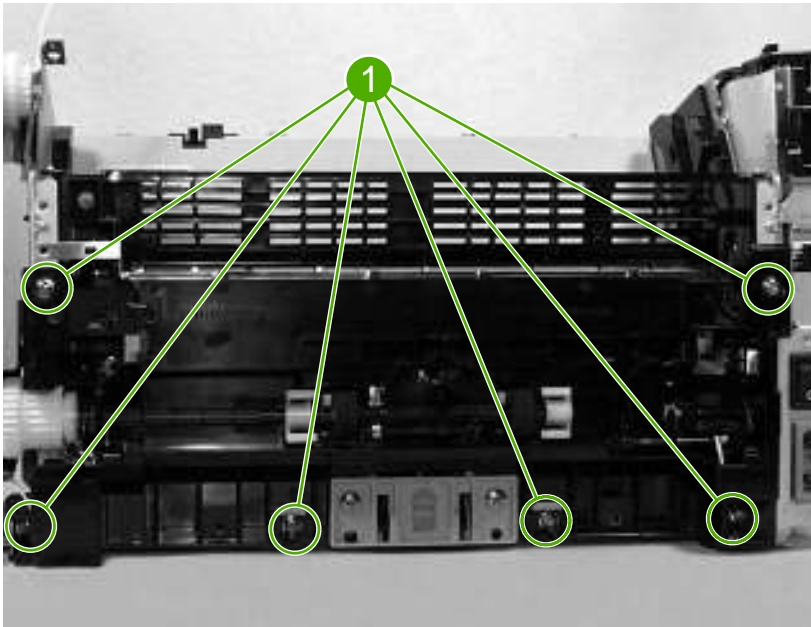


Figure 5-28 Remove the paper-pickup assembly



Reinstallation tip When replacing the paper-pickup assembly, be sure to transfer the sensor PCB and, if necessary, the separation-pad assembly to the new paper-pickup assembly.

Engine control unit (ECU) assembly

- 1 Remove the following assemblies.
 - Right-side cover. See [Right-side cover on page 75](#).
 - Left-side cover. See [Left-side cover on page 77](#).
 - Top-cover assembly. See [Rear panel and top-cover assembly on page 77](#).
 - Front cover. See [Front cover on page 82](#).
- 2 Disconnect the flat flexible (ribbon) cable (callout 1) from the formatter, which is on the right side of the product.

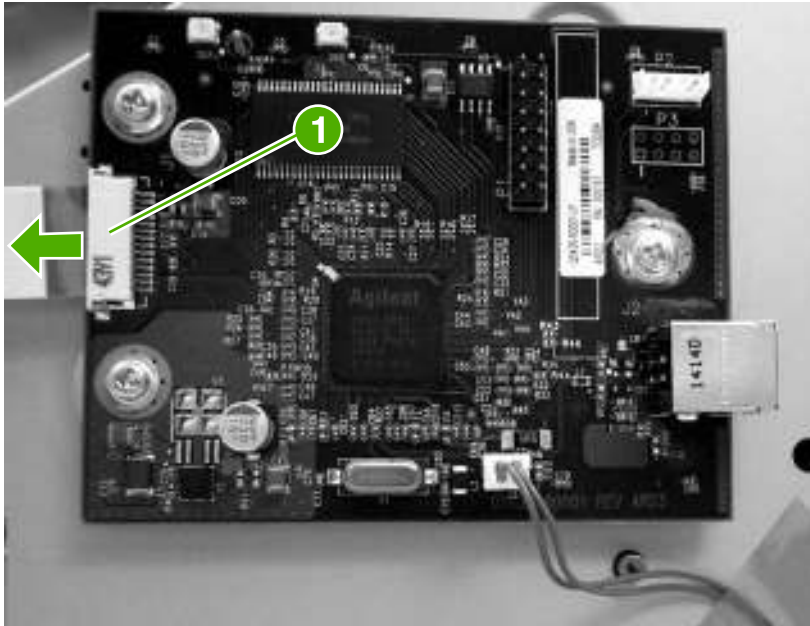


Figure 5-29 Remove the ECU assembly (1 of 6)

- 3 Disconnect the flat flexible (ribbon) cable (callout 2) from the engine-power assembly.

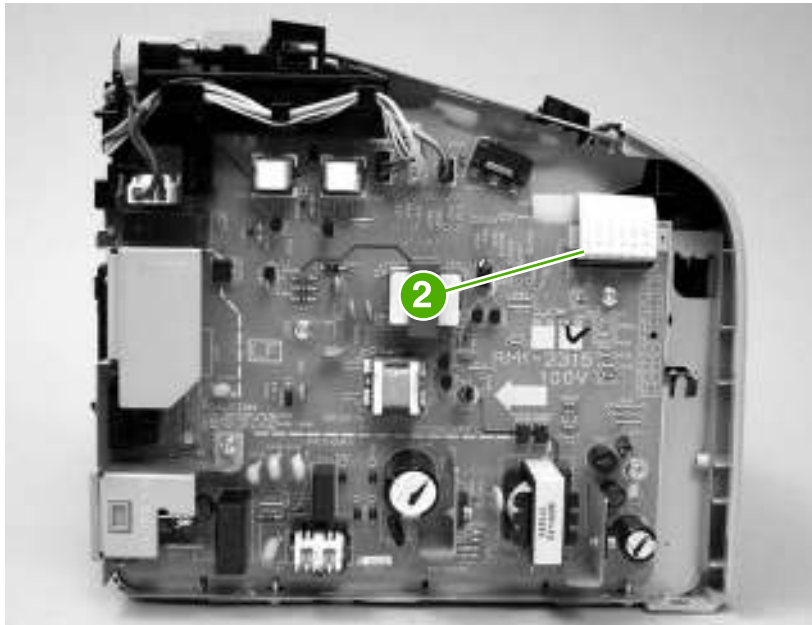


Figure 5-30 Remove the ECU assembly (2 of 6)

- 4 Remove four screws (callout 3).

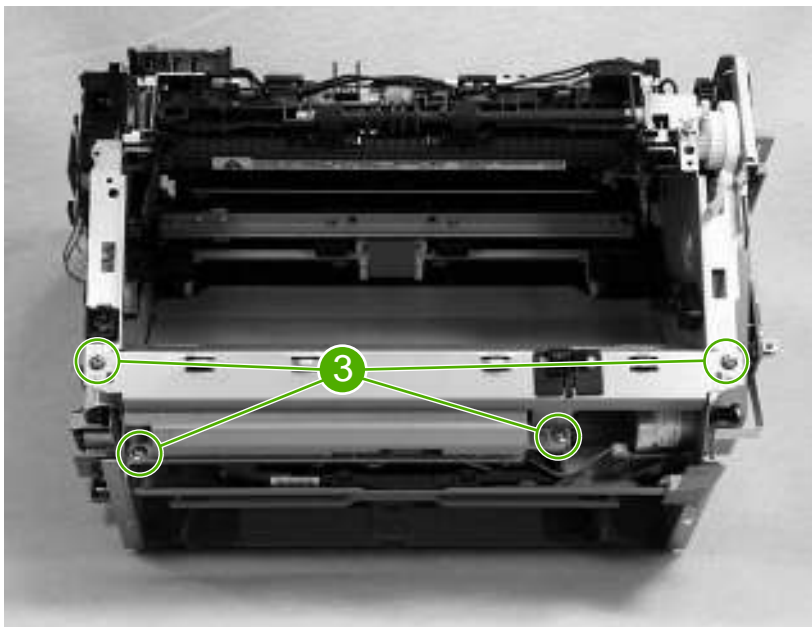


Figure 5-31 Remove the ECU assembly (3 of 6)

- 5 Lift the ECU cover up just enough to free it, and then tilt it back as far as it will go without forcing it.

- 6 Two sheet-metal hook hinges (one on each side) secure the cover. Use a screwdriver to push both hooks free, and then remove the ECU cover.

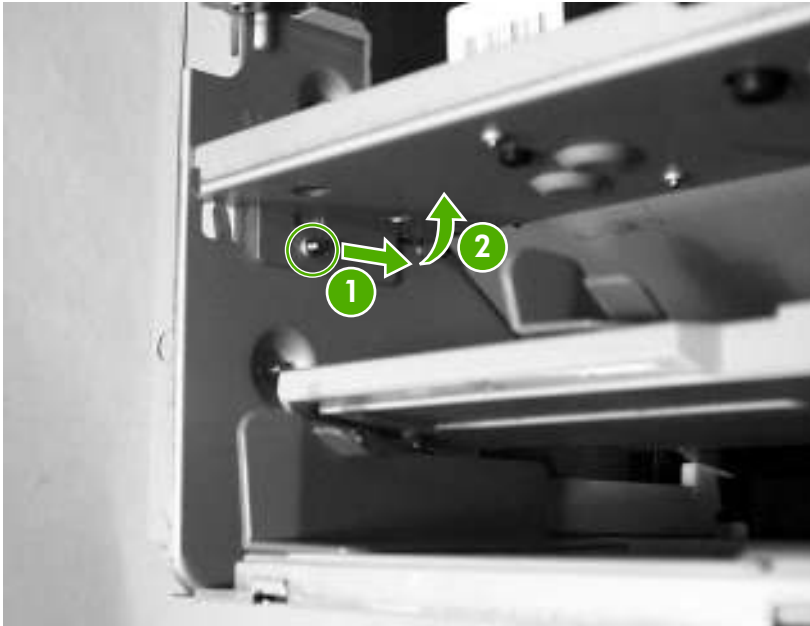


Figure 5-32 Remove the ECU assembly (4 of 6)

- 7 Release the plastic wire-retainer tab (arrow 1), and rotate the retainer up and away from the chassis (arrow 2).

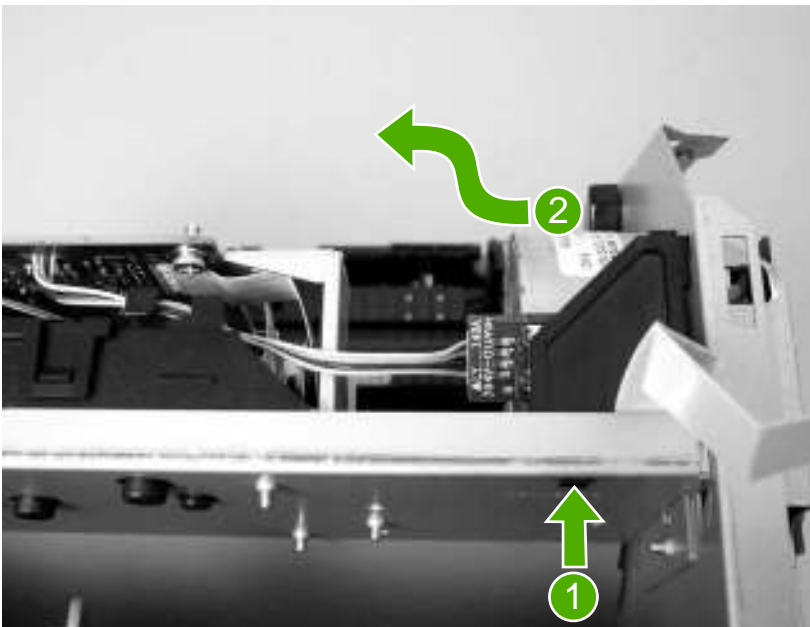


Figure 5-33 Remove the ECU assembly (5 of 6)

- 8 Disconnect one flat flexible (ribbon) cable and the connector to the step motor (callout 4). Remove two screws (callout 5). Loosen the tape (callout 6) that secures the cable to the chassis. As you remove the ECU, unplug the additional connector to the laser/scanner assembly.

CAUTION Do *not* pull directly on the wires when a connector is disconnected. *Always* pull on the plastic body of a connector to avoid damaging the connector wires.

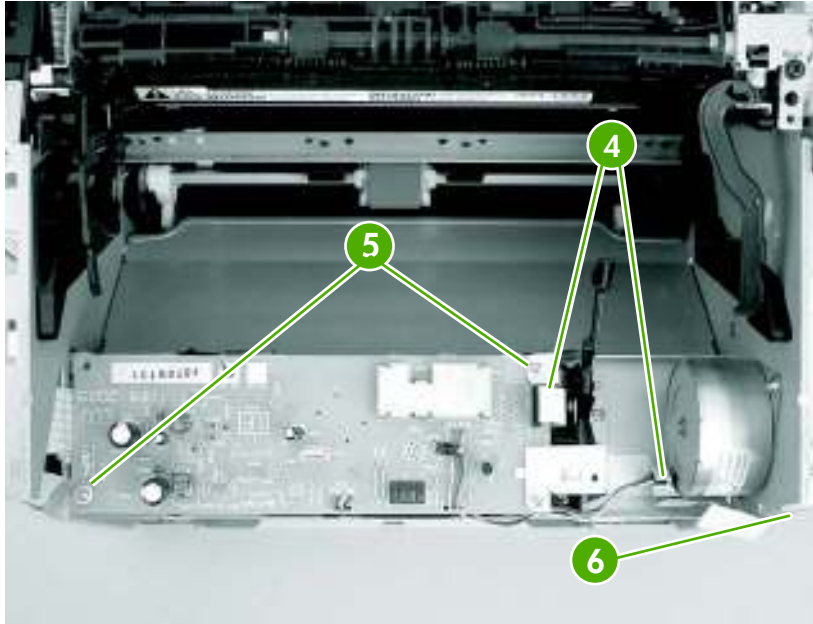


Figure 5-34 Remove the ECU assembly (6 of 6)



Reinstallation tip When reinstalling the ECU metal casing, make sure that the laser/scanner shutter lever is inserted correctly through the plastic guide.

Laser/scanner assembly

- 1 Remove the following assemblies.
 - Right-side cover. See [Right-side cover on page 75](#).
 - Left-side cover. See [Left-side cover on page 77](#).
 - Top-cover assembly. See [Rear panel and top-cover assembly on page 77](#).
 - Front-cover. See [Front cover on page 82](#).
 - Engine-control unit assembly. See [Engine control unit \(ECU\) assembly on page 92](#).
- 2 Remove four screws (callout 1) and then remove the laser/scanner assembly.

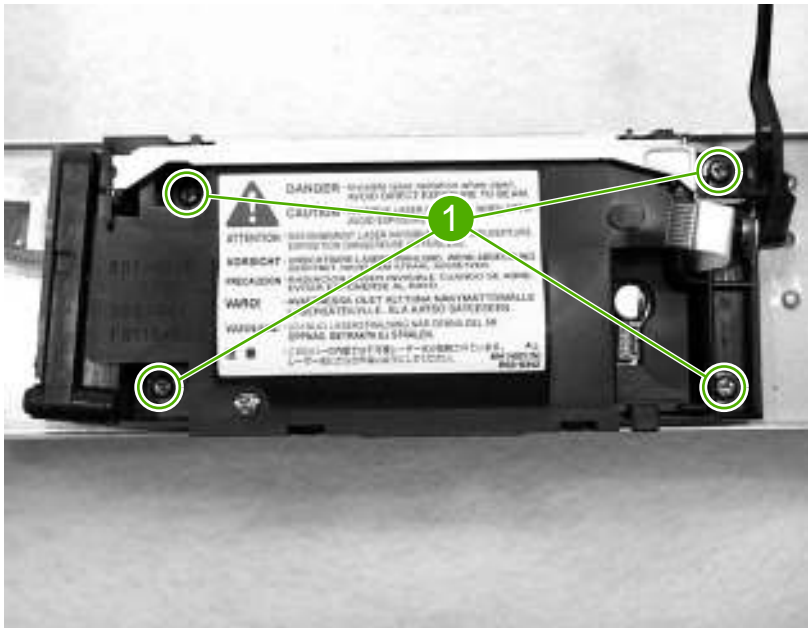


Figure 5-35 Remove the laser/scanner assembly



Reinstallation tip When replacing the laser/scanner assembly, be sure to transfer the laser shutter arm from the old assembly to the new one.

6 Troubleshooting

This chapter describes how to isolate and resolve printer problems, print-quality problems, and media problems. Troubleshooting details are provided to resolve problems or to isolate replaceable parts.

- [Basic troubleshooting](#)
- [Control-panel power-on functions \(HP LaserJet 1010 series printers\)](#)
- [Control-panel pages \(HP LaserJet 1010 series printers only\)](#)
- [Control-panel lights \(HP LaserJet 1010 series printers\)](#)
- [Control-panel lights \(HP LaserJet 1020 printer\)](#)
- [Jams](#)
- [Print-quality troubleshooting](#)
- [Solving paper-feed problems](#)
- [Functional checks](#)
- [Troubleshooting tools](#)
- [Solenoid, sensors, switches, and motor](#)

Basic troubleshooting

Troubleshooting checklist

Table 6-1 Basic troubleshooting

Did the printer turn on?

Cause	Solution
No power is available because the power source, cable, or switch failed.	<ol style="list-style-type: none">1 Verify that the product is plugged in. Make sure that the printer is plugged directly into a working wall receptacle.2 Verify that the power cable is functional and that the power switch is on.3 If these conditions are correct, replace the engine power assembly.
The printer motor does not rotate.	<ol style="list-style-type: none">1 Make sure that the printer is plugged directly into a working wall receptacle.2 Verify that the print-cartridge door is closed.3 Verify that the print path is clear. If it is, verify that the print-path paper-sensor arms are clean and functional.4 Verify that the cable from the ECU to the motor is connected.5 If these conditions are correct, replace the ECU. See Engine control unit (ECU) assembly on page 92.6 If, after replacing the ECU, the printer motor still does not rotate, replace the engine-power assembly. See Engine-power assembly on page 87.7 If, after replacing the ECU and engine-power assembly, the printer motor still does not rotate, replace the printer.

The motor rotates, but the lights are not on.

Is the product ready?

Cause	Solution
The formatter is damaged or has a loose connection.	Verify that the formatter cables are connected correctly. If all cables are undamaged and seated correctly but the problem persists, replace the printer.

Print a demo page by pressing the Go button (HP LJ 1010 series only) when the printer is idle.

Does the demo page print?

Cause	Solution
-------	----------

Table 6-1 Basic troubleshooting (continued)

Print a demo page by pressing the Go button (HP LJ 1010 series only) when the printer is idle.

Does the demo page print?

Cause	Solution
The media does not move smoothly through the paper path.	If the media is consistently jamming and the paper path is clear, replace either the paper-pickup assembly or the fuser, depending on where it is jamming.
Poor print quality is evident.	See Print-quality troubleshooting on page 111 .

Is the software installed correctly?

Cause	Solution
The software is not installed correctly, or an error occurred during software installation.	Uninstall and then reinstall the product software. Make sure that you use the correct installation procedure and the correct port setting.

Connect the USB cable (or the parallel cable, on the HP LaserJet 1015) to the printer and the computer. Print a test page from the Printer Properties dialog box or print from a software program like Notepad.

Does the product print from the computer?

Cause	Solution
The cable is not connected correctly.	Reconnect the cable.
An incorrect driver is selected.	Select the correct driver.
Other devices are connected to the parallel port.	Disconnect the other devices and try again to print.
An LPT port driver problem exists in Microsoft® Windows®.	Correct or reset the computer port settings.

Control-panel power-on functions (HP LaserJet 1010 series printers)

Turning on the printer while pressing the **Go** button for varying amounts of time provides important printer functionality for resetting the printer, resetting NVRAM, and performing self-tests. Use the following procedure to initiate a power-on function, see [on page 100](#) for the specific time ranges for the power-on functions.

- 1 Turn off the printer.
- 2 Press and hold the **Go** button.
- 3 Turn the printer on again while holding the **Go** button for the amount of time specified in [Table 6-2 Power-on functions: time ranges \(HP LJ 1010 series printers only\) on page 100](#) for the function that you want to complete.
- 4 Release the **Go** button.



NOTE Make sure that the lights indicate the function when you release the **Go** button. If the light status indicates the wrong function when you release the **Go** button, restart the power-on procedure.

Table 6-2 Power-on functions: time ranges (HP LJ 1010 series printers only)

Power-on function	Time range (seconds)	Light status	Results and notes
Cold reset	Release Go 10 to 20 seconds after power-up.	ATTENTION: on READY: off Go: off	The lights begin cycling from front to back. The cold-reset process runs until completion, and then the printer enters the Ready state.
Continuous self-test	Release Go 20 to 30 seconds after power-up.	ATTENTION: on READY: on Go: off	The Ready light blinks, indicating that the device is in the continuous self-test mode. To terminate the continuous self-test, press the Go button.
NVRAM initialization	Release Go 30 to 40 seconds after power-up.	ATTENTION: on READY: on Go: on	The lights begin cycling from front to back. The NVMEM initialization process runs until completion, and then the printer enters the Ready state.
Error report	Release Go 40 to 50 seconds after power-up.	ATTENTION: off READY: on Go: on	The printer produces an error report that shows the most recent error.

Control-panel pages (HP LaserJet 1010 series printers only)

When the printer is in the Ready state, pressing the **Go** button for varying amounts of time produces important printer reports. Use the following procedure to initiate the reports, and see [Table 6-3 Control-panel pages: time ranges \(HP LJ 1010 series printers only\) on page 101](#) for the specific time ranges for each report.

- 1 Ensure that only the **READY** light is on.
- 2 Press and hold the **Go** button.
- 3 Release the **Go** button after the amount of time shown in [Table 6-3 Control-panel pages: time ranges \(HP LJ 1010 series printers only\) on page 101](#) for the report you want.

Table 6-3 Control-panel pages: time ranges (HP LJ 1010 series printers only)

Control-panel page	Time range (seconds)	Light status	Results and notes
Demo Page	Release Go after 0 to 4 seconds .	ATTENTION: off READY: blinking Go: off	A demo page prints.
Configuration Report	Release Go after 5 to 9 seconds .	ATTENTION: off READY: off Go: on	A configuration report prints.
Cleaning Page	Release Go after 10 seconds .	ATTENTION: on READY: on Go: on	The printer completes a cleaning cycle by using the media that is loaded in the printer. Use a transparency for the best results.

Control-panel lights (HP LaserJet 1010 series printers)

The printer indicates status and errors through patterns of the **Go**, **READY**, and **ATTENTION** lights. If any lights are blinking, the error can usually be resolved.

- 1 If the error pattern occurs when printing, try pressing the **Go** button to continue.
- 2 Make sure that the print cartridge is installed correctly and the print-cartridge door is closed.
- 3 Turn the printer power off and then on again.

Control-panel light patterns (HP LJ 1010 series printers)

The lights on the printer, from back to front, are the **Go**, **READY**, and **ATTENTION** lights. Each light can be on solid or blinking. When the three blink in sequence, the activity is called “cycling.” In this document, the light status is represented as follows:

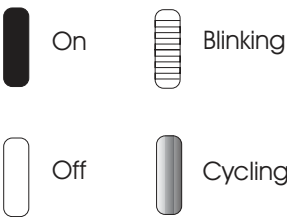


Figure 6-1 Control-panel-lights legend

Table 6-4 Control-panel light patterns (HP LJ 1010 series printers)










Printer status	Lights	Description
Initialization/startup	 Go	During Initialization/startup, the lights cycle one after another in a front-to-back pattern (the "landing lights" pattern). Pressing buttons has no effect when this is the printer status.
	 Ready	
	 Attention	
Reconfig initialization	 Go	When a power-on function is activated (for example, during a cold reset or NVRAM initialization) the lights cycle as in the startup state. Pressing buttons has no effect when this is the printer status.
	 Ready	
	 Attention	
Ready (The printer is ready, with no job activity.)	 Go	In the Ready state, the READY light is on and the Go and ATTENTION lights are off. In this state, the printer has no errors and is ready to receive data. Pressing the Go button prints a demo page.
	 Ready	
	 Attention	

Table 6-4 Control-panel light patterns (HP LJ 1010 series printers) (continued)










Printer status	Lights	Description
Processing data (The printer is processing or receiving data.)	 Go  Ready  Attention	During data processing, the READY light is blinking and the Go and ATTENTION lights are off. Pressing the Go button cancels the current job without printing another page. The printer returns to the Ready state after the job has been canceled.
Job cancellation	 Go  Ready  Attention	During job-cancellation, all of the lights cycle. Pressing the Go button has no effect. After the job-cancel process is complete, the printer returns to the Ready state.
Continuable error	 Go  Ready  Attention	<p>When a continuable error exists, the Go light is on, the READY light is off, and the ATTENTION light is blinking.</p> <p>Press the Go button to attempt to recover from the error and continue printing. If the printer recovers from the error, it will start to process data and will complete the job.</p> <p>If the recovery fails, the device will return to the continuable-error state. The following actions and events cause continuable errors:</p> <ul style="list-style-type: none"> ■ Manual feeding ■ Out of paper for the specified tray ■ General continuable error ■ Memory overflow (error 20) or memory full (PCL only) ■ Temporary engine error (41.x errors) ■ I/O error (22 error) / buffer flow error (only with parallel connections) ■ I/O data error (40 error) (bad connection) (only with parallel connections) ■ Memory configuration error ■ Personality/job-related error ■ Fuser high temperature (50.011 error)

Table 6-4 Control-panel light patterns (HP LJ 1010 series printers) (continued)















Printer status	Lights	Description
		 <p>NOTE The LJ 1010 series printers do not have paper-out sensors. When the printer enters a continuable error state because it is out of paper, the user needs to reload paper and press the Go button to continue. The lights provide no secondary error information.</p>
Attention state	 Go  Ready  Attention	<p>In the Attention state, the ATTENTION light is blinking and the Go and READY lights are off. The following conditions create the attention state:</p> <ul style="list-style-type: none">■ A tray is empty.■ A door is open.■ The print cartridge is missing.■ A jam exists, or a tray has misfeed. <p>Press the Go button to attempt to reset the printer after a jam is cleared. Pressing the Go button has no effect in the other error cases. You might need to clear the error manually and then press the Go button or close the top cover. If the error persists, the printer will return to the attention state.</p>  <p>NOTE The LJ 1010 series printers does not have paper-out sensors. When the printer is in an Attention state because the input tray is empty, the user must reload media and then press the Go button.</p>
Fatal error	 Go  Ready  Attention	<p>All three LEDs are on continuously in the fatal-error state. Press the Go button to see the secondary error information for the fatal error. When you release the button the printer returns to the initial Fatal-error state.</p>

Table 6-4 Control-panel light patterns (HP LJ 1010 series printers) (continued)

Printer status	Lights	Description
Cleaning page	 Go  Ready  Attention	Use the HP Toolbox to initiate the cleaning function. Pressing the Go button has no effect during the cleaning mode.
Sleep mode	 Go  Ready  Attention	From the customer's perspective, sleep mode is the same as Ready mode.

Fatal errors (HP LJ 1010 series printers)

If all of the printer lights are on (solid) and you cannot resolve the error by turning the printer off and on, then a fatal error has occurred. Two errors can be identified: failed communication between the formatter and the engine, and a failed fuser. If neither of these is identified by using the following procedure, replace the printer.

- 1 Press and hold the **Go** button. The printer shows a secondary error pattern.
- 2 If the **ATTENTION** light illuminates as the secondary error pattern, the formatter and engine are not communicating.
 - Check the ribbon cable between the formatter and ECU, and check all other connections.
 - If the error persists, replace the ECU.
 - If the error persists, replace the printer.
- 3 If the **Go** and **READY** lights illuminate as the secondary error pattern, the fuser (fixing assembly) has failed and must be replaced.

Control-panel lights (HP LaserJet 1020 printer)

The **ATTENTION** and **READY** lights indicate printer status and errors.

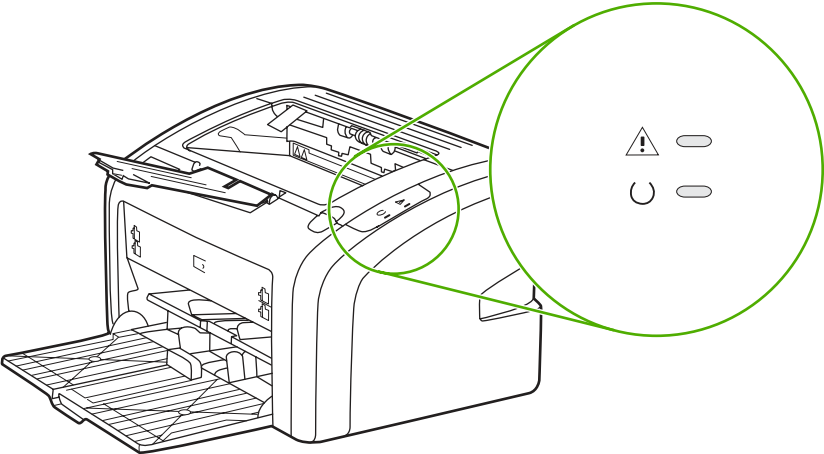


Figure 6-2 Control-panel lights (HP LJ 1020 printer)

Status-light patterns




-  Off
-  On
-  Blinking

Figure 6-3 Control-panel-light legend (HP LJ 1020 printer)

Table 6-5 Control-panel light patterns (HP LJ 1020 printer)

















Light status	State of the printer	Action
	Ready	No action is necessary.
	The product is ready to print.	
	Processing data	Wait for the job to print.
	The product is receiving of processing data.	
 	Cleaning mode A cleaning page is printing.	Wait until the cleaning page has finished and the printer is in the Ready state. This could take up to two minutes.

Table 6-5 Control-panel light patterns (HP LJ 1020 printer) (continued)

Light status	State of the printer	Action
 	<p>Out of memory</p> <p>The printer is out of memory.</p>	<p>The page you are printing might be too complex for the printer's memory capacity. Try lowering the resolution.</p>
 	<p>Attention: door open, no print cartridge, or media jam</p> <p>The printer is in an error state that requires operator intervention.</p>	<p>Check the following:</p> <ul style="list-style-type: none"> ■ The print cartridge door must be completely closed. ■ The print cartridge is correctly installed. ■ There is no media jam.
 	<p>Printer initialization</p> <p>The printer is initializing.</p>	<p>No action is necessary.</p>
 	<p>Fatal error</p>	<p>Turn off the printer, and then unplug the printer power cord for 30 minutes. Plug the printer power cord into the power outlet, and then turn the printer on.</p> <p>If the error persists, replace the printer. See Printer exchange/parts on page 139.</p>
 	<p>Both lights are off.</p>	<p>Make sure that the power switch is in the on position.</p> <p>Make sure that the printer power cord is plugged into a active power outlet.</p> <p>Unplug both ends of the printer power cord, and then plug the power cord back into the printer and the power outlet.</p>

Jams

Clearing jams

CAUTION Do not use sharp objects, such as tweezers or needle nose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

CAUTION Always pull jammed media in the direction it would travel through the paper path. *Do not* pull jammed media against the direction of travel through the paper path to avoid damage to the printer.

To prevent damage to the printer when clearing jams, including jams in the output bin, always open the print-cartridge door and remove the print cartridge. Keep the door open and the cartridge out until the jam has been cleared. Opening the print-cartridge door and removing the print cartridge relieves tension on the printer rollers, which prevents damage to the printer and makes the removal of jammed pages easier.

Occasionally, media becomes jammed during a print job. You are notified of a media jam by an error from the software and the printer control panel lights. See [Control-panel lights \(HP LaserJet 1010 series printers\) on page 102](#) or [Control-panel lights \(HP LaserJet 1020 printer\) on page 106](#).

The following are some of the causes of media jams:

- The input trays are loaded improperly or are too full. See [Loading media on page 25](#).



NOTE When you add new media, always remove all of the media from the input tray and straighten the stack of new media. This helps prevent multiple sheets of media from feeding through the printer at one time, reducing media jams.

- The media does not meet HP specifications. See [Media specifications on page 21](#).

Typical media jam locations

- **Print cartridge area:** See [Removing a jammed page on page 43](#).
- **Input tray area:** If the page is still sticking out of the input tray, gently try to remove it from the input tray without tearing the page. If you feel resistance, see [Removing a jammed page on page 43](#).
- **Output path:** If the page is sticking out of the output bin, see [Removing a jammed page on page 43](#).



NOTE There might be loose toner in the printer after a media jam. This toner clears up after a few sheets are printed.

Removing a jammed page

Use the procedures in this section to remove a jam.



CAUTION Media jams might result in loose toner on the page. If you get any toner on your clothes, wash them in cold water. *Hot water will permanently set the toner into the fabric.*


CAUTION To prevent damage to the printer when clearing jams, including jams in the output bin, always open the print cartridge door and remove the print cartridge.

To prevent damage to the print cartridge, minimize its exposure to direct light. Cover the print cartridge with a sheet of paper.



NOTE The following illustrations show the HP LaserJet 1020 printer. The same procedure is used to remove a jam in the HP LaserJet 1010 series printers.

- 1 Open the print cartridge door, and remove the print cartridge.

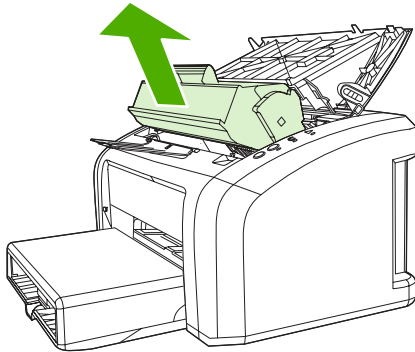


- 2 Grasp the middle edge of the side of the media that is most visible, and carefully pull it free from the printer.




CAUTION Do not use sharp objects, such as tweezers or needle nose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

CAUTION Always pull jammed media in the direction it would travel through the paper path. *Do not* forcefully pull jammed media against the direction of travel through the paper path to avoid damage to the printer.

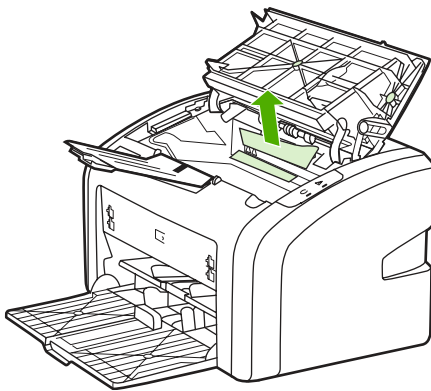

- 3 When you have removed the jammed media, replace the print cartridge, and close the print cartridge door.

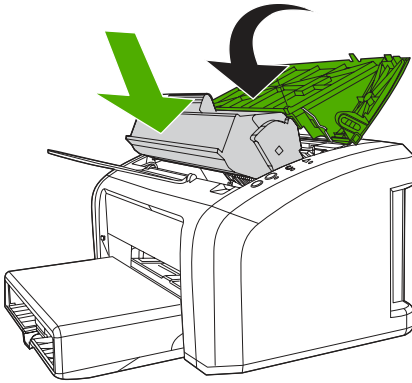

After clearing a media jam, you might need to turn the printer off then on again.



NOTE When you add new media, remove all of the media from the input tray and straighten the stack of new media.

Print-quality troubleshooting

Print-cartridge problems

Checking the print cartridge

Image-formation defects are frequently the result of problems in the print cartridge. If there is any doubt, always replace the print cartridge before troubleshooting image defects.



Hint If the transfer roller was recently replaced, print-quality problems might be the result of skin oils on the black-sponge portion of the transfer roller. *Do not* touch the black-sponge portion of the transfer roller when replacing it.

Use the following checklist to make sure that the print cartridge is still operable.

- Make sure that the print cartridge is installed properly and the shipping tape is removed.
- Check the print cartridge to see if it has been disassembled or refilled.
- Inspect the print cartridge to see if toner is leaking through worn seals.
- Check the surface of the photosensitive drum in the cartridge to see if it has been damaged or scratched. Touching the drum contaminates the photosensitive surface and can cause spotting and image defects.
- Blurred areas on printed pages indicate that the photosensitive drum in the cartridge has been overexposed to light. Because overexposure to light causes permanent damage to the photosensitive drum, the cartridge should be replaced.

To redistribute toner in the print cartridge

Before installing a new print cartridge or when toner begins to run low, redistribute the toner by rocking the cartridge back and forth five or six times.

Solving print-quality problems

Use the following tables to help solve problems with printed pages.

If the problem occurs when printing, see [Solving paper-feed problems on page 122](#).

Table 6-6 Solving print-quality problems


No page is produced.	
Cause	Solution
The product is not plugged in or power switch is off.	Make sure that the product is plugged into a live wall outlet or power strip and that the on/off switch is in the on position.
The printer is registering a jam.	Check the lights. If the ATTENTION light is flashing, the printer might be jammed. Clear the jam. For the HP LJ 1010 series, press the Go button to clear the jam.
The computer cable is loose.	Make sure that the cable between the product and the computer is securely connected.

Table 6-6 Solving print-quality problems (continued)

Output pages are blank.

Cause	Solution
The tape was not removed from the print cartridge.	Remove the print cartridge, remove the tape, and reinstall the print cartridge.
The print cartridge is out of toner.	Replace the print cartridge
The high-voltage connection between the printer and the print cartridge has been interrupted.	Perform a High-voltage-contacts check on page 127 .
The laser/scanner shutter lever is not installed correctly or is broken.	<p>If the ECU was recently replaced, make sure that the laser/scanner shutter lever was inserted correctly through the plastic guide in the sheet-metal ECU cover when the cover was reinstalled. See Engine control unit (ECU) assembly on page 92.</p> <p>If the laser/scanner shutter is broken, replace the printer. See Printer exchange/parts on page 139.</p>


Parts of the page around the edges are not printing.

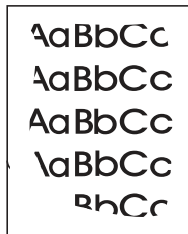

Cause	Solution
The printer cannot print all the way to the edge of the paper. The printer has minimum margins on each edge of approximately 6 mm (0.25 inch).	To make the image fit into this printable area, slightly reduce the size of the image. Open the Printer Properties dialog box, and then select Printing Preferences . Select the Effects tab and then click on the Print Document On check box in the Fit to Page area of the dialog box. If the a page size other than Letter is used, select the appropriate page size from the drop down menu. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The reduction setting is incorrect.	To make changes to the reduction settings, open the Printer Properties dialog box, and then select Printing Preferences . Select the Effects tab and then change the reduction settings in the Fit to Page area of the dialog box. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The paper-size setting is incorrect.	To make a change to the paper-size settings, open the Printer Properties dialog box, and then select Printing Preferences . Select the correct paper-size setting from the Size is drop down menu. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.

Table 6-6 Solving print-quality problems (continued)

Random toner specks appear on the printed page.

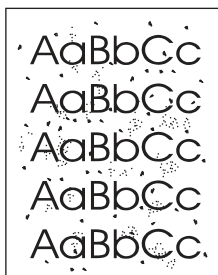

Cause	Solution
The media in use does not meet HP specifications (for example, it is too moist or too rough).	Make sure that the media meets specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .
The print path is dirty.	Clean the print path (see Cleaning the print path on page 31).


Characters are only partially printed (also referred to as dropouts).



Cause	Solution
A single sheet of paper is defective.	Try reprinting the job.
The print density needs to be adjusted.	<p>HP LJ 1010: Adjust the print density from the HP Toolbox (on the Settings tab) or open the Printer Properties dialog box, and then select the Configure tab. Use the slide bar in the Print Density area of the dialog box to change the print density setting. Click OK to close the Printer Properties dialog box.</p> <p>HP LJ 1020: Open the Printer Properties dialog box, and then select the Configure tab. Use the slide bar in the Print Density area of the dialog box to change the print density setting. Click OK to close the Printer Properties dialog box.</p>
The moisture content of the paper is inconsistent, or the paper has moist or wet spots on the surface.	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .
The paper was damaged by inconsistent manufacturing processes.	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .
Economode is enabled.	Open the Printer Properties dialog box, and then select Printing Preferences . Select the Finishing tab, and then clear the EconoMode (Save Toner) check box. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The wrong type of media is selected in the Printer Preferences dialog box.	Open the Printer Properties dialog box, and then click Printing Preferences . Select the correct media type from the Type Is drop down menu. Click OK to close the Printing


Table 6-6 Solving print-quality problems (continued)

Characters are only partially printed (also referred to as dropouts).

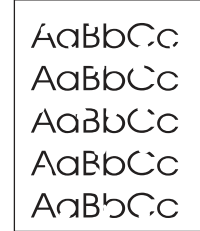

Cause	Solution
	Open the Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The print cartridge is depleted or damaged.	Replace the print cartridge.
Rarely, the fuser might be damaged.	Replace the fuser.

Vertical black lines appear on the printed page.

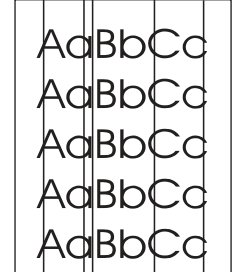

Cause	Solution
The print cartridge is depleted or damaged.	Replace the print cartridge.
Rarely, the fuser is defective.	Replace the fuser.

The printed page has a gray background.



Cause	Solution
The wrong type of media is selected in the Printer Preferences dialog box.	Open the Printer Properties dialog box, and then click Printing Preferences . Select the correct media type from the Type Is drop down menu. Click OK to close the Printing


Table 6-6 Solving print-quality problems (continued)

The printed page has a gray background.



Cause	Solution
	Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The print density is too high.	HP LJ 1010: Adjust the print density from the HP Toolbox (on the Settings tab) or open the Printer Properties dialog box, and then select the Configure tab. Use the slide bar in the Print Density area of the dialog box to change the print density setting. Click OK to close the Printer Properties dialog box. HP LJ 1020: Open the Printer Properties dialog box, and then select the Configure tab. Use the slide bar in the Print Density area of the dialog box to change the print density setting. Click OK to close the Printer Properties dialog box.
The media basis weight is too high.	Change the media to a lower basis weight.
The print path needs to be cleaned.	Clean the print path (see Cleaning the print path on page 31).
The printer is operating in humidity or temperature conditions that are not within the recommended ranges.	Move the product to a different location.
The print cartridge is worn, damaged, or has been refilled.	Replace the print cartridge.


Toner smears appear on the printed page.

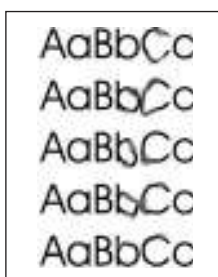

Cause	Solution
If toner smears appear on the leading edge of the media, the media guides might be dirty.	Wipe the media guides with a dry, lint free cloth.
The print path needs to be cleaned.	Clean the print path (see Cleaning the print path on page 31).
The media in use does not meet HP specifications (for example, it is too moist or too rough).	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .
The print cartridge is worn or damaged.	Replace the print cartridge.


Table 6-6 Solving print-quality problems (continued)

Toner smears appear on the printed page.

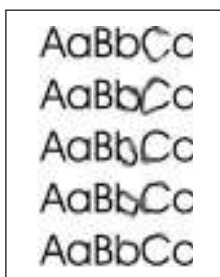

Cause	Solution
The wrong type of media is selected in the Printer Preferences dialog box.	Open the Printer Properties dialog box, and then click Printing Preferences . Select the correct media type from the Type Is drop down menu. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The fuser is damaged.	Perform the Half self-test functional check on page 124 . If the error persists, replace the fuser. If, after replacing the fuser, the error persists, replace the ECU.


The toner is loose, and it does not stay attached to the printed page.

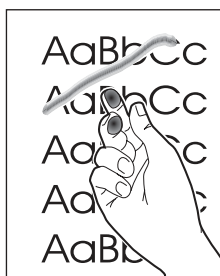

Cause	Solution
The media in use does not meet HP specifications (for example, it is too moist or too rough).	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .
The print path needs to be cleaned.	Clean the print path. See Cleaning the print path on page 31 .
The wrong type of media is selected in the Printer Preferences dialog box.	Open the Printer Properties dialog box, and then click Printing Preferences . Select the correct media type from the Type Is drop down menu. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The power strip is not working correctly or the ac power does not meet the specified requirements.	Plug the product directly into an ac outlet. Ensure that the power source is clean.
The printer is operating in humidity or temperature conditions that are not within the recommended ranges.	Move the product to a different location.
The fuser is damaged.	Perform a Half self-test functional check on page 124 . If the error persists, replace the fuser.

Table 6-6 Solving print-quality problems (continued)

The toner is loose, and it does not stay attached to the printed page.

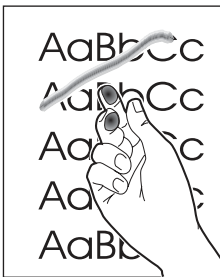

Cause	Solution
	If, after replacing the fuser, the error persists, replace the engine power assembly.


Repetitive vertical defects appear on the printed page.



Cause	Solution
The internal parts have toner on them.	If the defects occur on the back of the page, the problem will probably correct itself after a few more printed pages. Otherwise, clean the printer (see Cleaning the print path on page 31).
The wrong type of media is selected in the Printer Preferences dialog box.	Open the Printer Properties dialog box, and then click Printing Preferences . Select the correct media type from the Type Is drop down menu. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
If the repetitive mark occurs at equal distance on the page, then the print cartridge, transfer roller, paper-pickup assembly, or fuser is damaged.	Use the repetitive-image-defect ruler to identify the spacing. Check the appropriate assembly and replace it if necessary. (Repetitive-image-defect ruler on page 129)


Table 6-6 Solving print-quality problems (continued)

Characters are poorly formed and are producing hollow images.

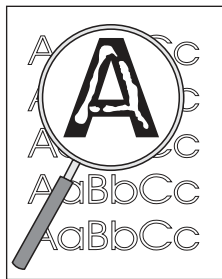

Cause	Solution
The wrong type of media is selected in the Printer Preferences dialog box.	Open the Printer Properties dialog box, and then click Printing Preferences . Select the correct media type from the Type Is drop down menu. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The media is too slick or too thick.	Try a different media. Make sure that the media meets specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .


Pages are skewed.

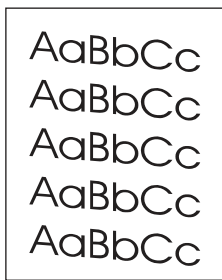

Cause	Solution
The media is loaded incorrectly.	Reload the media, and make sure that the side and rear media guides are not too tight against the media stack or too loose.
The input tray is too full.	Remove some of the sheets. The main input tray can hold up to 150-sheets of 75-g/m ² (20-lb) bond-weight paper (or fewer pages of heavier media), or a stack no higher than 25 mm (0.98 inch). The priority input tray can hold up to ten sheets of 75-g/m ² (20-lb) bond-weight paper, one sheet of heavier media, or one envelope or card.
The media in use does not meet HP specifications (for example, it is too moist or too rough).	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .


Table 6-6 Solving print-quality problems (continued)

The printed page has curls or waves.

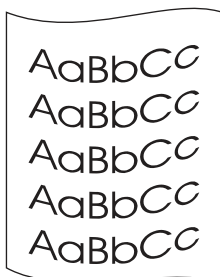

Cause	Solution
The printer is operating in humidity or temperature conditions that are not within the recommended ranges.	Move the product to a different location.
The wrong type of media is selected in the Printer Preferences dialog box.	Open the Printer Properties dialog box, and then click Printing Preferences . Select the correct media type from the Type Is drop down menu. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The media in use does not meet HP specifications (for example, it is too moist or too rough).	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .
The media was in the input tray for too long.	<ol style="list-style-type: none"> 1 Turn the stack of media over and put it back in the tray. 2 Rotate the media 180° and put it back in the tray.


Large amounts of toner are scattered around the characters.

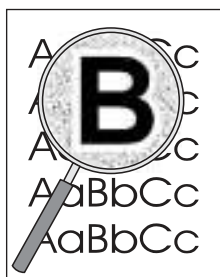

Cause	Solution
The media resistivity is too high. (This most often happens when transparencies acquire a static charge.)	<ol style="list-style-type: none"> 1 Use a different media. Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i>. 2 Turn the stack of media over and put it back in the tray. 3 Use media (particularly transparencies) that is designed for laser printers.
The printer is operating in humidity or temperature conditions that are not within the recommended ranges (often, the humidity is too low).	Move the product to a different location.

Table 6-6 Solving print-quality problems (continued)

Vertical white stripes appear.

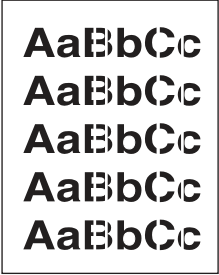	
Cause	Solution
The toner is low or poorly distributed in the print cartridge.	Gently rock the print cartridge back and forth to redistribute the toner (see the illustration on the print cartridge). Replace the print cartridge.
The media you are using does not meet HP specifications (for example, it is too moist or too rough).	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .

Printout is faded in areas.


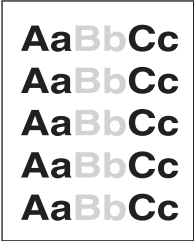
	
Cause	Solution
If the entire page is light, the print density is too light or Econmode might be turned on.	Open the Printer Properties dialog box, and then click Printer preferences . Select the Finishing tab and make sure that the EconoMode (Save Toner) check box is not selected. Select OK to close the Printer Preferences dialog box. Select the Configure tab in the Printer Properties dialog box. Use the slide bar in the Print Density area of the dialog box to change the print density setting. Click OK to close the Printer Properties dialog box.
The printer is operating in humidity or temperature conditions that are not within the recommended ranges.	Move the product to a different location. Increase airflow around the printer to prevent condensation on the laser/scanner lens.
The toner is low or poorly distributed in the print cartridge.	Gently rock the print cartridge back and forth to redistribute the toner (see the illustration on the print cartridge). Replace the print cartridge.


Table 6-6 Solving print-quality problems (continued)

Wrinkles or creases appear in the printout

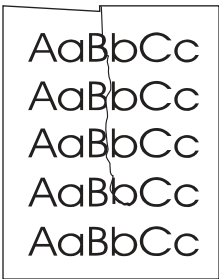


Cause	Solution
The media is not properly loaded.	Make sure the media is correctly loaded.
Damage or reused media is being used.	Do not use media that is damaged or has already been put through a copier or printer.
The media you are using does not meet HP specifications (for example, it is too moist or too rough).	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .

Droplets of water are deposited on the trailing edge

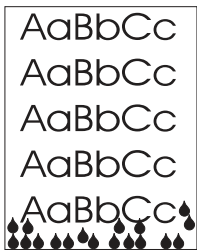

Cause	Solution
Moisture in the printer is condensing on the fuser assembly. In excessively hot and humid areas, media retains moisture.	Try moving the printer to a less humid area. Try a different media.

**NOTE** Water droplets do not damage the printer.

Solving paper-feed problems

Use the following table to solve problems related to moving paper or documents through the product.

Table 6-7 Solving paper-feed problems

Pages are coming out curled or wrinkled.

Cause	Solution
Paper curl is inherent to the laser printing processes, and occurs when paper is subjected to heat. Paper curl tends to relax as the paper cools while resting on a flat surface.	Make sure that the media meets the specifications detailed in the <i>HP LaserJet family Print Media Guide</i> .
Paper is not stored properly.	Whenever possible, store paper in its sealed ream at room temperature.
The media is too long for the printer output bin.	Use the output-bin extension.
The printer is operating in humidity or temperature conditions that are not within the recommended ranges.	Move the product to a different location.
The wrong type of media is selected in the Printer Preferences dialog box.	Open the Printer Properties dialog box, and then click Printing Preferences . Select the correct media type from the Type Is drop down menu. Click OK to close the Printing Preferences dialog box, and then click OK again to close the Printer properties dialog box.
The media you are using does not meet HP specifications (for example, it is too moist or too rough).	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .
The media was in the input tray for too long.	<ol style="list-style-type: none">1 Turn the stack of media over and put it back in the tray.2 Rotate the media 180° and put it back in the tray.

Print is misaligned on the page (skewed pages).

Cause	Solution
The media is loaded incorrectly.	Reload the media, and make sure that the side and rear media guides are not too tight against the media stack or too loose.
The input tray is too full.	Remove some of the sheets. The main input tray can hold up to 150 sheets of 75 g/m ² (20-lb) bond-weight paper (or fewer pages of heavier media), a stack no higher than 25 mm (.98 inch). The priority input tray can hold up to ten sheets of 75 g/m ² (20-lb) bond-weight paper, one sheet of heavier media, or one envelope or card.
The media you are using does not meet HP's specifications (for example, it is too moist or too rough).	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .

The printer feeds multiple sheets or jams frequently from the main input tray or priority input slot.

Cause	Solution
-------	----------

Table 6-7 Solving paper-feed problems (continued)**The printer feeds multiple sheets or jams frequently from the main input tray or priority input slot.**

Cause	Solution
The paper guides are not adjusted correctly or the paper is not far enough forward.	Slide the guides against the sides of the stack in the main input tray or the priority input slot to center the paper. Make sure that the guides are not adjusted too tightly.
The stack is not neat or not aligned well on all sides.	Remove the media, and then align stack and replace it.
The main input tray is overfilled.	Remove some of the sheets. The main input tray can hold up to 250 sheets of 75 g/m ² (20-lb) bond-weight paper (less for heavier paper) or from 20 to 30 envelopes.
The priority input slot is overfilled.	Remove media or feed single sheets. The priority input slot is designed for optimal feeding of single sheets, especially when heavier media is used. It can hold up to ten sheets of 75 g/m ² (20-lb) bond-weight paper (one sheet of heavier paper) or one envelope.
The paper was poorly cut by the manufacturer and is sticking together.	“Break” the ream of paper by curving it into an upside-down u-shape; this can effectively decrease multifeeds. Also try turning the paper around to feed the opposite end first, or use a different type of paper.
The paper does not meet HP specifications for print media.	Make sure that the media meets the specifications detailed in the <i>HP LaserJet Printer Family Print Media Guide</i> .
The output capacity was exceeded in the output bin.	Do not allow more than 125 sheets of 75 g/m ² (20-lb) bond-weight paper (less for heavier paper) to fill the paper output bin.
The pickup roller is dirty.	Clean the pickup roller.
The pickup roller is damaged.	Replace the pickup roller.
The separation pad is damaged.	Replace the separation pad.
A sensor is not operating correctly.	The chances of a sensor failing are very small. However, debris around the sensor arms can cause them to register a jam. Three sensors are in the printer: top-of-page sensor, paper-width sensor, and delivery sensor. Check them to ensure that the sensor arms can move freely. On the rare occasion of a failed sensor, replace the printer.

Functional checks

This section includes five functional checks for troubleshooting.

Half self-test functional check

The print process can be subdivided into the following stages:

- Image-formation stage (charges the drum and writes a latent image to the drum with the laser)
- Development stage (forms a toner image on the drum)
- Transfer stage (transfers the image to media)
- Cleaning stage (removes excess toner from the drum)
- Fusing stage (applies heat and pressure to make the image permanent on the media)

To perform a half self-test check

The purpose of the half self-test check is to begin the printing process and then interrupt it in the middle. Examining the printer components at that point allows you to determine which stage in the print process is malfunctioning.

- 1 **HP LaserJet 1010 series:** Press the **Go** button to print a demo (self-test) page.

HP LaserJet 1020 printer: Open the **Printer Properties** dialog box. Select **Print Test Page** to print a test page. Click **OK** to close the **HP LaserJet 1020** test page troubleshooting dialog box. Click **OK** again to close the **Printer Properties** dialog box.

- 2 Open the print-cartridge door the instant the leading edge of the paper exits the printer.
- 3 Remove the print cartridge.
- 4 Open the print cartridge drum shield to view the drum surface. If a dark and distinct toner image is present on the drum surface, then the first two functions of the electrophotographic process are functioning (image-formation and development). Any failure is occurring in the transfer or fusing stage.

To perform other checks

If no image appears on the photosensitive drum, perform these checks:

- 1 Make sure that you remove the entire length of the sealing tape from the print cartridge before you install the cartridge. If the tape is not removed, then toner cannot reach the drum.
- 2 Perform a drum-rotation functional check to ensure that the drum is rotating (see [Drum-rotation functional check on page 126](#)).
- 3 Perform a high-voltage contact check (see [High-voltage-contacts check on page 127](#)).

- 4 Check the fuser connections (callout 1) on the engine-power assembly. Also check the high voltage connection at the back side of the printer.



NOTE The following figure shows the HP LaserJet 1010 series products. The connections are located at the same place on the HP LaserJet 1020 printer.

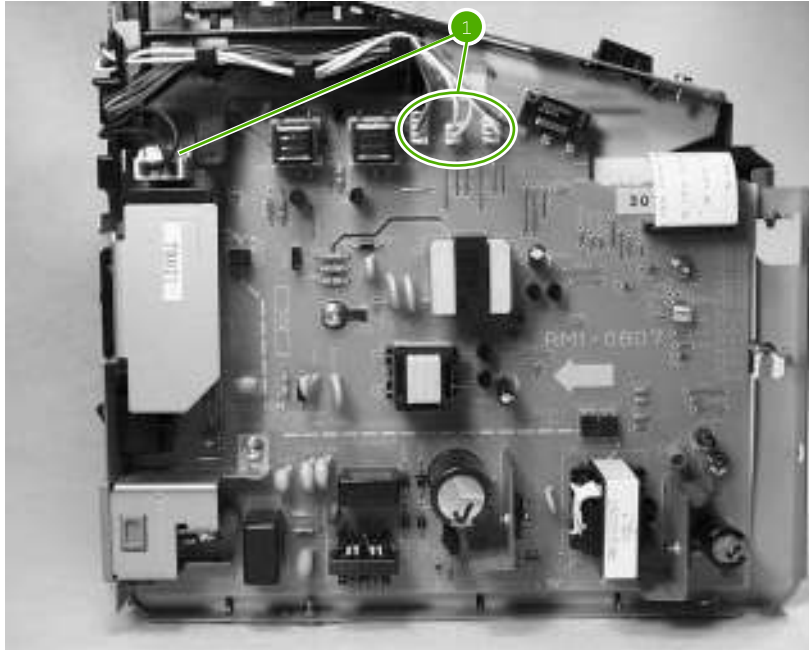


Figure 6-4 Check the fuser connections (HP LaserJet 1010 series shown)

If a transfer problem exists, replace the transfer roller (*do not* touch the black-sponge portion of the transfer roller). If a fuser problem exists, first check to make sure that the four cables to the fuser are correctly seated in the engine-power assembly.

Drum-rotation functional check

The photosensitive drum, which is located in the print cartridge, must rotate in order for the print process to work. The photosensitive drum receives its drive from the main motor through a system of gears on the right side of the printer.



NOTE This test is especially important if refilled print cartridges have been used.

- 1 Open the print-cartridge door.
- 2 Remove the print cartridge.
- 3 Mark the drive gear on the cartridge with a felt-tipped marker. Note the position of the mark.
- 4 Install the print cartridge and close the print-cartridge door. The startup sequence should rotate the drum enough to move the mark.
- 5 Open the print-cartridge door and inspect the gear that was marked in step 3. Verify that the mark moved.

If the mark did not move, inspect the drive shaft that moves into the print-cartridge area when the print-cartridge door is closed to make sure that it is meshing with the print cartridge. If the drive shaft looks functional and the drum does not move, replace the print cartridge. If the drive shaft is damaged, replace the printer.

High-voltage-contacts check

The high-voltage contacts in the printer must have a good connection with the contacts on the print cartridge to provide the necessary voltages for the electrophotographic processes.

To check the print-cartridge contacts

Remove the print cartridge and visually inspect the three connection points (callout 1) on the end of the print cartridge. If they are dirty or corroded, clean the connection. If they are damaged, replace the print cartridge.



NOTE Use a dry cloth to clean the connections.



Figure 6-5 Print-cartridge high-voltage contacts

To check the printer high-voltage contacts

The printer has three spring-loaded pins (callout 1) that make contact with the high-voltage points on the print cartridge. Verify that the pins are not dirty or corroded and that the spring-loading action is functional. If the pins are dirty or obstructed, clean them. If they are damaged, replace the printer.

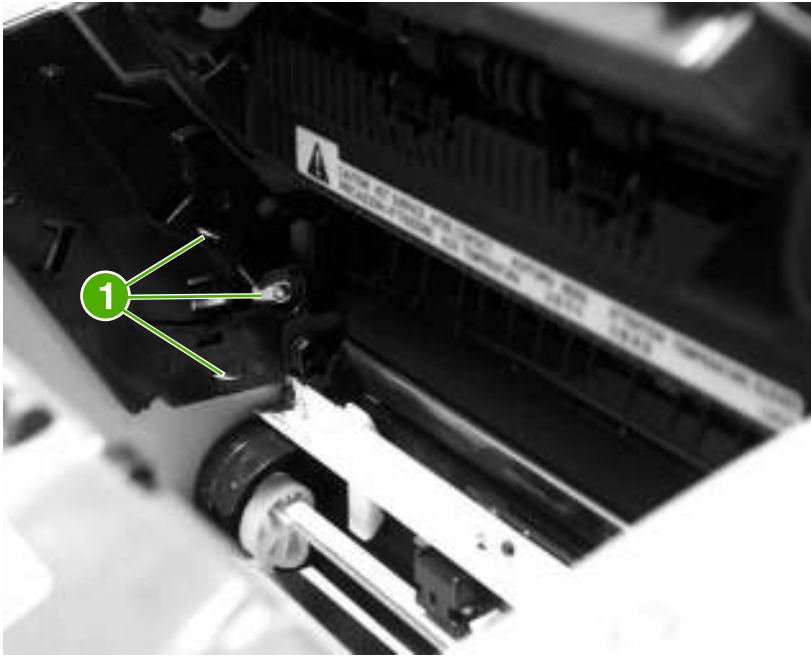


Figure 6-6 Printer high-voltage contacts

Troubleshooting tools

If the printer output has a consistent, repetitive defect, then use the following ruler to predict which part needs to be replaced based on the measured distance between the repetitions of the defect.

Repetitive-image-defect ruler

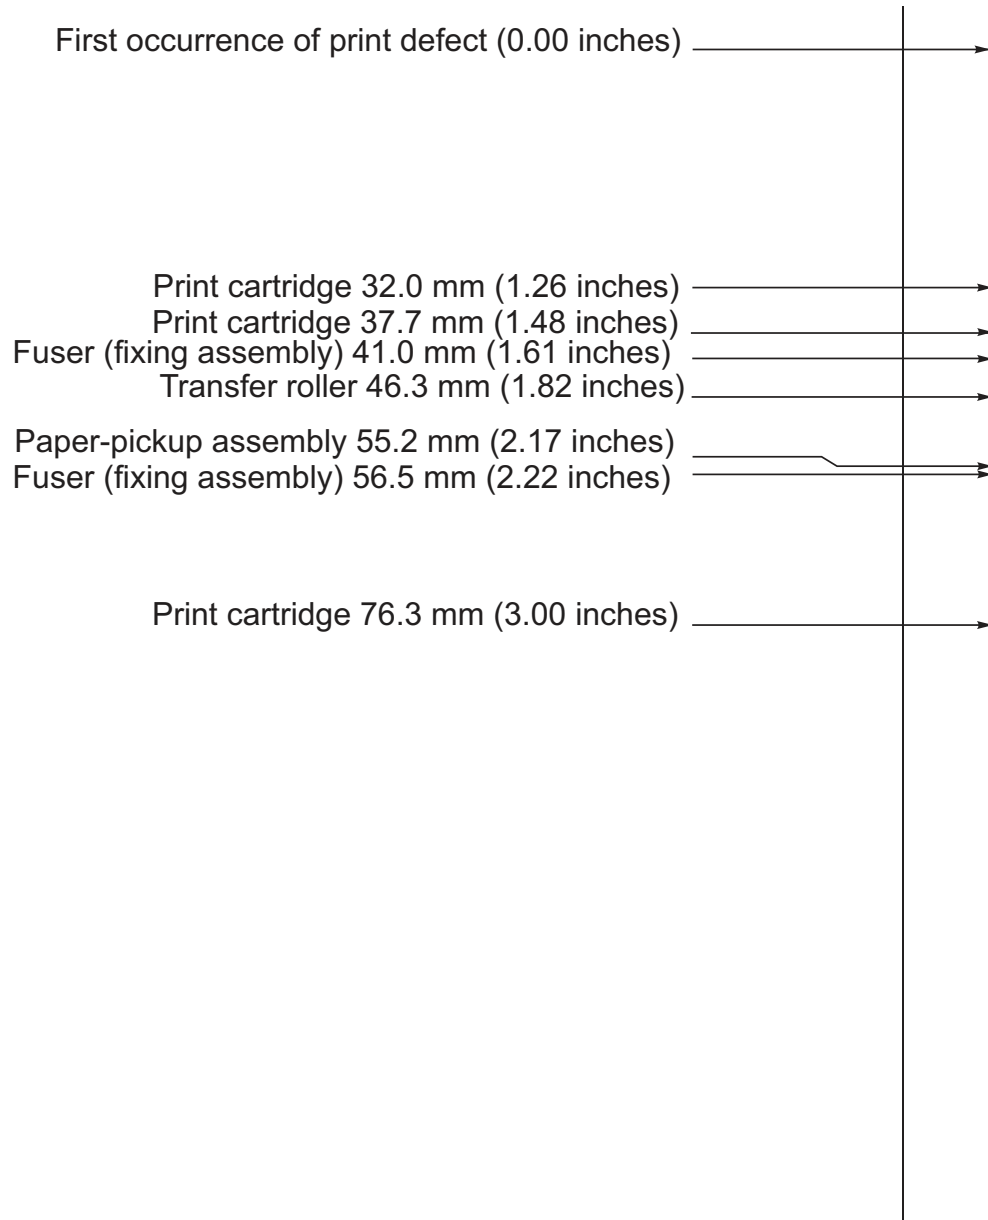


Figure 6-7 Repetitive-image-defect ruler

Circuit diagram

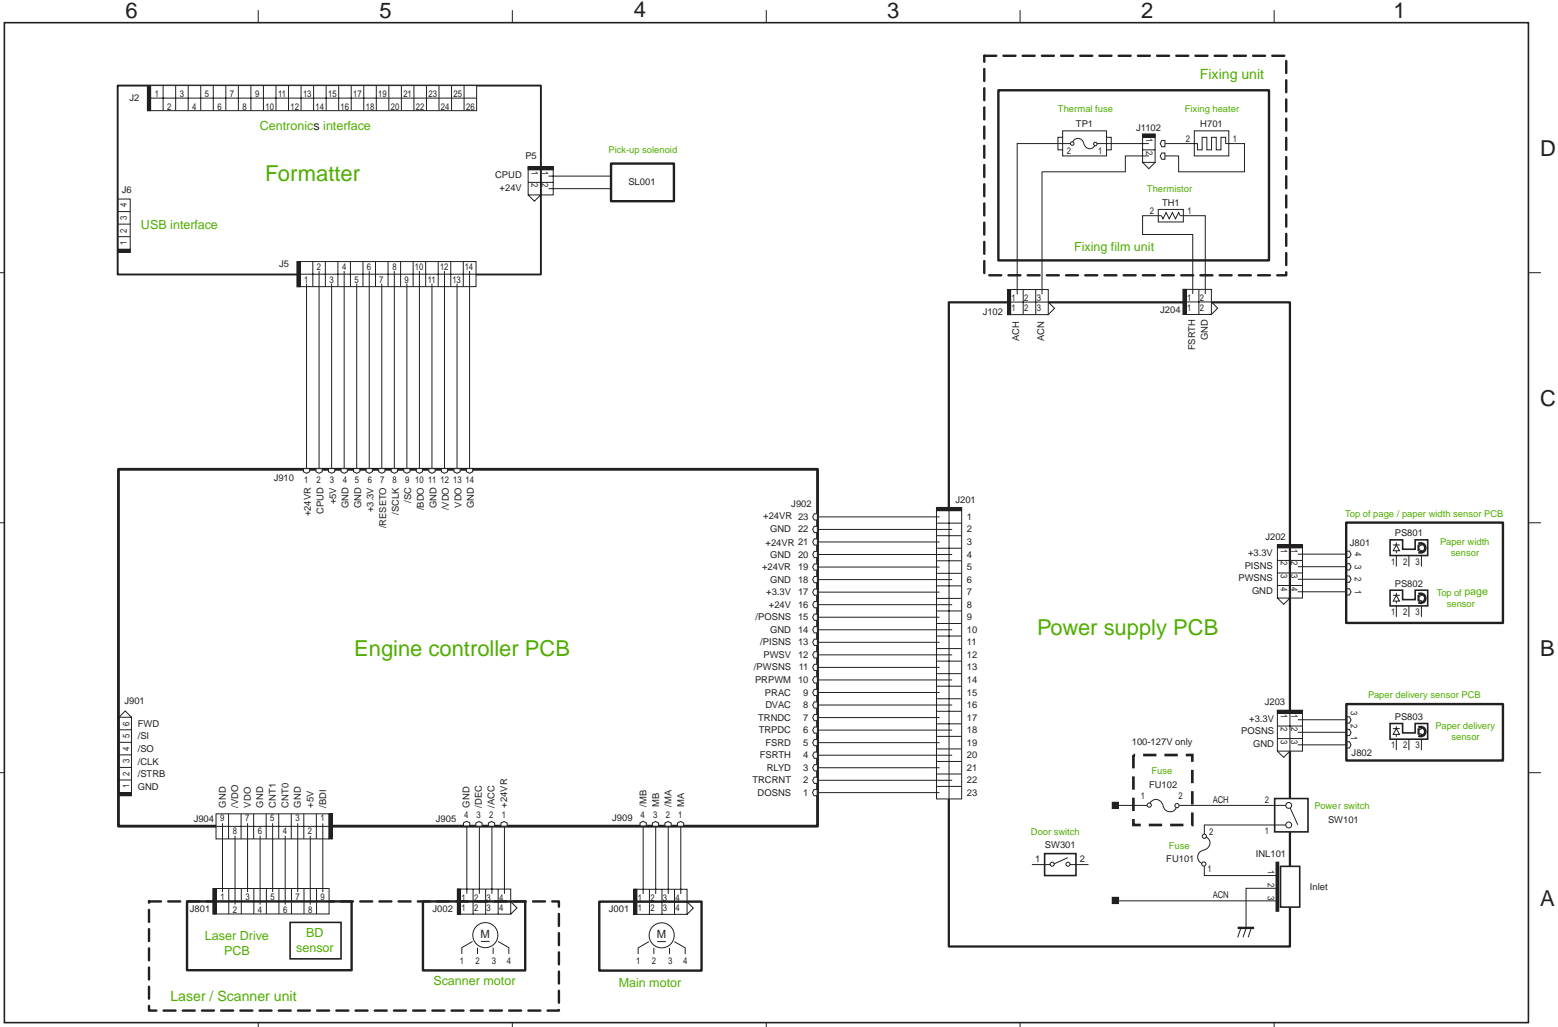


Figure 6-8 Circuit diagram

Solenoid, sensors, switches, and motor

The following figure shows the locations of the solenoid, sensors, and switches.

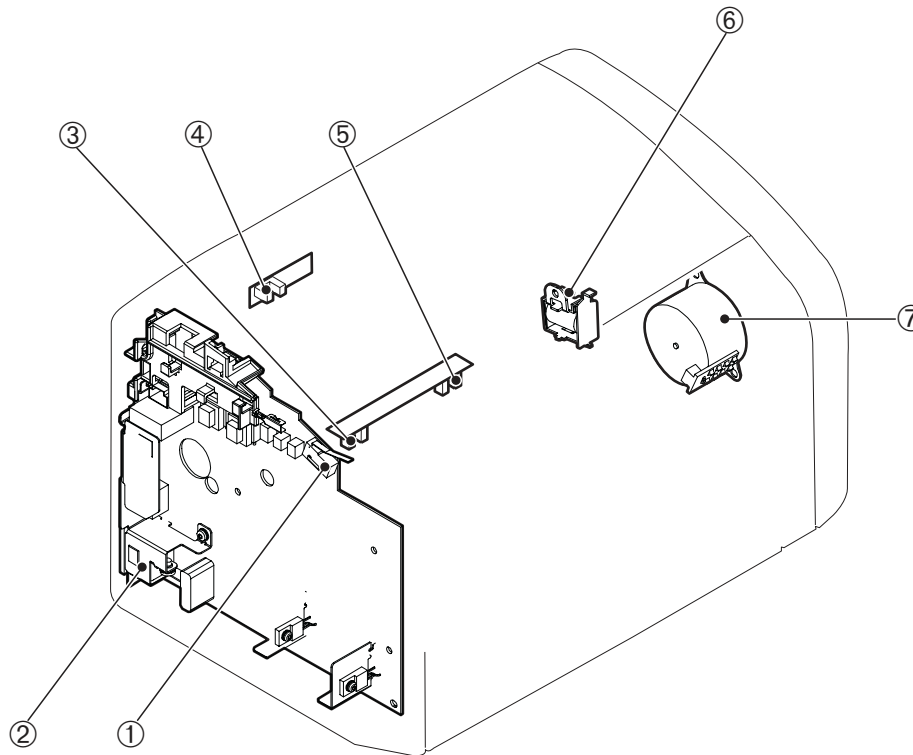


Figure 6-9 Solenoid, sensors, switches, and motor

1	The door switch detects whether or not the print-cartridge door is closed. Printing cannot continue until the print-cartridge door is closed.
2	Power switch
3	The paper-width sensor senses the width of the media.
4	The paper-delivery sensor senses when media has successfully moved out of the fusing area.
5	The top-of-page sensor detects the leading and trailing edges of the media. It synchronizes the photosensitive drum and the top of the media.
6	Solenoid
7	Motor

7 Parts and diagrams

This chapter provides an exploded view that shows the replaceable parts of the printer, tables of replaceable parts, and links to other resources.

- [Ordering parts and supplies](#)
- [Accessories and consumables](#)
- [Printer exchange/parts](#)
- [Major components](#)
- [Alphabetical parts list](#)
- [Numerical parts list](#)

Ordering parts and supplies

This section describes Web resources for ordering parts and for technical support, as well as resources for ordering related documentation and software.

Parts

Order replacement parts from the following Web site: www.hp.com/ssg/parts/direct_order.html

Related documentation and software

Order documentation and software from the Web sites listed in [Table 7-1 Technical support websites on page 134](#).

Table 7-1 Technical support websites

HP Customer Care Online	www.hp.com/go/support
Software drivers, support documentation, and answers to frequently asked questions	
HP Technical Training (North America)	www.hp.com/go/resellertraining
Classes and schedules	
Parts	www.outfield.external.hp.com/spi/welcome.htm
Parts information	

Parts that wear

The parts that wear on the product are listed in chapter 3 of this manual. Parts are available directly from Hewlett-Packard at the following websites:

- HP Parts Store: www.hp.com/buy/parts
- Partsurfer: www.partsurfer.hp.com
- HP Parts Portal: www.hp.com/go/HPparts

Accessories and consumables

Accessories

Table 7-2 Accessories

Product name	Description	Product number	Part number	Exchange number
Print cartridges, cables, and HP Jetdirect Print Servers				
Print cartridge	2,000 page cartridge	N/A	Q2612A	
Cables and interface accessories	3-meter IEEE-1284 parallel cable	N/A	C2951A	
Cables and interface accessories	1.8-meter (6-feet) USB cable	NA	8120-8485	
Cables and interface accessories	.6-meter (2-feet) USB cable	Q2460A	8121-0712	
Cables and interface accessories	Power cord, US/ Canada	NA	8120-6812	
Cables and interface accessories	Power cord, Europe	N/A	8120-6811	
Cables and interface accessories	Power cord, Switzerland	N/A	8120-6815	
Cables and interface accessories	Power cord, UK	N/A	8120-6809	
Cables and interface accessories	Power cord, Danish	N/A	8120-6814	
Cables and interface accessories	Power cord, SA	N/A	8120-6813	
Cables and interface accessories	Power cord, Israel	N/A	8120-6800	
HP Jetdirect Print Server HP LJ 1010 series only	Model 500x Ethernet/ Fast Ethernet (10/100Base-TX)	J3265A	J3265-69001	
HP Jetdirect Print Server HP LJ 1010 series only	Model 500x Token Ring	J3264A	J3264-69001	
HP Jetdirect Print Server HP LJ 1010 series only	Model 300x Ethernet/ Fast Ethernet (10/100Base-TX)	J3263A	J3263-69001	
HP Jetdirect Print Server HP LJ 1010 series only	Model 170x Ethernet (10Base-T)	J3258B	J3258-61001	
HP Jetdirect Print Server	Model 310X Ethernet/ Fast Ethernet (10/100Base-TX)	J6038A	J7942-61001	

Table 7-2 Accessories (continued)

Product name	Description	Product number	Part number	Exchange number
HP Jetdirect Print Server	Model 380x Wireless Ethernet (802.11b)	J6061A	J6061-61001	
HP LJ 1010 series only				
HP Jetdirect Print Server	Model EN3700 USB print server	J7942A	J7942A-61001	
HP Jetdirect Print Server	Model WP110 Wireless Ethernet (802.11b)	J6062A	J6062-69001	
Toner cloth	Ideal for wiping up toner spills and cleaning the printer	N/A	5090-3379	

¹ (NOTE: If two parts are listed for one country/region, you can use either part regardless of the output rating.)

Common hardware

The product uses common Phillips-head screws as fasteners.

How to use the parts lists and diagrams

The figures in this chapter illustrate the major subassemblies in the product. A table follows the exploded assembly diagram. Each table lists the reference designator, the associated part number for the item, and a description of the part.

Parts that have no reference designator or part number are not field replaceable units (FRUs) and cannot be ordered. Failure of a part that is not listed as replaceable and is not included with a listed FRU requires replacement of the entire printer.

While looking for a part number, pay careful attention to the voltage listed in the description column to make sure that the part number selected is for the correct product model.

Printer exchange/parts


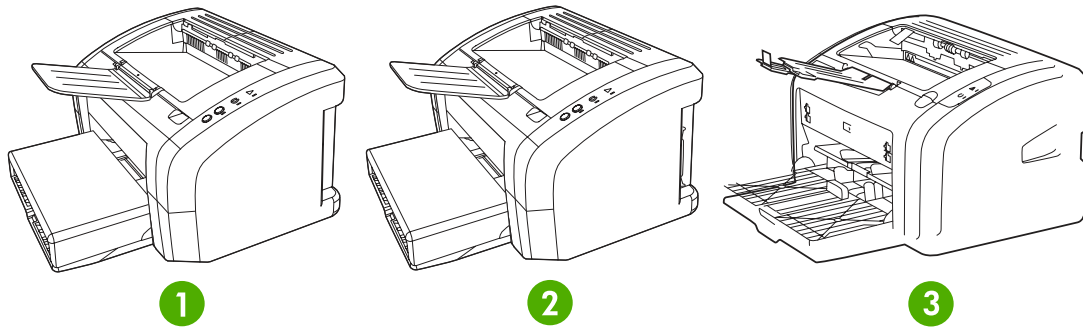


Figure 7-1 HP LJ 1010 series and HP LJ 1020 product

Table 7-3 Printer exchange/parts

Ref	Description	Part number	Qty
1	HP LJ 1010–110V printer (exchange)	Q2460–69001	1
1	HP LJ 1010–220V printer (exchange)	Q2460–69002	1
1	HP LJ 1012–110V printer (exchange)	Q2461–69001	1
1	HP LJ 1012–220V printer (exchange)	Q2461–69002	1
2	HP LJ 1015–110V printer (exchange)	Q2462–69001	1
2	HP LJ 1015–220V printer (exchange)	Q2462–69002	1
2	HP LJ 1010–220V printer (exchange) 3 year warranty	Q2463–69001	1
3	HP LJ 1020–110V printer (replacement)	Q5911–67056	1
3	HP LJ 1020–110V printer (refurbished)	Q5911–69056	1
3	HP LJ 1020–110V printer (exchange engine with formatter)	Q5911–67001	1
3	HP LJ 1020–240V printer (replacement)	Q5911–67055	1
3	HP LJ 1020–240V printer (refurbished)	Q5911–69055	1
3	HP LJ 1020–240V printer (exchange engine with formatter)	Q5911–67002	1
not shown	HP LJ 1020 formatter	Q5426–60001	1
not shown	Nameplate HP LJ 1020	Q5911–00001	1

Major components

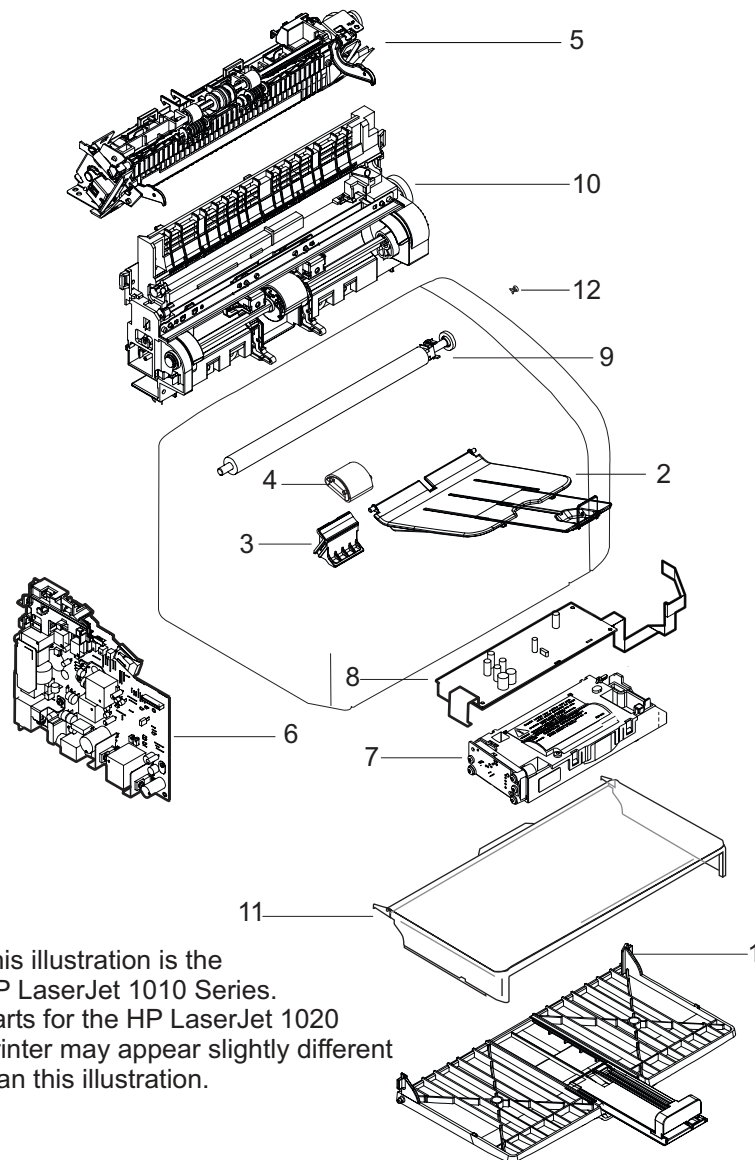

NOTE: This illustration is the HP LaserJet 1010 Series. Parts for the HP LaserJet 1020 Printer may appear slightly different than this illustration.

Figure 7-2 Major components (HP LJ 1010 series shown)

Table 7-4 Major components

Ref	Description	Part number	Qty
1	Paper pickup tray assembly	RM1-0629-000CN (LJ 1010 series)	1
1	Paper pickup tray assembly	RM1-2079-000CN (LJ 1020 printer)	1
2	Delivery tray assembly	RM1-0659-000CN	1
3	Separation pad assembly	RM1-0648-000CN	1
4	Roller, pickup	RL1-0266-000CN	1
5	Fuser (fixing assembly) 110V to 127V (HP LJ 1010 series)	RM1-0650-000CN	1
5	Fuser (fixing assembly) 220V to 240V (HP LJ 1010 series)	RM1-0656-000CN	1
5	Fuser (fixing assembly) 110V to 127V (HP LJ 1020 printer)	RM1-2086-000CN	1
5	Fuser (fixing assembly) 220V to 240V (HP LJ 1020 printer)	RM1-2087-000CN	1
6	Engine power supply 110V to 127V (HP LJ 1010 series)	RM1-0807-000CN	1
6	Engine power supply 220V to 240V (HP LJ 1010 series)	RM1-0808-020CN	1
6	Engine power supply 110V to 127V (HP LJ 1020 printer)	RM1-2315-000CN	1
6	Engine power supply 220V to 240V (HP LJ 1020 printer)	RM1-2316-000CN	1
7	Laser/scanner assembly	RM1-0171-000CN (LJ 1010 series)	1
7	Laser/scanner assembly	RM1-2084-000CN (LJ 1020 printer)	1
8	Engine control assembly	RM1-0806-000CN (LJ 1010 series)	1
8	Engine control assembly	RM1-2314-000CN (LJ 1020 printer)	1
9	Transfer roller assembly	RM1-0658-000CN (LJ 1010 series)	1
9	Transfer roller assembly	RM1-2093-000CN (LJ 1020 printer)	1
10	Paper pickup assembly	RM1-0641-000CN (LJ 1010 series)	1
10	Paper pickup assembly	RM1-2091-000CN (LJ 1020 printer)	1
11	Dust Cover-US	Q2460-67914	1
11	Dust Cover-Worldwide	Q2460-67915	1
12	Door Link Clip (Stopper)	RC1-1957-000CN (LJ 1010 series)	1
12	Door Link Clip (Stopper)	RM1-2314-000CN (LJ 1020 printer)	1
N/A	CD Rom-West Europe/America	Q2460-60101	1
N/A	CD Rom-North Europe	Q2460-60102	1

Ref	Description	Part number	Qty
N/A	CD Rom-East Europe	Q2460-60103	1
N/A	CD Rom-Asia	Q2460-60104	1
N/A	CD Rom-China	Q2460-60105	1
N/A	CD-Service and Support Training	Q2460-60106	1
N/A	Service Manual, HP LJ 1010 series and HP LJ 1020 product	Q5911-90945	1

Alphabetical parts list

Table 7-5 Alphabetical parts list

Description	Part number	Table and page
CD Rom-Asia	Q2460-60104	Major components on page 141
CD Rom-China	Q2460-60105	Major components on page 141
CD Rom-East Europe	Q2460-60103	Major components on page 141
CD Rom-North Europe	Q2460-60102	Major components on page 141
CD Rom-West Europe/America	Q2460-60101	Major components on page 141
CD-Service and Support Training	Q2460-60106	Major components on page 141
Delivery tray assembly	RM1-0659-000CN	Major components on page 141
Door Link Clip (Stopper)	RM1-2314-000CN (LJ 1020 printer)	Major components on page 141
Door Link Clip (Stopper)	RC1-1957-000CN (LJ 1010 series)	Major components on page 141
Dust Cover-US	Q2460-67914	Major components on page 141
Dust Cover-Worldwide	Q2460-67915	Major components on page 141
Engine control assembly	RM1-2314-000CN (LJ 1020 printer)	Major components on page 141
Engine control assembly	RM1-0806-000CN (LJ 1010 series)	Major components on page 141
Engine power supply 110V to 127V (HP LJ 1010 series)	RM1-0807-000CN	Major components on page 141
Engine power supply 110V to 127V (HP LJ 1020 printer)	RM1-2315-000CN	Major components on page 141
Engine power supply 220V to 240V (HP LJ 1010 series)	RM1-0808-020CN	Major components on page 141
Engine power supply 220V to 240V (HP LJ 1020 printer)	RM1-2316-000CN	Major components on page 141
Fuser (fixing assembly) 110V to 127V (HP LJ 1010 series)	RM1-0650-000CN	Major components on page 141
Fuser (fixing assembly) 110V to 127V (HP LJ 1020 printer)	RM1-2086-000CN	Major components on page 141
Fuser (fixing assembly) 220V to 240V (HP LJ 1010 series)	RM1-0656-000CN	Major components on page 141

Table 7-5 Alphabetical parts list (continued)

Description	Part number	Table and page
Fuser (fixing assembly) 220V to 240V (HP LJ 1020 printer)	RM1-2087-000CN	Major components on page 141
HP LJ 1010-220V printer (exchange)	Q2460-69002	Printer exchange/parts on page 139
HP LJ 1010-220V printer (exchange) 3 year warranty	Q2463-69001	Printer exchange/parts on page 139
HP LJ 1010-110V printer (exchange)	Q2460-69001	Printer exchange/parts on page 139
HP LJ 1012-110V printer (exchange)	Q2461-69001	Printer exchange/parts on page 139
HP LJ 1012-220V printer (exchange)	Q2461-69002	Printer exchange/parts on page 139
HP LJ 1015-110V printer (exchange)	Q2462-69001	Printer exchange/parts on page 139
HP LJ 1015-220V printer (exchange)	Q2462-69002	Printer exchange/parts on page 139
HP LJ 1020-110V printer (exchange engine with formatter)	Q5911-67001	Printer exchange/parts on page 139
HP LJ 1020-110V printer (refurbished)	Q5911-69056	Printer exchange/parts on page 139
HP LJ 1020-110V printer (replacement)	Q5911-67056	Printer exchange/parts on page 139
HP LJ 1020-240V printer (exchange engine with formatter)	Q5911-67002	Printer exchange/parts on page 139
HP LJ 1020-240V printer (refurbished)	Q5911-69055	Printer exchange/parts on page 139
HP LJ 1020-240V printer (replacement)	Q5911-67055	Printer exchange/parts on page 139
HP LJ 1020 formatter	Q5426-60001	Printer exchange/parts on page 139
Laser/scanner assembly	RM1-2084-000CN (LJ 1020 printer)	Major components on page 141
Laser/scanner assembly	RM1-0171-000CN (LJ 1010 series)	Major components on page 141
Nameplate HP LJ 1020	Q5911-00001	Printer exchange/parts on page 139
Paper pickup assembly	RM1-2091-000CN (LJ 1020 printer)	Major components on page 141
Paper pickup assembly	RM1-0641-000CN (LJ 1010 series)	Major components on page 141
Paper pickup tray assembly	RM1-2079-000CN (LJ 1020 printer)	Major components on page 141
Paper pickup tray assembly	RM1-0629-000CN (LJ 1010 series)	Major components on page 141

Table 7-5 Alphabetical parts list (continued)

Description	Part number	Table and page
Roller, pickup	RL1-0266-000CN	Major components on page 141
Separation pad assembly	RM1-0648-000CN	Major components on page 141
Service Manual, HP LJ 1010 series and HP LJ 1020 product	Q5911-90945	Major components on page 141
Transfer roller assembly	RM1-2093-000CN (LJ 1020 printer)	Major components on page 141
Transfer roller assembly	RM1-0658-000CN (LJ 1010 series)	Major components on page 141

Numerical parts list

Table 7-6 Numerical parts list

Part number	Description	Table and page
Q2460-60101	CD Rom-West Europe/America	Major components on page 141
Q2460-60102	CD Rom-North Europe	Major components on page 141
Q2460-60103	CD Rom-East Europe	Major components on page 141
Q2460-60104	CD Rom-Asia	Major components on page 141
Q2460-60105	CD Rom-China	Major components on page 141
Q2460-60106	CD-Service and Support Training	Major components on page 141
Q2460-67914	Dust Cover-US	Major components on page 141
Q2460-67915	Dust Cover-Worldwide	Major components on page 141
Q2460-69002	HP LJ 1010-220V printer (exchange)	Printer exchange/parts on page 139
Q2460-69001	HP LJ 1010-110V printer (exchange)	Printer exchange/parts on page 139
Q2461-69001	HP LJ 1012-110V printer (exchange)	Printer exchange/parts on page 139
Q2461-69002	HP LJ 1012-220V printer (exchange)	Printer exchange/parts on page 139
Q2462-69001	HP LJ 1015-110V printer (exchange)	Printer exchange/parts on page 139
Q2462-69002	HP LJ 1015-220V printer (exchange)	Printer exchange/parts on page 139
Q2463-69001	HP LJ 1010-220V printer (exchange) 3 year warranty	Printer exchange/parts on page 139
Q5426-60001	HP LJ 1020 formatter	Printer exchange/parts on page 139
Q5911-00001	Nameplate HP LJ 1020	Printer exchange/parts on page 139
Q5911-67001	HP LJ 1020-110V printer (exchange engine with formatter)	Printer exchange/parts on page 139
Q5911-67056	HP LJ 1020-110V printer (replacement)	Printer exchange/parts on page 139
Q5911-69056	HP LJ 1020-110V printer (refurbished)	Printer exchange/parts on page 139

Table 7-6 Numerical parts list (continued)

Part number	Description	Table and page
Q5911-90945	Service Manual, HP LJ 1010 series and HP LJ 1020 product	Major components on page 141
Q5911-67002	HP LJ 1020-240V printer (exchange engine with formatter)	Printer exchange/parts on page 139
Q5911-67055	HP LJ 1020-240V printer (replacement)	Printer exchange/parts on page 139
Q5911-69055	HP LJ 1020-240V printer (refurbished)	Printer exchange/parts on page 139
RC1-1957-000CN (LJ 1010 series)	Door Link Clip (Stopper)	Major components on page 141
RL1-0266-000CN	Roller, pickup	Major components on page 141
RM1-0171-000CN (LJ 1010 series)	Laser/scanner assembly	Major components on page 141
RM1-0629-000CN (LJ 1010 series)	Paper pickup tray assembly	Major components on page 141
RM1-0641-000CN (LJ 1010 series)	Paper pickup assembly	Major components on page 141
RM1-0648-000CN	Separation pad assembly	Major components on page 141
RM1-0650-000CN	Fuser (fixing assembly) 110V to 127V (HP LJ 1010 series)	Major components on page 141
RM1-0656-000CN	Fuser (fixing assembly) 220V to 240V (HP LJ 1010 series)	Major components on page 141
RM1-0658-000CN (LJ 1010 series)	Transfer roller assembly	Major components on page 141
RM1-0659-000CN	Delivery tray assembly	Major components on page 141
RM1-0806-000CN (LJ 1010 series)	Engine control assembly	Major components on page 141
RM1-0807-000CN	Engine power supply 110V to 127V (HP LJ 1010 series)	Major components on page 141
RM1-0808-020CN	Engine power supply 220V to 240V (HP LJ 1010 series)	Major components on page 141
RM1-2079-000CN (LJ 1020 printer)	Paper pickup tray assembly	Major components on page 141
RM1-2084-000CN (LJ 1020 printer)	Laser/scanner assembly	Major components on page 141
RM1-2086-000CN	Fuser (fixing assembly) 110V to 127V (HP LJ 1020 printer)	Major components on page 141
RM1-2087-000CN	Fuser (fixing assembly) 220V to 240V (HP LJ 1020 printer)	Major components on page 141
RM1-2091-000CN (LJ 1020 printer)	Paper pickup assembly	Major components on page 141

Table 7-6 Numerical parts list (continued)

Part number	Description	Table and page
RM1-2093-000CN (LJ 1020 printer)	Transfer roller assembly	Major components on page 141
RM1-2314-000CN (LJ 1020 printer)	Engine control assembly	Major components on page 141
RM1-2314-000CN (LJ 1020 printer)	Door Link Clip (Stopper)	Major components on page 141
RM1-2315-000CN	Engine power supply 110V to 127V (HP LJ 1020 printer)	Major components on page 141
RM1-2316-000CN	Engine power supply 220V to 240V (HP LJ 1020 printer)	Major components on page 141

Index

A

- ac bias 55
- ac power distribution 53
- accessories, ordering 135
- acoustic emissions 11
- alignment, troubleshooting 118, 122
- Attention light
 - HP LJ 1010 series patterns 102
 - HP LJ 1020 patterns 106
 - locating 19
 - power-on functions 100

B

- back panel, removing 77
- background, gray 114
- beam detect (BD) signal 55
- bidirectional communications 47, 49
- bin, output
 - capacity 7
 - extension, replacing 41, 74
 - jams, clearing 42, 108
 - locating on LJ 1010 series 4
 - locating on LJ 1020 printer 6
- black dots, troubleshooting 113, 119
- blank pages, troubleshooting 111
- block diagrams
 - image formation 54
 - product functions 50
- breaking paper reams 123
- buffer memory 48
- buttons 19
- buttons, control panel 19

C

- Canadian DOC regulations 14
- Cancel Job button 19

- capacity, trays and bins 7
- card stock specifications 24
- Care Pack, HP 12
- cartridge area, cleaning 32
- cartridge door
 - locating on LJ 1010 series 4
 - locating on LJ 1020 printer 6
 - removing 77
- cartridges
 - checking 111, 127
 - drum rotation check 126
 - extending life of 48
 - life expectancies 28
 - operations 55, 56
 - part numbers 135
 - recycling 13
 - redistributing toner 111
 - refilled 13
 - removing 65
- CD-ROM part numbers 141, 143, 146
- central processing unit (CPU), formatter 47
- characters, misprinted 113, 118
- charging roller
 - operations 55
 - power supply 53
- checklists
 - preservice 64
 - print cartridge inspection 111
 - troubleshooting 98
- checks
 - continuous self-test 100
 - drum rotation 126
 - half-self-test 124
 - high-voltage power supply 127
 - print cartridge 111
- circuit capacity specifications 10
- circuit diagram 130

- circuitry, power system 53
- classes, HP Technical Training 134
- cleaning
 - high-voltage connection points 128
 - high-voltage contacts 127
 - outside of printer 30
 - pickup roller 34
 - print cartridge area 32
 - print path 31
- cleaning page 101
- cleaning stage, image formation process 56
- clipped pages, troubleshooting 112
- cloth, toner 136
- cold reset 100
- Coldfire processor 47
- communication operations 47, 49
- complex pages, printing 48
- conditioning stage, image formation process 55
- configuration report 101
- connection points
 - high-voltage power supply 128
 - print cartridge 127
- consumables
 - life expectancies 28
 - ordering 134
- continuous self-test 100
- control panel
 - buttons 19
 - lights 19, 100
 - lights, HP LJ 1010 series patterns 102
 - lights, HP LJ 1020 patterns 106
 - operations 47

- power-on functions 100
- troubleshooting 98
- controller PCA 50
- country of origin, identifying 7
- covers, removing
 - front 82
 - left side 77
 - rear 77
 - right side 75
- CPU, formatter 47
- crooked pages, troubleshooting 118, 122
- curl, troubleshooting 119, 122
- Customer Care Online 134
- cut-off edges 112

D

- data communication operations 47, 49
- dc bias 55
- dc controller PCA 50
- dc power distribution 53
- delay jams 58
- delivery sensor, paper (PS803)
 - feeding operations 56
 - jam detection operations 58
- delivery tray assembly, part number 141, 143, 147
- delivery tray extension, replacing 41, 74
- delivery-delay jams 58
- delivery-stationary jams 58
- demo page 101
- density
 - operations 53
 - troubleshooting 113
- developing roller 53
- developing stage, image formation process 55
- dimensions, printer 9
- dimensions, product 18
- documentation
 - ordering 134
 - part numbers 142, 145, 147
- door link clip (stopper), part numbers 141, 143, 147
- dots, troubleshooting 113, 119
- dpi, specifications 7
- draft mode 48
- DRAM, formatter 47

- drivers, ordering 134
- dropouts, troubleshooting 113, 118
- drum
 - inspecting 111
 - operations 55, 56
 - rotation functional check 126
- drum cleaning stage, image formation process 56
- dust cover, part numbers 141, 143, 146
- duty cycle 7
- dynamic random access memory (DRAM), formatter 47

E

- EconoMode 48
- ECU
 - jam detection operations 58
 - laser/scanner operations 52
 - operations 50
 - paper feeding operations 56
 - part numbers 141, 143, 147
 - removing 92
 - sequence of operations 60
- edges, not printing 112
- electrical specifications 10
- electrophotographic processes
 - operations 54, 55
 - testing 124
- electrostatic discharge (ESD), precautions for 64
- element, heating 56
- engine control unit. *See* ECU
- engine power assembly
 - part number 141, 143, 147
 - power system 53
- engine power assembly, removing 87
- Enhanced I/O 48
- envelopes
 - loading 25
 - specifications 23
- environmental specifications 9, 18
- errors, control panel lights
 - HP LaserJet 1010 series printers 102
 - HP LaserJet 1020 printer 106

- ESD (electrostatic discharge), precautions for 64
- exchange, printer 138
- exit rollers, fuser assembly 56
- extended warranty 12

F

- faded areas, troubleshooting 120
- fasteners, types of 137
- fatal errors, HP LJ 1010 series printers 105
- features
 - firmware 8
 - hardware 2
- feed assembly drive rollers 56
- feed system, paper 56
- feeding problems, troubleshooting 122
- field replaceable units (FRUs) 137
- Finland, laser safety statement for 15
- firmware features 8
- fixing assembly. *See* fuser assembly
- flowchart, troubleshooting 98
- focusing lenses, operations 55
- formatter
 - fatal errors 105
 - operations 47
 - sequence of operations 60
- front cover, removing 82
- fuser assembly
 - exit rollers 56
 - fatal errors 105
 - life expectancy 28
 - operations 56
 - part numbers 141, 143, 147
 - removing 89
 - temperature, adjusting 116
- fuser cover, removing 77
- fuses, overcurrent protection (F101, F102) 53
- fusing stage, image formation process 56

G

- Go light and button 19, 100
- gray background, troubleshooting 114

H

- half-self-test functional check 124
- hardware features 2
- hardware maintenance agreements 12
- heating element operations 56
- heavy media specifications 24
- high-voltage power supply
 - connector assembly, checking 128
 - operations 53
 - testing 127
- HP Care Pack 12
- HP Customer Care Online 134
- HP Jetdirect print servers, ordering 135, 136
- HP LaserJet 1010 series printers
 - differences between 66
 - features 2
 - lights, control panel 102
 - part numbers, exchange 138
 - parts, locating 4
 - power-on functions, control panel 100
 - reports 101
- HP LaserJet 1020 printer
 - features 3
 - lights, control panel 106
 - part number, exchange 138
 - parts, locating 6
- HP Technical Training 134
- humidity
 - specifications 9

I

- I/O, Enhanced 48
- idle mode, power consumption 10
- image density
 - troubleshooting 113
 - voltage operations 53
- image formation process
 - operations 54, 55
 - testing 124
- image quality, troubleshooting
 - about 111
 - blank pages 111
 - characters, misprinted 118
 - curled paper 119, 122
 - dropouts 113

- faded areas 120
- gray background 114
- lines 114
- loose toner 116
- repetitive defects 117
- repetitive image defect ruler 129
- scattered toner 119
- skewed pages 118, 122
- smears 115
- specks 113
- water droplets 121
- white stripes 120
- wrinkled pages 121

input tray

- capacity 7
- jams, clearing 42, 108
- loading media 25
- locating on LJ 1010 series 4
- locating on LJ 1020 printer 6
- media sizes supported 21
- multifeeds 122
- replacing 40, 73

INTR (Initial Rotation Period) 60

isolated job settings 49

J

jams

- clearing 42, 108
- detection operations 58
- frequent 122

Jetdirect print servers, ordering 135, 136

K

Korean EMI statement 14

L

labels

- loading 25
- specifications 23

languages, printer 49

laser safety statement 14

laser/scanner assembly

- operations 52
- part numbers 141, 144, 147
- precautions 64
- removing 96

LaserJet 1010 series printers

- differences between 66
- features 2

- lights, control panel 102
- part numbers, exchange 138
- parts, locating 4
- power-on functions, control panel 100
- reports 101

LaserJet 1020 printer

- features 3
- lights, control panel 106
- part number, exchange 138
- parts, locating 6

latent electrostatic image 55

leading edge

- detection operations 58

leading edge detection operations 56

left side cover, removing 77

lenses, operations 55

letterhead

- loading 25
- specifications 22

life expectancies

- extending print cartridge 48
- recycling used print cartridges 13
- supplies 28

lift plate operations 56

lights, control panel

- fatal errors, HP LJ 1010 series printers 105
- HP LaserJet 1010 series patterns 102
- HP LaserJet 1020 patterns 106
- locating 19
- power-on functions 100

lines, troubleshooting 114, 120

loading media 25

loose toner, troubleshooting 116

LPT ports, troubleshooting 99

LSTR (Last Rotation Period) 60

M

machine screws 137

main input tray

- capacity 7
- feeding operations 56
- feeding problems, troubleshooting 122
- jams, clearing 42, 108

- loading 25
- locating on LJ 1010 series 4
- locating on LJ 1020 printer 6
- media sizes supported 21
- replacing 40, 73
- main wiring diagram 130
- maintenance agreements 12
- manual feed tray. See priority input tray
- manuals
 - ordering 134
 - part numbers 142, 145, 147
- margins, minimum 112
- media
 - breaking reams 123
 - capacity 7
 - curled 119, 122
 - envelopes 23, 25
 - heavy 24
 - jam detection operations 58
 - jams, clearing 42, 108
 - labels 23, 25
 - letterhead 22, 25
 - loading 25
 - margins, minimum 112
 - multifeeds 122
 - sizes supported 21
 - specifications 21
 - storing 122
 - transparencies 22, 25
 - troubleshooting 22
 - type, setting 26
 - wrinkled 121
- memory
 - buffer 48
 - formatter 47
 - NVRAM initialization 100
- Memory Enhancement technology (MEt) 8, 48
- mirror operations 55
- misalignment, troubleshooting 118, 122
- model number 7
- models, features 2, 66
- motor
 - operations 51
- multifeeds
 - replacing separation pad 38, 71
 - troubleshooting 122

N

- noise specifications 11
- NVRAM
 - initialization 100
 - operations 47

O

- on/off switch, locating
 - HP LaserJet 1010 series printers 5
 - HP LaserJet 1020 printer 6
- Online Customer Care, HP 134
- operating environment, specifications 9, 18
- operations
 - ECU 50
 - formatter 47
 - image formation 54
 - jam detection 58
 - laser/scanner 52
 - motor 51
 - overcurrent/overvoltage protection 53
 - paper feeding 56
 - sequence of 60
 - systems 46
- ordering parts and supplies 134
- output bin
 - capacity 7
 - jams, clearing 42, 108
 - locating on LJ 1010 series 4
 - locating on LJ 1020 printer 6
- output path
 - cleaning 31
 - operations 56
- output-bin extension, replacing 41, 74
- overcurrent/overvoltage protection 53

P

- Page Protect 48
- pages per minute 7, 9
- pages, demo 101
- paper
 - breaking reams 123
 - capacity 7
 - curled 119, 122
 - heavy 24
 - jam detection operations 58

- jams, clearing 42, 108
- loading 25
- margins, minimum 112
- multifeeds 122
- sizes supported 21
- specifications 21
- storing 122
- troubleshooting 22
- type, setting 26
- wrinkled 121
- paper delivery sensor (PS803)
 - feeding operations 56
 - jam detection operations 58
- paper feed problems, troubleshooting 122
- paper feed system 56
- paper lift plate operations 56
- paper pickup assembly
 - part numbers 141, 144, 147
 - removing 91
- paper pickup tray assembly, part number 141, 144, 147
- paper size settings 112
- paper top sensor (PS801) 56, 58
- paper-out sensor (PS201) 56, 58
- parallel port
 - locating on LJ 1010 series 5
 - operations 47
 - PJL (Printer Job Language) 49
- part numbers
 - accessories 135
 - CD-ROM 141, 143, 146
 - delivery tray assembly 141, 143, 147
 - door link clip (stopper) 141, 143, 147
 - dust covers 141, 143, 146
 - ECU 141, 143, 147
 - engine power supply 141, 143, 147
 - fuser assembly 141, 143, 147
 - laser/scanner assembly 141, 144, 147
 - paper pickup assembly 141, 144, 147
 - pickup roller 141, 145, 147
 - printer exchange 138
 - separation pad assembly 141, 145, 147

- service manual 142, 145, 147
 - transfer roller 141, 145, 147
 - trays 141, 144, 147
 - voltage 137
 - partial characters, troubleshooting 113, 118
 - parts
 - ordering 134
 - removing and replacing 64
 - user-replaceable 35, 68
 - parts removal order 67
 - path
 - feeding operations 56, 57
 - print, cleaning 31
 - PCL (Printer Command Language) 49
 - photosensitive drum
 - inspecting 111
 - operations 55, 56
 - rotation functional checks 126
 - photosensors
 - jam detection operations 58
 - locating 58, 131
 - paper feed system 56
 - physical specifications 9
 - pickup delay jams 58
 - pickup roller
 - cleaning 34
 - operations 56
 - part number 141, 145, 147
 - replacing 35, 68
 - pickup solenoid (SL001)
 - locating 58, 131
 - operations 56, 58
 - pickup stationary jam 58
 - PJL (Printer Job Language) 49
 - pliers, required 64
 - ports
 - communication operations 47
 - locating on LJ 1010 series 5
 - locating on LJ 1020 printer 6
 - LPT, troubleshooting 99
 - power
 - control operations 50
 - specifications 10
 - power receptacle, locating
 - HP LaserJet 1010 series printers 5
 - HP LaserJet 1020 printer 6
 - power supplies
 - disconnecting 64
 - engine power assembly 53
 - part numbers 141, 143, 147
 - removing 87
 - testing high-voltage 127
 - power switch, locating
 - HP LaserJet 1010 series printers 5
 - HP LaserJet 1020 printer 6
 - power-on functions, control panel 100
 - ppm (pages per minute) 7, 9
 - preservice checklist 64
 - pressure roller, operations 56
 - primary charging roller
 - operations 55
 - power supply 53
 - print cartridge area, cleaning 32
 - print cartridge door
 - locating on LJ 1010 series 4
 - locating on LJ 1020 printer 6
 - removing 77
 - print cartridges
 - checking 111, 127
 - drum rotation check 126
 - extending life of 48
 - life expectancies 28
 - operations 55, 56
 - part numbers 135
 - recycling 13
 - redistributing toner 111
 - refilled 13
 - removing 65
 - print density
 - troubleshooting 113
 - voltage operations 53
 - print path
 - cleaning 31
 - feeding operations 56, 57
 - PRINT period 60
 - print quality, troubleshooting
 - about 111
 - blank pages 111
 - characters, misprinted 118
 - curled paper 119, 122
 - dropouts 113
 - faded areas 120
 - gray background 114
 - lines 114
 - loose toner 116
 - repetitive defects 117
 - repetitive image defect ruler 129
 - scattered toner 119
 - skewed pages 118, 122
 - smears 115
 - specks 113
 - water droplets 121
 - white stripes 120
 - wrinkled pages 121
 - print servers, ordering 135, 136
 - Printer Command Language (PCL) 49
 - printer drivers, ordering 134
 - printer exchange 138
 - Printer Job Language (PJL) 49
 - printer separation pad
 - life expectancy 28
 - locating on LJ 1010 series 5
 - locating on LJ 1020 printer 6
 - operations 56
 - part number 141, 145, 147
 - replacing 38, 71
 - printing
 - loading media 25
 - troubleshooting 99
 - printing, troubleshooting 122
 - priority feed slot
 - capacity 7
 - feeding operations 56
 - loading 25
 - locating on LJ 1010 series 4
 - locating on LJ 1020 6
 - priority input slot
 - feeding problems, troubleshooting 122
 - processor, formatter 47
 - production code 7
- Q**
- quality, troubleshooting
 - about 111
 - blank pages 111
 - characters, misprinted 118
 - curled paper 119, 122
 - dropouts 113
 - faded areas 120
 - gray background 114
 - lines 114
 - loose toner 116

- repetitive defects 117
- repetitive image defect ruler 129
- scattered toner 119
- skewed pages 118, 122
- smears 115
- specks 113
- water droplets 121
- white stripes 120
- wrinkled pages 121

R

RAM

- formatter 47

Ready light

- HP LJ 1010 series patterns 102
- HP LJ 1020 patterns 106
- locating 19
- power-on functions 100

reams, breaking 123

rear panel, removing 77

recycling print cartridges 13

redistributing toner 111

reduction settings 112

refilled print cartridges 13

regulatory statements 14

removing

- ECU 92
- engine power assembly 87
- front cover 82
- fuser assembly 89
- fuser cover 77
- laser/scanner assembly 96
- left side cover 77
- order of 67
- paper pickup assembly 91
- parts 64
- power assembly 87
- print cartridge 65
- print cartridge door 77
- rear panel 77
- right side cover 75
- transfer roller assembly 84

repetitive defects, troubleshooting 117, 129

replacement intervals

- extending print cartridge 48
- recycling used print cartridges 13

- supplies 28

replacing

- field replaceable units (FRUs) 137
- main input tray 40, 73
- order of 67
- output-bin extension 41, 74
- parts 64
- pickup roller 35, 68
- separation pad 38, 71

replacing parts 35

reports, troubleshooting 101

reset, cold 100

residual paper jams 58

Resolution Enhancement technology (REt) 8

resolution, specifications 7

revision level 7

right side cover, removing 75

rollers

- cleaning pickup 34
- image formation operations 54
- paper feeding operations 56
- part numbers 141, 145, 147
- power supply 53
- repetitive image defect ruler 129
- replacing pickup 35, 68
- transfer, cleaning near 30
- transfer, removing 84

rotation test 126

ruler, repetitive defect 129

S

scanning exposure stage, image formation process 55

scatter, toner 119

schedules, HP Technical Training 134

screwdrivers, required 64

screws

- self-tapping 64
- types of 137

sensors

- jam detection operations 58
- locating 58, 131
- paper feed system 56

separation pad

- life expectancies 28

- locating on LJ 1010 series 5
- locating on LJ 1020 printer 6
- operations 56
- part number 141, 145, 147
- replacing 38, 71

separation stage, image formation process 55

serial number 7

service manual part numbers 142, 145, 147

settings, isolation of 49

signals, VIDEO 60

size

- margins, minimum 112
- printer 9, 18

sizes

- media 21

skew, troubleshooting 118, 122

smears

- troubleshooting 115

smears, toner 115

software

- installation, troubleshooting 99
- ordering 134

solenoid (SL001)

- locating 58, 131
- operations 56, 58

space requirements 9, 18

specifications

- acoustic emissions 11
- card stock 24
- electrical 10
- envelopes 23
- labels 23
- letterhead 22
- media 21
- physical 9
- transparencies 22

specks, toner 113, 119

speed

- data transfer 48
- printing 7, 9
- processor 47

spots

- troubleshooting 115

stages, image formation 55, 124

static eliminator, operations 55

static precautions 64

stationary jams 58

- status information, relaying 47, 49
- STBY (Standby) period 60
- storage environment, specifications 9
- storing paper 122
- stripes, vertical white 120
- supplies
 - life expectancies 28
 - ordering 134
- support, technical 134

T

- teardown tree 67
- technical support 134
- Technical Training 134
- temperature
 - fuser settings 116
 - specifications 9
 - storing paper 122
- tests
 - continuous self 100
 - drum rotation 126
 - half-self functional check 124
 - high-voltage power supply 127
- text, troubleshooting 113, 118
- timing diagram, general 61
- toner
 - cloth, ordering 136
 - image formation operations 55
 - loose, troubleshooting 116
 - redistributing 111
 - scattered, troubleshooting 119
 - smears, troubleshooting 115
 - specks, troubleshooting 113, 119
 - waste cleaning operations 56
- toner cartridges. *See* print cartridges
- tools, required 64
- top-cover assembly, removing 77
- trailing edge, detection 58
- Training, HP Technical 134
- transfer roller
 - cleaning around 30
 - operations 55
 - part number 141, 145, 147

- power supply 53
 - removing 84
- transfer stage, image formation process 55
- transparencies
 - cleaning print path with 31
 - loading 25
 - specifications 22
- trays
 - capacities 7
 - jams, clearing 42, 108
 - loading media 25
 - locating on LJ 1010 series 4
 - locating on LJ 1020 printer 6
 - media sizes supported 21
 - multifeeds 122
 - part numbers 141, 144, 147
 - replacing 40, 73
- troubleshooting
 - basic 98
 - blank pages 111
 - characters, misprinted 118
 - control panel 98, 100
 - control panel lights, HP LJ 1010 series 102
 - control panel lights, HP LJ 1020 106
 - control panel pages 101
 - curled paper 119, 122
 - dropouts 113
 - drum rotation check 126
 - faded areas 120
 - fatal errors, HP LJ 1010 series printers 105
 - feeding problems 122
 - half self-test 124
 - jams, clearing 42, 108
 - lines 114
 - loose toner 116
 - LPT ports 99
 - media 22
 - multifeeds 122
 - print cartridges 111
 - print quality 111
 - printing 98, 99
 - repetitive image defect ruler 129
 - scattered toner 119
 - skewed pages 118, 122
 - smearred toner 115

- smears 115
- software installation 99
- specks 113
- spots 115
- water droplets 121
- white stripes 120
- wrinkled pages 121
- two-way communications 47, 49
- type, setting media 26

U

- unplugging printer 64
- USB port
 - locating on LJ 1010 series 5
 - locating on LJ 1020 printer 6
- USB ports
 - operations 47
- user-replaceable parts 35, 68

V

- vacuums, cautions against 32
- ventilation requirements 18
- vertical defects, troubleshooting 117
- vertical lines, troubleshooting 114
- vertical white stripes, troubleshooting 120
- VIDEO signals 60
- voltage
 - high-voltage power supply 53
 - overvoltage protection 53
 - part numbers 137
 - power supplies 53

W

- WAIT period 60
- warranty
 - extended 12
 - refilled cartridges, impact on 13
- waste toner receptacle 56
- water on pages, troubleshooting 121
- wave, troubleshooting 119, 122
- websites, ordering parts 134
- weight
 - print cartridge 111
- wiring diagram 130
- wrapping jams 58

wrinkled pages, troubleshooting
121, 122
writing stage, image formation
process 55

© 2005 Hewlett-Packard Development Company, L.P.

www.hp.com



Q5911-90945