



LaserJet Pro M701/M706

Repair Manual



www.hp.com/support/ljM701
www.hp.com/support/ljM706



HP LaserJet Pro M701/M706

Repair Manual

Copyright and License

© 2014 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Edition 1, 02/2014

Part number: B6S00-90903


Trademark Credits


Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.


Microsoft®, Windows®, Windows® XP, and Windows Vista® are U.S. registered trademarks of Microsoft Corporation.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Conventions used in this guide

 **TIP:** Tips provide helpful hints or shortcuts.

 **NOTE:** Notes provide important information to explain a concept or to complete a task.

 **CAUTION:** Cautions indicate procedures that you should follow to avoid losing data or damaging the product.


 **WARNING!** Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Removal and replacement	1
Removal and replacement strategy	2
Introduction	2
Required tools	2
Types of screws	3
Service approach	3
Before performing service	3
After performing service	4
Parts removal order	5
Customer self-repair parts	6
Tray 1 roller kit	6
Tray 2 roller kit	10
Tray 3 roller kit	13
External doors, covers, and panels	16
Right cover assembly	16
Lower back cover	17
Rear-cover assembly	17
Top cover	19
Left cover	21
Face-down cover	22
Tray 2	22
Tray 3	23
Right front cover	24
Right cassette cover	25
Right handle cover	25
Multi-purpose tray cover assembly	27
Cartridge door assembly	29
Control panel	36
Internal assemblies	40
Transfer roller	40
Laser/scanner	40
Fuser	43

Fuser motor	43
Right fan	44
Left fan	46
Registration unit	48
Paper-feed assembly	50
Printed circuit assemblies (PCAs)	52
DC controller PCA	52
Formatter PCA	54
Formatter stay	55
High-voltage power supply	56
Low-voltage power supply PCA	63
Duplexer	68
Duplexer	68
Duplexer left cover	68
Duplexer right cover	69
Duplexer top cover	70
Duplexer rear cover	71
Duplex drive assembly	72
Duplexer driver PCA	80
Duplexer fan	81
Registration sensor photoreceiver assembly	84
Registration sensor LED assembly	89
500-sheet feeder	96
500-sheet feeder front cover	96
500-sheet feeder left cover	97
500-sheet feeder right cover	97
500-sheet feeder cassette cover	98
500-sheet feeder paper-pickup unit	99
500-sheet feeder lifter drive unit	100
500-sheet feeder drive unit	101
500-sheet feeder drive PCA	105
500-sheet feeder pickup motor	106
2 Parts and diagrams	109
Order parts by authorized service providers	109
Service kit parts	109
Whole-unit replacement part numbers	110
Supplies and accessories part numbers	111
Related documentation and software	111
How to use the parts lists and diagrams	112
Fasteners used in this product	113

Assembly locations	114
Covers	116
Internal components	118
PCAs	124
500-sheet feeder, cassette, external panels, and covers	126
500-sheet feeder internal components	128
Duplexer external covers	130
Duplexing main body	132
Alphabetical parts list	136
Numerical parts list	140

Index	145
--------------------	------------

List of tables

Table 2-1	Order parts, accessories, and supplies	109
Table 2-2	Repair kits	109
Table 2-3	Whole-unit replacement part numbers	110
Table 2-4	Related documentation and software	111
Table 2-5	External panels and covers	117
Table 2-6	Internal components (1 of 3)	119
Table 2-7	Internal components (2 of 3)	121
Table 2-8	Internal components (3 of 3)	123
Table 2-9	PCA assembly	125
Table 2-10	500-sheet feeder, cassette, external panels, and covers	127
Table 2-11	500-sheet feeder internal components	129
Table 2-12	Duplexer external covers	131
Table 2-13	Duplexing main body (1 of 2)	133
Table 2-14	Duplexing main body (2 of 2)	135
Table 2-15	Alphabetical parts list	136
Table 2-16	Numerical parts list	140

List of figures

Figure 1-1	Screwdrivers	2
Figure 1-2	Parts removal order	5
Figure 1-3	Remove the Tray 1 pickup roller (1 of 3)	6
Figure 1-4	Remove the Tray 1 pickup roller (2 of 3)	7
Figure 1-5	Remove the Tray 1 pickup roller (3 of 3)	7
Figure 1-6	Remove the Tray 1 separation pad (1 of 4)	8
Figure 1-7	Remove the Tray 1 separation pad (2 of 4)	8
Figure 1-8	Remove the Tray 1 separation pad (3 of 4)	9
Figure 1-9	Remove the Tray 1 separation pad (4 of 4)	9
Figure 1-10	Remove the Tray 2 pickup roller (1 of 3)	10
Figure 1-11	Remove the Tray 2 pickup roller (2 of 3)	10
Figure 1-12	Remove the Tray 2 pickup roller (3 of 3)	11
Figure 1-13	Remove the Tray 2 separation pad (1 of 4)	11
Figure 1-14	Remove the Tray 2 separation pad (2 of 4)	12
Figure 1-15	Remove the Tray 2 separation pad (3 of 4)	12
Figure 1-16	Remove the Tray 2 separation pad (4 of 4)	13
Figure 1-17	Remove the Tray 3 feed roller 1 (1 of 5)	13
Figure 1-18	Remove the Tray 3 feed roller 1 (2 of 5)	14
Figure 1-19	Remove the Tray 3 feed roller 1 (3 of 5)	14
Figure 1-20	Remove the Tray 3 feed roller 2 (4 of 5)	15
Figure 1-21	Remove the Tray 3 feed roller 2 (5 of 5)	15
Figure 1-22	Remove the right cover (1 of 2)	16
Figure 1-23	Remove the right cover (2 of 2)	16
Figure 1-24	Remove the lower back cover	17
Figure 1-25	Remove the rear-cover assembly (1 of 2)	18
Figure 1-26	Remove the rear-cover assembly (2 of 2)	18
Figure 1-27	Remove the top cover (1 of 2)	19
Figure 1-28	Remove the top cover (2 of 2)	20
Figure 1-29	Remove the left cover (1 of 2)	21
Figure 1-30	Remove the left cover–tab locations (2 of 2)	21
Figure 1-31	Remove the face-down cover	22
Figure 1-32	Remove Tray 2	22

Figure 1-33	Remove Tray 3	23
Figure 1-34	Remove the right front cover	24
Figure 1-35	Remove the right cassette cover	25
Figure 1-36	Remove the right handle cover (1 of 2)	26
Figure 1-37	Remove the right handle cover (2 of 2)	26
Figure 1-38	Remove the multi-purpose cover (1 of 5)	27
Figure 1-39	Remove the multi-purpose cover (2 of 5)	27
Figure 1-40	Remove the multi-purpose cover (3 of 5)	28
Figure 1-41	Remove the multi-purpose cover (4 of 5)	28
Figure 1-42	Remove the multi-purpose cover (5 of 5)	29
Figure 1-43	Remove the cartridge door unit (1 of 13)	29
Figure 1-44	Remove the cartridge door unit (2 of 13)	30
Figure 1-45	Remove the cartridge door unit (3 of 13)	30
Figure 1-46	Remove the cartridge door unit (4 of 13)	31
Figure 1-47	Remove the cartridge door unit (5 of 13)	31
Figure 1-48	Remove the cartridge door unit (6 of 13)	32
Figure 1-49	Remove the cartridge door unit (7 of 13)	32
Figure 1-50	Remove the cartridge door unit (8 of 13)	33
Figure 1-51	Remove the cartridge door unit (9 of 13)	33
Figure 1-52	Remove the cartridge door unit (10 of 13)	34
Figure 1-53	Remove the cartridge door unit (11 of 13)	34
Figure 1-54	Remove the cartridge door unit (12 of 13)	35
Figure 1-55	Remove the cartridge door unit (13 of 13)	35
Figure 1-56	Remove the control panel (1 of 3)	36
Figure 1-57	Remove the control panel (2 of 3)	36
Figure 1-58	Remove the control panel (3 of 3)	37
Figure 1-59	Correct orientation of control-panel grounding spring	37
Figure 1-60	Incorrect orientation of control-panel grounding spring	38
Figure 1-61	Control-panel electrical continuity check points	39
Figure 1-62	Control-panel contact point	39
Figure 1-63	Remove the transfer roller	40
Figure 1-64	Remove the laser/scanner (1 of 3)	41
Figure 1-65	Remove the laser/scanner (2 of 3)	41
Figure 1-66	Remove the laser/scanner (3 of 3)	42
Figure 1-67	Remove the fuser	43
Figure 1-68	Remove the fuser motor	44
Figure 1-69	Remove the right fan (1 of 3)	44
Figure 1-70	Remove the right fan (2 of 3)	45
Figure 1-71	Remove the right fan (3 of 3)	45
Figure 1-72	Remove the left fan (1 of 5)	46
Figure 1-73	Remove the left fan (2 of 5)	47

Figure 1-74	Remove the left fan (3 of 5)	47
Figure 1-75	Remove the left fan (4 of 5)	48
Figure 1-76	Remove the left fan (5 of 5)	48
Figure 1-77	Remove the registration unit (1 of 2)	49
Figure 1-78	Remove the registration unit (2 of 2)	49
Figure 1-79	Remove the paper-feed unit (1 of 3)	50
Figure 1-80	Remove the paper-feed unit (2 of 3)	51
Figure 1-81	Remove the paper-feed unit (3 of 3)	51
Figure 1-82	Remove the DC controller (1 of 4)	52
Figure 1-83	Remove the DC controller (2 of 4)	53
Figure 1-84	Remove the DC controller (3 of 4)	53
Figure 1-85	Remove the DC controller (4 of 4)	54
Figure 1-86	Remove the formatter PCA	54
Figure 1-87	Remove the formatter stay	55
Figure 1-88	Remove the high-voltage power supply (1 of 14)	56
Figure 1-89	Remove the high-voltage power supply (2 of 14)	57
Figure 1-90	Remove the high-voltage power supply (3 of 14)	57
Figure 1-91	Remove the high-voltage power supply (4 of 14)	58
Figure 1-92	Remove the high-voltage power supply (5 of 14)	58
Figure 1-93	Remove the high-voltage power supply (6 of 14)	59
Figure 1-94	Remove the high-voltage power supply (7 of 14)	59
Figure 1-95	Remove the high-voltage power supply (8 of 14)	60
Figure 1-96	Remove the high-voltage power supply (9 of 14)	60
Figure 1-97	Remove the high-voltage power supply (10 of 14)	61
Figure 1-98	Remove the high-voltage power supply (11 of 14)	61
Figure 1-99	Remove the high-voltage power supply (12 of 14)	62
Figure 1-100	Remove the high-voltage power supply (13 of 14)	62
Figure 1-101	Remove the high-voltage power supply (14 of 14)	63
Figure 1-102	Remove the low-voltage power supply PCA (1 of 7)	64
Figure 1-103	Remove the low-voltage power supply PCA (2 of 7)	64
Figure 1-104	Remove the low-voltage power supply PCA (3 of 7)	65
Figure 1-105	Remove the low-voltage power supply PCA (4 of 7)	65
Figure 1-106	Remove the low-voltage power supply PCA (5 of 7)	66
Figure 1-107	Remove the low-voltage power supply PCA (6 of 7)	66
Figure 1-108	Remove the low-voltage power supply PCA (7 of 7)	67
Figure 1-109	Remove the duplexer	68
Figure 1-110	Remove the duplexer left cover (1 of 2)	68
Figure 1-111	Remove the duplexer left cover (2 of 2)	69
Figure 1-112	Remove the duplexer right cover (1 of 2)	69
Figure 1-113	Remove the duplexer right cover (2 of 2)	70
Figure 1-114	Remove the duplexer top cover (1 of 3)	70

Figure 1-115	Remove the duplexer top cover (2 of 3)	71
Figure 1-116	Remove the duplexer top cover (3 of 3)	71
Figure 1-117	Remove the duplexer rear cover	72
Figure 1-118	Remove the duplex drive assembly (1 of 17)	72
Figure 1-119	Remove the duplex drive assembly (2 of 17)	73
Figure 1-120	Remove the duplex drive assembly (3 of 17)	73
Figure 1-121	Remove the duplex drive assembly (4 of 17)	74
Figure 1-122	Remove the duplex drive assembly (5 of 17)	74
Figure 1-123	Remove the duplex drive assembly (6 of 17)	75
Figure 1-124	Remove the duplex drive assembly (7 of 17)	75
Figure 1-125	Remove the duplex drive assembly (8 of 17)	76
Figure 1-126	Remove the duplex drive assembly (9 of 17)	76
Figure 1-127	Remove the duplex drive assembly (10 of 17)	77
Figure 1-128	Remove the duplex drive assembly (11 of 17)	77
Figure 1-129	Remove the duplex drive assembly (12 of 17)	78
Figure 1-130	Remove the duplex drive assembly (13 of 17)	78
Figure 1-131	Remove the duplex drive assembly (14 of 17)	79
Figure 1-132	Remove the duplex drive assembly (15 of 17)	79
Figure 1-133	Remove the duplex drive assembly (16 of 17)	80
Figure 1-134	Remove the duplex drive assembly (17 of 17)	80
Figure 1-135	Remove the duplexer driver PCA (1 of 2)	81
Figure 1-136	Remove the duplexer driver PCA (2 of 2)	81
Figure 1-137	Remove the duplexer fan (1 of 4)	82
Figure 1-138	Remove the duplexer fan (2 of 4)	82
Figure 1-139	Remove the duplexer fan (3 of 4)	83
Figure 1-140	Remove the duplexer fan (4 of 4)	83
Figure 1-141	Remove the registration sensor photoreceiver assembly (1 of 9)	84
Figure 1-142	Remove the registration sensor photoreceiver assembly (2 of 9)	84
Figure 1-143	Remove the registration sensor photoreceiver assembly (3 of 9)	85
Figure 1-144	Remove the duplex drive assembly (4 of 9)	86
Figure 1-145	Remove the duplex drive assembly (5 of 9)	86
Figure 1-146	Remove the registration sensor photoreceiver assembly (6 of 9)	87
Figure 1-147	Remove the registration sensor photoreceiver assembly (7 of 9)	87
Figure 1-148	Remove the registration sensor photoreceiver assembly (8 of 9)	88
Figure 1-149	Remove the registration sensor photoreceiver assembly (9 of 9)	88
Figure 1-150	Remove the registration sensor LED assembly (1 of 12)	89
Figure 1-151	Remove the registration sensor LED assembly (2 of 12)	89
Figure 1-152	Remove the registration sensor LED assembly (3 of 12)	90
Figure 1-153	Remove the duplex drive assembly (4 of 12)	91
Figure 1-154	Remove the duplex drive assembly (5 of 12)	91
Figure 1-155	Remove the registration sensor LED assembly (6 of 12)	92

Figure 1-156	Remove the registration sensor LED assembly (7 of 12)	92
Figure 1-157	Remove the registration sensor LED assembly (8 of 12)	93
Figure 1-158	Remove the registration sensor LED assembly (9 of 12)	93
Figure 1-159	Remove the registration sensor LED assembly (10 of 12)	94
Figure 1-160	Remove the registration sensor LED assembly (11 of 12)	94
Figure 1-161	Remove the registration sensor LED assembly (12 of 12)	95
Figure 1-162	Remove the 500-sheet feeder front cover (1 of 2)	96
Figure 1-163	Remove the 500-sheet feeder front cover (2 of 2)	96
Figure 1-164	Remove the 500-sheet feeder left cover	97
Figure 1-165	Remove the 500-sheet feeder right cover	98
Figure 1-166	Remove the 500-sheet feeder cassette cover	98
Figure 1-167	Remove the 500-sheet feeder paper-pickup unit (1 of 4)	99
Figure 1-168	Remove the 500-sheet feeder paper-pickup unit (2 of 4)	99
Figure 1-169	Remove the 500-sheet feeder paper-pickup unit (3 of 4)	100
Figure 1-170	Remove the 500-sheet feeder paper-pickup unit (4 of 4)	100
Figure 1-171	Remove the 500-sheet feeder lifter drive unit (1 of 2)	101
Figure 1-172	Remove the 500-sheet feeder lifter drive unit (2 of 2)	101
Figure 1-173	Remove the 500-sheet feeder drive unit (1 of 7)	102
Figure 1-174	Remove the 500-sheet feeder drive unit (2 of 7)	102
Figure 1-175	Remove the 500-sheet feeder drive unit (3 of 7)	103
Figure 1-176	Remove the 500-sheet feeder drive unit (4 of 7)	103
Figure 1-177	Remove the 500-sheet feeder drive unit (5 of 7)	104
Figure 1-178	Remove the 500-sheet feeder drive unit (6 of 7)	104
Figure 1-179	Remove the 500-sheet feeder drive unit (7 of 7)	105
Figure 1-180	Remove the 500-sheet feeder drive PCA	105
Figure 1-181	Remove the 500-sheet feeder pickup motor (1 of 3)	106
Figure 1-182	Remove the 500-sheet feeder pickup motor (2 of 3)	106
Figure 1-183	Remove the 500-sheet feeder pickup motor (3 of 3)	107
Figure 2-1	External assembly locations	114
Figure 2-2	External panels and covers	116
Figure 2-3	Internal components (1 of 3)	118
Figure 2-4	Internal components (2 of 3)	120
Figure 2-5	Internal components (3 of 3)	122
Figure 2-6	PCA assembly	124
Figure 2-7	500-sheet feeder, cassette, external panels, and covers	126
Figure 2-8	500-sheet feeder internal components	128
Figure 2-9	Duplexer external covers	130
Figure 2-10	Duplexing main body (1 of 2)	132
Figure 2-11	Duplexing main body (2 of 2)	134

1 Removal and replacement

- [Removal and replacement strategy](#)
- [Customer self-repair parts](#)
- [External doors, covers, and panels](#)
- [Internal assemblies](#)
- [Printed circuit assemblies \(PCAs\)](#)
- [Duplexer](#)
- [500-sheet feeder](#)

Removal and replacement strategy

Introduction

This chapter describes the removal and replacement of field-replaceable units (FRUs) only.

Replacing FRUs is generally the reverse of removal. Notes are included to provide directions for difficult or critical replacement procedures.

HP does not support repairing individual subassemblies or troubleshooting to the component level.


Never operate or service the product with the protective cover removed from the laser/scanner assembly. The reflected beam, although invisible, can damage your eyes.

The sheet-metal parts can have sharp edges. Be careful when handling sheet-metal parts.

CAUTION: Some parts are sensitive to electrostatic discharge (ESD). Look for the ESD reminder when removing product parts. Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, ground yourself by touching the sheet-metal chassis *before* touching an ESD-sensitive part.

Protect the ESD-sensitive parts by placing them in ESD pouches when they are out of the product.

CAUTION: Do not bend or fold the flat flexible cables (FFCs) during removal or installation.

 **NOTE:** To install a self-tapping screw, first turn it counterclockwise to align it with the existing thread pattern, and then carefully turn it clockwise to tighten. Do not overtighten. If a self-tapping screw-hole becomes stripped, repair the screw-hole or replace the affected assembly.

Required tools

- #2 Phillips screwdriver with a magnetic tip and a 152 mm (6 inch) shaft length
- Small flatblade screwdriver
- T-10 Torx screw driver
- Needle-nose pliers
- ESD strap (if one is available)
- Penlight


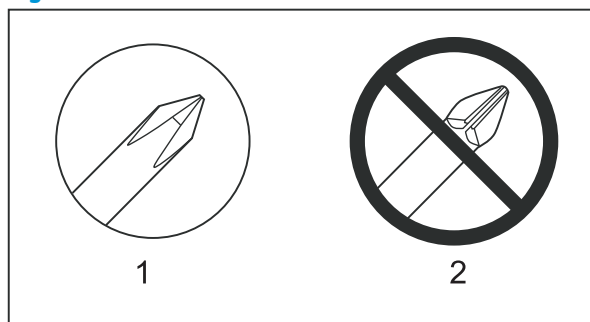
 **CAUTION:** Always use a Phillips screwdriver (callout 1). Do not use a Pozidriv® screwdriver (callout 2) or any motorized screwdriver. These can damage screws or screw threads.

Figure 1-1 Screwdrivers



CAUTION: Do *not* pull directly on the wires to disconnect them. *Always* pull on the plastic body of a connector to avoid damaging the connector wires.

Types of screws

- ! **WARNING!** Make sure that components are replaced with the correct screw type. Using an incorrect screw (for example, substituting a long screw for the correct shorter screw) can cause damage to the product or interfere with product operation. Do not intermix screws that are removed from one component with the screws that are removed from another component.

For a complete list of screw types and part numbers, see the [Parts and diagrams on page 109](#) chapter.

Service approach

Printer repair normally begins by using the product internal diagnostics and the following two-step process:

1. Isolate the problem to the major system (for example, the network, server, or the product).
2. Troubleshoot the problem by using the procedures in the *HP LaserJet Pro M701/M706 Troubleshooting Manual*.


After you locate a faulty part, the product can usually be repaired at the assembly level by replacing FRUs. Some mechanical assemblies might need to be repaired at the subassembly level. HP does not support replacement of components on the printed circuit assemblies.

Before performing service


1. Turn the product off, wait 5 seconds, and then remove the power cord, network cable, and USB cable before attempting to service the product.

CAUTION: *If this warning is not followed, severe injury and damage to the device can result.* The power must be on for certain functional checks during troubleshooting. However, the power supply must be disconnected during parts removal.

2. Remove all media.
3. Place the product on an ESD mat (if available).
4. Remove the print cartridge.

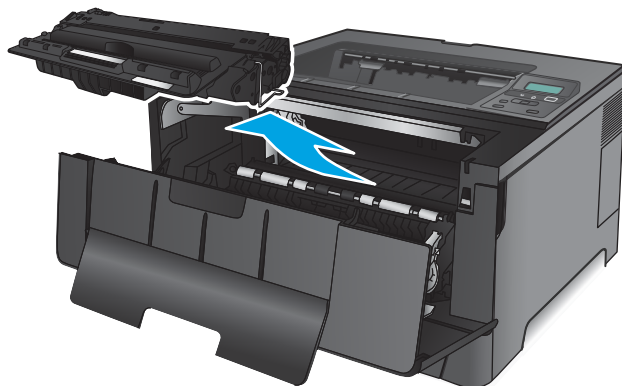

5. Remove Tray 2.

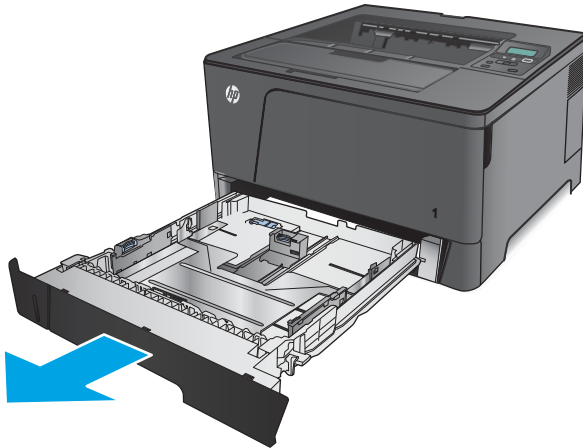


After performing service

- Return all media to the trays.
- Reinstall the print cartridge.
- Reinstall Tray 2.
- Reinstall and plug in the power cable, network cable, and USB cable, and then turn the product on.

Parts removal order

Use the following diagram to determine which parts must be removed before removing other parts.

Figure 1-2 Parts removal order

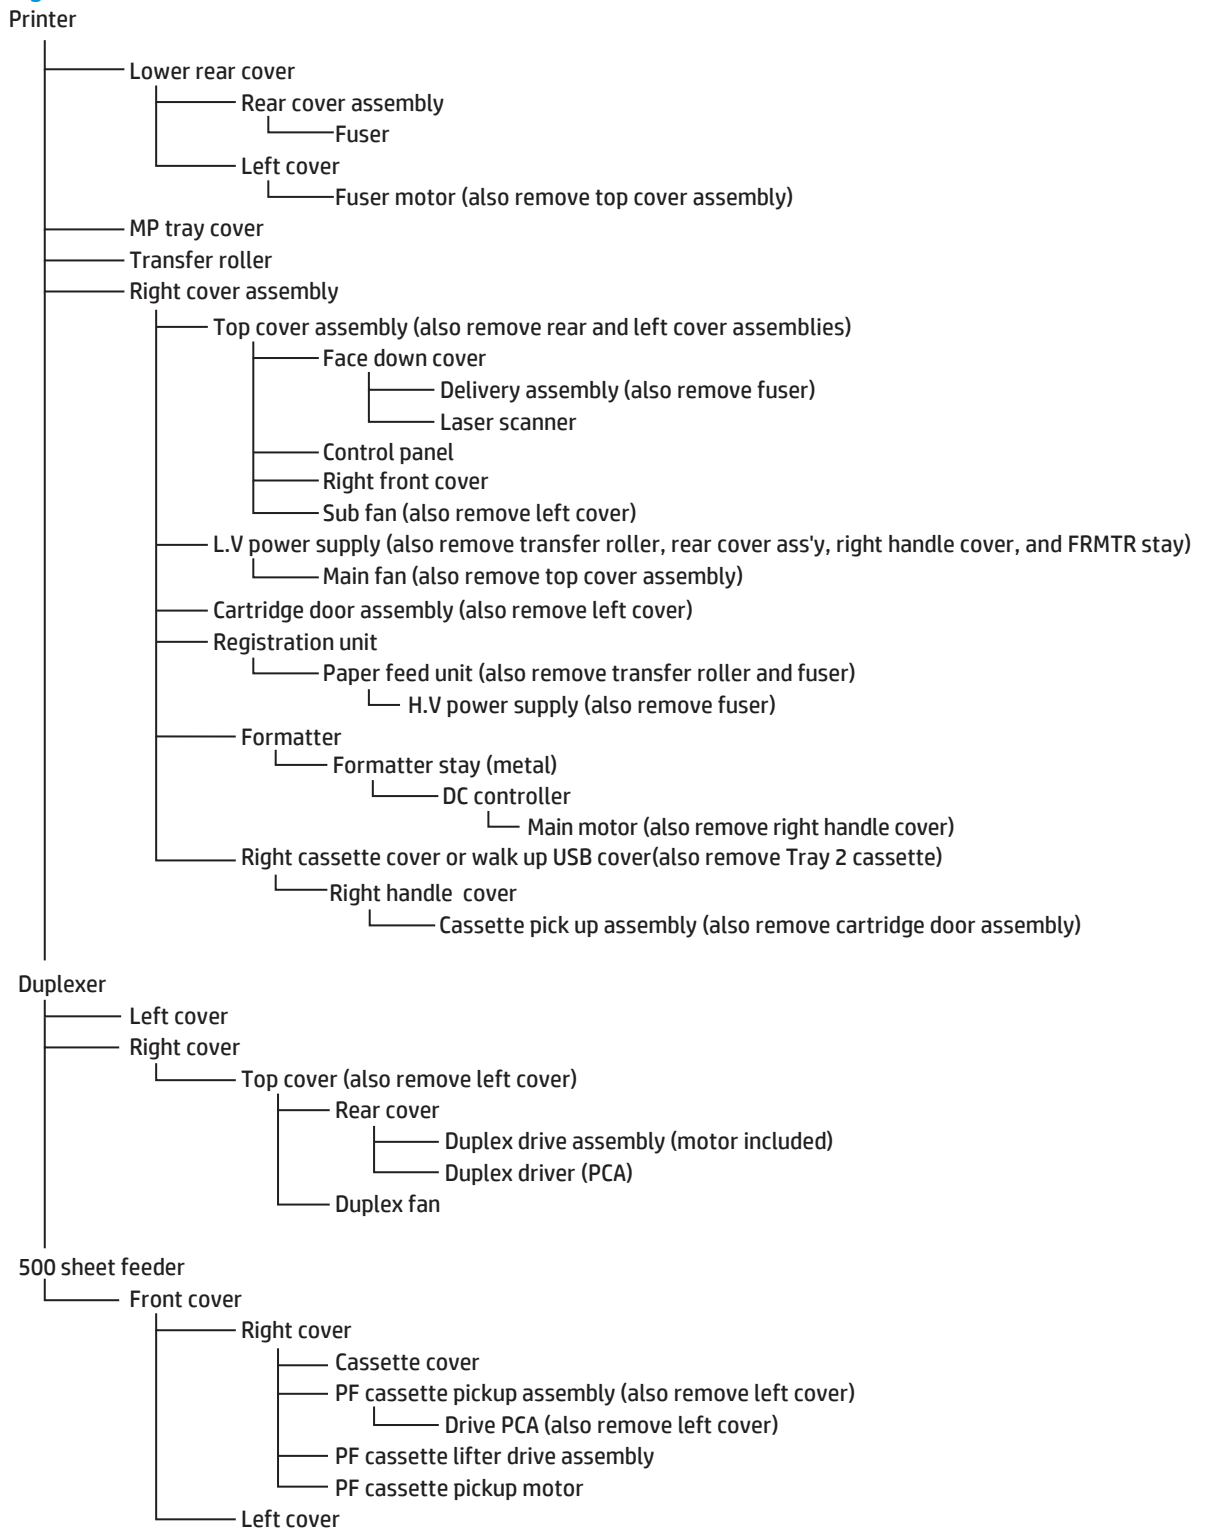

Customer self-repair parts

The user replaces print cartridges as they are depleted. The *HP LaserJet Pro M701/M706 Series Repair Manual* explains when to replace these supplies and provides instructions about replacing them. Additional instructions on other user-replaceable parts are provided in this section.

The product tracks the amount of use on the customer-replaceable supplies by keeping a page count.

Swapping supplies between products might cause a misrepresentation of supply life values and is not recommended.

Tray 1 roller kit

1. Tray 1 pickup roller
 - a. Open the cartridge door, and then locate the Tray 1 pickup roller.


Figure 1-3 Remove the Tray 1 pickup roller (1 of 3)

- b. Push out the two black tabs.

Figure 1-4 Remove the Tray 1 pickup roller (2 of 3)

- c. Remove the Tray 1 pickup roller.

Figure 1-5 Remove the Tray 1 pickup roller (3 of 3)

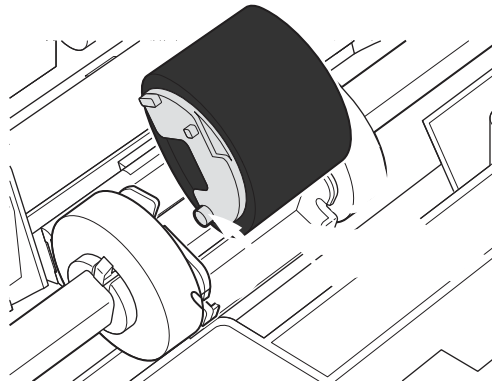

2. Tray 1 separation pad

- a. Grasp the handles and then open the multi-purpose tray door.

Figure 1-6 Remove the Tray 1 separation pad (1 of 4)

- b. Release two levers.

Figure 1-7 Remove the Tray 1 separation pad (2 of 4)



- c. Remove one screw.

Figure 1-8 Remove the Tray 1 separation pad (3 of 4)

- d. Lift the input bin and hold it up with your hand, and then remove the Tray 1 separation pad assembly.

Figure 1-9 Remove the Tray 1 separation pad (4 of 4)


Tray 2 roller kit

1. Tray 2 pickup roller
 - a. Remove Tray 2.

Figure 1-10 Remove the Tray 2 pickup roller (1 of 3)


- b. From the front of the product, look up inside the product to identify the roller.


Figure 1-11 Remove the Tray 2 pickup roller (2 of 3)

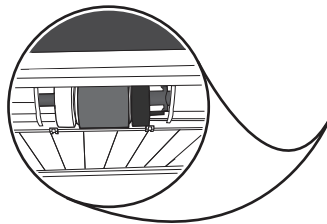

- c. Squeeze the two blue tabs (callout 1) together, push to the left, and then pull the roller down to remove it.

Figure 1-12 Remove the Tray 2 pickup roller (3 of 3)

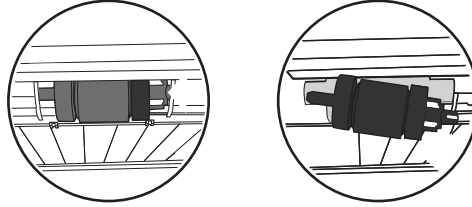


 **Reinstallation tip** Insert the left (white plastic) side of the Tray 2 pickup roller first, and then insert the right (blue plastic) side.

- 2. Tray 2 separation pad
 - a. Remove Tray 2.

Figure 1-13 Remove the Tray 2 separation pad (1 of 4)

- b. Locate the Tray 2 separation pad.

Figure 1-14 Remove the Tray 2 separation pad (2 of 4)

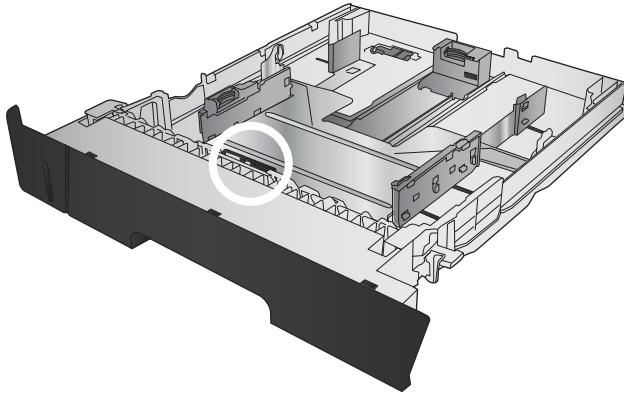

- c. Remove two screws.

Figure 1-15 Remove the Tray 2 separation pad (3 of 4)

- d. Lift up the separation pad to remove it.

Figure 1-16 Remove the Tray 2 separation pad (4 of 4)


Tray 3 roller kit

- 1. Remove Tray 3.

Figure 1-17 Remove the Tray 3 feed roller 1 (1 of 5)

2. Locate the Tray 3 feed roller 1 inside the Tray 3 cassette.

Figure 1-18 Remove the Tray 3 feed roller 1 (2 of 5)

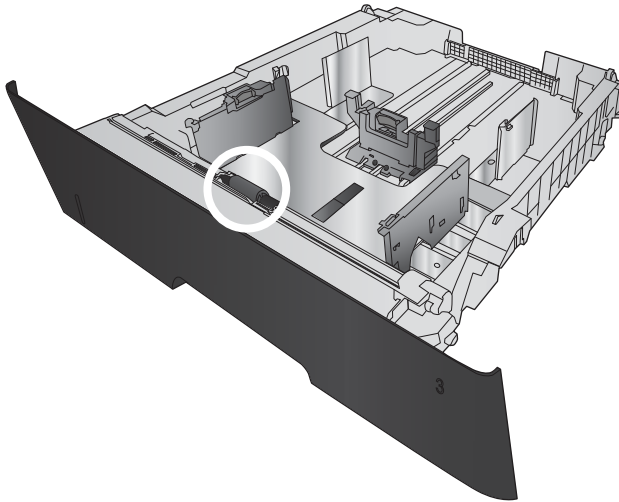


3. Remove the Tray 3 feed roller 1 located inside Tray 3.

Figure 1-19 Remove the Tray 3 feed roller 1 (3 of 5)




4. Look up inside the product to locate the Tray 3 feed roller 2 and Tray 3 pickup roller located inside the Tray 3 assembly.

Figure 1-20 Remove the Tray 3 feed roller 2 (4 of 5)

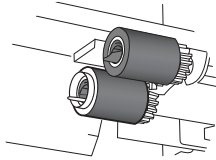

5. Remove the blue feed roller by squeezing the left side of the roller tab (callout 1), and then slide it to the left to remove the feed roller. To remove the pickup roller (callout 2), pinch the white tab, and then slide the pickup roller to the left to remove it.

Figure 1-21 Remove the Tray 3 feed roller 2 (5 of 5)

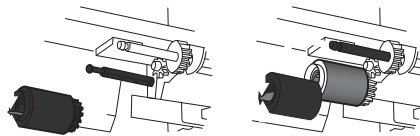

External doors, covers, and panels

Right cover assembly

1. Open the door at the rear of the right side of the product, and then remove one screw.

Figure 1-22 Remove the right cover (1 of 2)

2. Slide the right cover toward the back of the product and remove it.

Figure 1-23 Remove the right cover (2 of 2)

Lower back cover

At the back of the product, insert your finger into the hole in the cover and pull the cover outward to remove the lower back cover.

Figure 1-24 Remove the lower back cover

Rear-cover assembly

1. Before proceeding, remove the following:
 - Duplexer (if installed). See [Duplexer on page 68](#).
 - Lower back cover. See [Lower back cover on page 17](#).
2. Open the rear-cover assembly.

3. Loosen two captive screws recessed in the product.



NOTE: The two captive screws loosen but do not come out.

Figure 1-25 Remove the rear-cover assembly (1 of 2)

4. Close the rear-cover.
5. Gently pull the bottom of the rear-cover assembly out, and then pull it up to remove it.

Figure 1-26 Remove the rear-cover assembly (2 of 2)

Top cover

1. Before proceeding, remove the following:
 - Right-cover assembly. See [Right cover assembly on page 16](#).
 - Lower-back cover or duplexer. See [Lower back cover on page 17](#) or [Duplexer on page 68](#).
 - Rear-cover assembly. See [Rear-cover assembly on page 17](#).
 - Left-cover. See [Left cover on page 21](#).
2. Open the print-cartridge door.
3. Remove two screws at the rear of the top cover.

Figure 1-27 Remove the top cover (1 of 2)


4. Remove two screws at the front of the top cover (callout 1), release one tab (callout 2), release four tabs (callout 3), and then remove the top cover (callout 4).

Figure 1-28 Remove the top cover (2 of 2)

Left cover

1. Remove the Tray 2 cassette and then open the cartridge door.

 **NOTE:** Remove Tray 3 if one is installed.

 **CAUTION:** Unhook the tabs in the correct order.

2. Release three tabs (callout 1), turn the left cover (callout 2) in the direction that the arrow indicates, and then remove the left cover.

Figure 1-29 Remove the left cover (1 of 2)


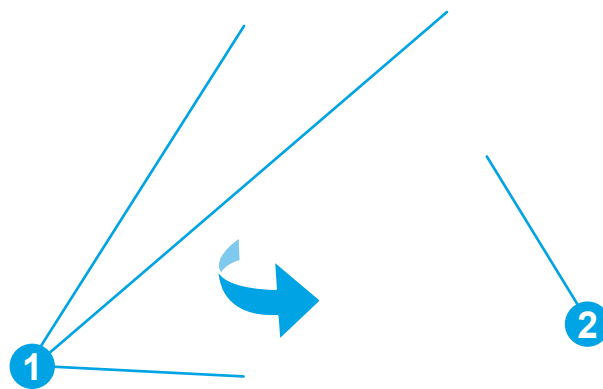


Figure 1-30 Remove the left cover—tab locations (2 of 2)

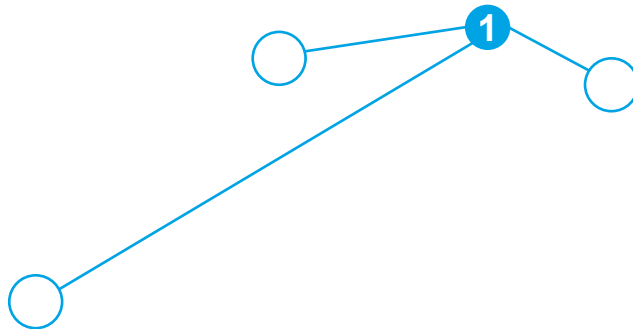

Face-down cover

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Top cover. See [Top cover on page 19](#).
2. Release three tabs, and then lift up on the face-down cover to remove.

Figure 1-31 Remove the face-down cover

Tray 2

Pull out the cassette tray, and then lift up to remove it.

Figure 1-32 Remove Tray 2

Tray 3


Pull out the cassette tray, and then lift up to remove it.

Figure 1-33 Remove Tray 3

Right front cover

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Top cover. See [Top cover on page 19](#).
2. Open the print-cartridge door.
3. Open the cartridge door assembly.
4. Release one catch (callout 1), one tab (callout 2), and then slide the right front cover (callout 3) downward and remove it.


Figure 1-34 Remove the right front cover

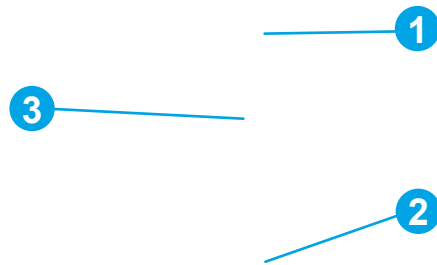

Right cassette cover

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
2. Release one tab (callout 1), and then turn the right cassette cover (callout 2) outward to remove it.

Figure 1-35 Remove the right cassette cover

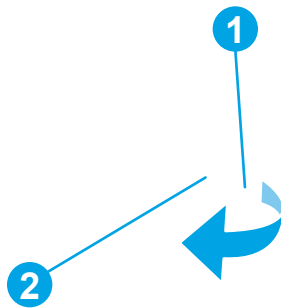

Right handle cover

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Right cassette cover. See [Right cassette cover on page 25](#).

2. Remove one black screw (callout 1), one tapping screw (callout 2), and then release one tab (callout 3).

Figure 1-36 Remove the right handle cover (1 of 2)



3. Release one tab (callout 1), and then remove the right handle cover (callout 2).

Figure 1-37 Remove the right handle cover (2 of 2)



Multi-purpose tray cover assembly

1. Open the multi-purpose tray cover.

Figure 1-38 Remove the multi-purpose cover (1 of 5)

2. Release two bosses.

Figure 1-39 Remove the multi-purpose cover (2 of 5)



3. Lift the input bin and hold it up with your hand.

Figure 1-40 Remove the multi-purpose cover (3 of 5)

4. Release two bosses.

Figure 1-41 Remove the multi-purpose cover (4 of 5)

5. Remove the multi-purpose tray cover.

Figure 1-42 Remove the multi-purpose cover (5 of 5)

Cartridge door assembly

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Left cover. See [Left cover on page 21](#).
 - Tray 2. See [Tray 2 on page 22](#).
2. Disconnect two connectors on the DC controller, and then remove them from the cable guide.

Figure 1-43 Remove the cartridge door unit (1 of 13)


3. On the left side of the product, close the cartridge door and release one spring (callout 1).

4. Use needle-nose pliers to unhook the tab (callout 2) on the plastic arm.

Figure 1-44 Remove the cartridge door unit (2 of 13)

5. Open the cartridge door.
6. Rotate the plastic arm (callout 1) down to unhook the plastic arm from the tab (callout 2).

Figure 1-45 Remove the cartridge door unit (3 of 13)

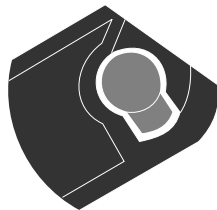

7. Remove three screws.

Figure 1-46 Remove the cartridge door unit (4 of 13)

8. Release two tabs (callout 1).

Figure 1-47 Remove the cartridge door unit (5 of 13)



9. Release one tab (callout 1), slide the cartridge guide (callout 2) toward the front of the product, and then remove it together with the gear cover (callout 3).

Figure 1-48 Remove the cartridge door unit (6 of 13)



10. Release the arm (callout 2) from the catch part (callout 1).

Figure 1-49 Remove the cartridge door unit (7 of 13)



11. Remove two screws on the right side of the product.

Figure 1-50 Remove the cartridge door unit (8 of 13)

12. On the left side of the product, use a flatblade screwdriver to release two projections that extend from the cartridge door frame into the chassis.

Figure 1-51 Remove the cartridge door unit (9 of 13)

13. Pull the print-cartridge door out slightly, and then unhook the plastic arm from the chassis.

Figure 1-52 Remove the cartridge door unit (10 of 13)

14. Remove the plastic arm from the print cartridge door.

Figure 1-53 Remove the cartridge door unit (11 of 13)

15. Slightly spread the right plate outward, and then carefully pull out the print-cartridge door assembly. Carefully feed the wiring harness through the chassis while removing the cartridge door.

Figure 1-54 Remove the cartridge door unit (12 of 13)

CAUTION: Do not damage the wiring harness on the edge of the cable hole when removing the print-cartridge door assembly.

Figure 1-55 Remove the cartridge door unit (13 of 13)

Control panel

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Top cover. See [Top cover on page 19](#).
2. Disconnect one FFC.

Figure 1-56 Remove the control panel (1 of 3)

3. Release two tabs.

Figure 1-57 Remove the control panel (2 of 3)

4. Lift the control panel away from the top cover to remove it.

Figure 1-58 Remove the control panel (3 of 3)

Control panel reinstallation tips

1. Make sure the control-panel grounding spring is oriented at a 90° angle. If the grounding spring is bent, gently bend it back to a 90° angle.

Figure 1-59 Correct orientation of control-panel grounding spring

Figure 1-60 Incorrect orientation of control-panel grounding spring

2. If the grounding spring is deformed, check the electrical continuity between the contact (callout 1) and the printer metal plate part (callout 2) while the control panel assembly is installed.

Figure 1-61 Control-panel electrical continuity check points

Figure 1-62 Control-panel contact point


Internal assemblies

Transfer roller

WARNING! The transfer roller bar has grease on its surface. Wear a thin glove, like an ESD glove, to keep the grease off your skin.

1. Open the print-cartridge door.
2. Unlatch the blue latch on the right (callout 2), and then lift up the transfer roller on the left side of the product (callout 1) to remove it.

Figure 1-63 Remove the transfer roller

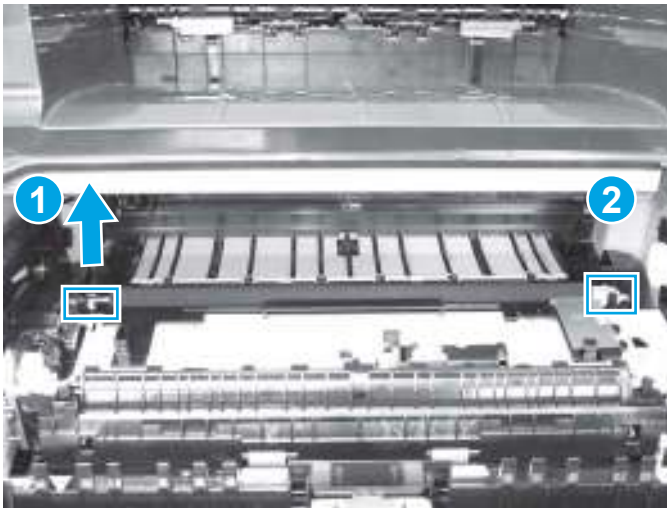

NOTE: Do *not* touch the rubber sponge on the transfer roller.

NOTE: When you reinstall the transfer roller, snap it into the left side of the product first, and then install and latch it on the right side of the product.

Laser/scanner

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Lower back cover or duplexer. See [Lower back cover on page 17](#) or [Duplexer on page 68](#).
 - Rear-cover assembly. See [Rear-cover assembly on page 17](#).
 - Top cover. See [Top cover on page 19](#).
 - Face-down cover. See [Face-down cover on page 22](#).

2. Disconnect one flat flexible cable.

Figure 1-64 Remove the laser/scanner (1 of 3)

3. Remove the foam cover, and then disconnect one connector (callout 1) and release it from the cable guide. Release the wire harness (callout 2) from the retainer on the laser/scanner assembly.



NOTE: Do *not* disconnect the connector for the wire harness (callout 2).

Figure 1-65 Remove the laser/scanner (2 of 3)

4. Remove four screws and remove the laser/scanner.

Figure 1-66 Remove the laser/scanner (3 of 3)

Fuser

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Lower back cover or duplexer. See [Lower back cover on page 17](#) or [Duplexer on page 68](#).
 - Rear-cover assembly. See [Rear-cover assembly on page 17](#).
2. Remove two screws, hold the middle of the fuser, and then pull it out of the product to remove it.

Figure 1-67 Remove the fuser

Fuser motor

1. Before proceeding, remove the following:
 - Lower back cover or duplexer. See [Lower back cover on page 17](#) or [Duplexer on page 68](#).
 - Left cover. See [Left cover on page 21](#).
 - Top cover. See [Top cover on page 19](#).

2. Remove three screws (callout 1), disconnect one connector (callout 2), and then remove the fuser motor.

Figure 1-68 Remove the fuser motor

Right fan

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Top cover. See [Top cover on page 19](#).
 - Low-voltage power supply. See [Low-voltage power supply PCA on page 63](#).
2. Disconnect three connectors (callout 1) from the DC controller, and then remove the wire harness from the cable guide (callout 2).

Figure 1-69 Remove the right fan (1 of 3)

3. Disconnect two FFCs from the DC controller, and then remove the FFCs from the cable guide.

Figure 1-70 Remove the right fan (2 of 3)

4. Release two tabs on the back-corner of the chassis (callout 1), and then release one tab on the top of the chassis (callout 2). Remove the right fan.

Figure 1-71 Remove the right fan (3 of 3)

Left fan

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Top cover. See [Top cover on page 19](#).
 - Left cover. See [Left cover on page 21](#).
2. On the left side of the product, close the cartridge door and release one spring (callout 1).
3. Use needle-nose pliers to unhook the tabs (callout 2) on the plastic arm.

Figure 1-72 Remove the left fan (1 of 5)

4. Open the cartridge door.

5. Rotate the plastic arm (callout 1) down to unhook the plastic arm from the tab (callout 2).

Figure 1-73 Remove the left fan (2 of 5)



6. Remove six screws, and then remove the fuser drive plate.

Figure 1-74 Remove the left fan (3 of 5)

7. Disconnect one connector, and then release four tabs. Remove the left fan.

Figure 1-75 Remove the left fan (4 of 5)


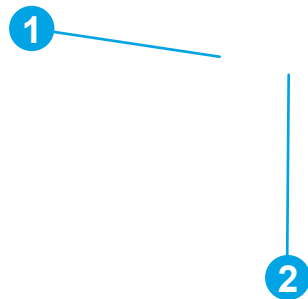
 **TIP:** When you reinstall the fuser drive plate, make sure that you insert the tab (callout 1) into the arm (callout 2).

Figure 1-76 Remove the left fan (5 of 5)



Registration unit

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
2. Open the print-cartridge door.

3. Use needle-nose pliers to release two tabs (callout 1). Release two tabs (callout 2) on the gear cover (callout 3), and then slide the gear cover forward to remove.

Figure 1-77 Remove the registration unit (1 of 2)

4. Remove two screws and then lift up the registration unit to remove.

Figure 1-78 Remove the registration unit (2 of 2)

Paper-feed assembly

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Registration unit. See [Registration unit on page 48](#).
 - Fuser. See [Fuser on page 43](#).
 - Transfer roller. See [Transfer roller on page 40](#).
2. Use a flatblade screwdriver, at the indicated location, to release the connector cover. Remove the connector cover.

Figure 1-79 Remove the paper-feed unit (1 of 3)

3. Remove the registration unit. See [Registration unit on page 48](#).

4. Unhook four tabs.

Figure 1-80 Remove the paper-feed unit (2 of 3)

5. Hold up the fuser shutter, and then remove the paper feed unit.

Figure 1-81 Remove the paper-feed unit (3 of 3)

Printed circuit assemblies (PCAs)

DC controller PCA

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Formatter PCA. See [Formatter PCA on page 54](#).
2. On the top of the product, disconnect one flat flexible cable (callout 1) from the laser/scanner (callout 2).
3. Use a flatblade screwdriver to release the ferrite block (callout 3) from the plastic holder (callout 4).

Figure 1-82 Remove the DC controller (1 of 4)

4. Release one flat flexible cable (callout 1) from the cable guide (callout 2).

Figure 1-83 Remove the DC controller (2 of 4)

5. Disconnect 14 connectors and two flat flexible cables.

Figure 1-84 Remove the DC controller (3 of 4)

6. Remove four screws and then remove the DC controller PCA.

Figure 1-85 Remove the DC controller (4 of 4)

Formatter PCA

1. Remove the right cover assembly. See [Right cover assembly on page 16](#).
2. Disconnect two FFCs (callout 1), remove one wire harness connector (callout 2), and then remove four screws (callout 3) to remove the formatter PCA.

Figure 1-86 Remove the formatter PCA

Formatter stay

1. Before proceeding, remove the following:
 - Formatter PCA. See [Formatter PCA on page 54](#).
2. Remove four screws, and then remove the formatter stay.

Figure 1-87 Remove the formatter stay

High-voltage power supply



NOTE: You do *not* need to remove the cartridge door unit to remove the high-voltage power supply, but you must remove the registration unit.

1. Before proceeding, remove the following:
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Formatter PCA. See [Formatter PCA on page 54](#).
 - Lower back cover or duplexer. See [Lower back cover on page 17](#) or [Duplexer on page 68](#).
 - Rear-cover assembly. See [Rear-cover assembly on page 17](#).
 - Top cover. See [Top cover on page 19](#).
 - Left cover. See [Left cover on page 21](#).
 - Transfer roller. See [Transfer roller on page 40](#).
 - Registration unit. See [Registration unit on page 48](#).
 - Paper feed unit. See [Paper-feed assembly on page 50](#).
 - Fuser. See [Fuser on page 43](#).
2. Use a flatblade screwdriver to release the connector cover. Put the point of the screwdriver at the indicated location and then remove the connector cover.

Figure 1-88 Remove the high-voltage power supply (1 of 14)

3. Remove the registration unit. See [Registration unit on page 48](#).

4. Unhook four tabs, and then remove the paper feed unit.

Figure 1-89 Remove the high-voltage power supply (2 of 14)

5. At the back of the product, pull the plastic cover toward you and unhook two springs. Flex the plastic cover by pressing the two sides inward, and then remove it from the back of the product.

Figure 1-90 Remove the high-voltage power supply (3 of 14)

6. From the back of the product, unhook the front tab on the guide on the left side of the product.


 **NOTE:** This tab is the one farthest from you.

Figure 1-91 Remove the high-voltage power supply (4 of 14)

7. Unhook the rear tab.


 **NOTE:** This tab is the one closest to you.


Figure 1-92 Remove the high-voltage power supply (5 of 14)

8. From the back lower left of the product, slightly turn the guide upward and move it to the left to remove it.

Figure 1-93 Remove the high-voltage power supply (6 of 14)

9. Unhook two tabs on the right side of the product and remove the guide.

Figure 1-94 Remove the high-voltage power supply (7 of 14)

 **TIP:** When you reinstall the guide, install the rear tab and then the front tab.

10. Unhook four tabs, and then remove the sensor flag and two bushings.

Figure 1-95 Remove the high-voltage power supply (8 of 14)


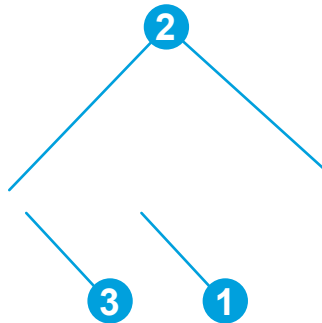
 **NOTE:** Before you reinstall the sensor flag, preset the sensor lever (callout 1), two bushings (callout 2), and one spring (callout 3).

Figure 1-96 Remove the high-voltage power supply (9 of 14)



11. Disconnect two flat flexible cables (callout 1) and one connector (callout 2) from the high-voltage power supply PCA.



NOTE: The connector (callout 2) release is on the left side of the connector. Push the connector release when disconnecting the connector.

Figure 1-97 Remove the high-voltage power supply (10 of 14)

12. Remove two screws at the front of the product.

Figure 1-98 Remove the high-voltage power supply (11 of 14)

13. Remove two screws at the back of the product, and then pull the high-voltage power supply out of the back of the chassis to remove it.

Figure 1-99 Remove the high-voltage power supply (12 of 14)

14. Pull the high-voltage power supply (callout 1) toward you slightly and tilt it down to remove it.

Figure 1-100 Remove the high-voltage power supply (13 of 14)

15. Remove the sensor lever (callout 1) and the spring (callout 2) from the high-voltage power supply.

Figure 1-101 Remove the high-voltage power supply (14 of 14)

Low-voltage power supply PCA

1. Before proceeding, remove the following:
 - Transfer roller. See [Transfer roller on page 40](#).
 - Right cover assembly. See [Right cover assembly on page 16](#).
 - Formatter PCA. See [Formatter PCA on page 54](#).
 - Formatter stay. See [Formatter stay on page 55](#).
 - Rear-cover assembly. See [Rear-cover assembly on page 17](#).
 - Right handle cover. See [Right handle cover on page 25](#).
 - Top cover. See [Top cover on page 19](#).

2. Use a flatblade screwdriver to release the power supply connector cover, and then remove the power supply connector cover.

Figure 1-102 Remove the low-voltage power supply PCA (1 of 7)

3. Use a flatblade screwdriver to disconnect the power supply connector.



TIP: It is easier to disconnect the connector with the paper feed assembly removed.



NOTE: The connector release is on the left side of the connector. Push the connector release when disconnecting the connector.


Figure 1-103 Remove the low-voltage power supply PCA (2 of 7)

4. Remove one screw for the grounding wire (callout 1), and then remove four screws (callout 2). Remove the formatter PCA mounting plate.

Figure 1-104 Remove the low-voltage power supply PCA (3 of 7)

5. Remove three screws from the right-side of the product (callout 1) and four screws from the back of the product (callout 2).

Figure 1-105 Remove the low-voltage power supply PCA (4 of 7)

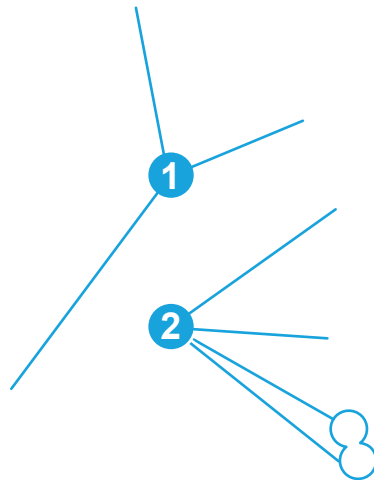

6. Remove one screw (callout 1), release three tabs (callout 2), and then remove the black cover from the DC controller PCA.

Figure 1-106 Remove the low-voltage power supply PCA (5 of 7)

7. Disconnect two connectors.

Figure 1-107 Remove the low-voltage power supply PCA (6 of 7)

8. Carefully pull the low-voltage power supply away from the chassis, making sure the power supply connector clears its hole in the chassis, and remove the low-voltage power supply.

Figure 1-108 Remove the low-voltage power supply PCA (7 of 7)

Duplexer

Duplexer

1. At the back of the product, pull out the duplexer until it stops.
2. Lift up the duplexer, and then slightly pull it toward you to remove it.

Figure 1-109 Remove the duplexer



Duplexer left cover

1. Using a flatblade screwdriver, unhook two tabs (callout 1) on the bottom of the duplexer.

Figure 1-110 Remove the duplexer left cover (1 of 2)



2. Release one tab (callout 1), and then hold up and pull the left cover (callout 2) in the direction that the arrow indicates to remove it.


Figure 1-111 Remove the duplexer left cover (2 of 2)



Duplexer right cover


1. Release three tabs (callout 1).

Figure 1-112 Remove the duplexer right cover (1 of 2)

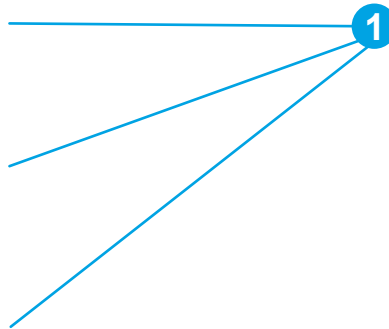

2. Release one tab (callout 1), and then remove the right cover (callout 2).

Figure 1-113 Remove the duplexer right cover (2 of 2)

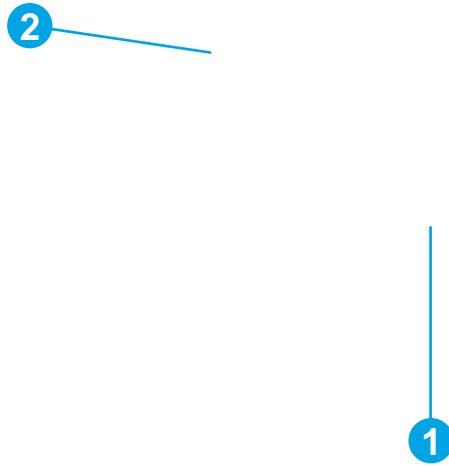

Duplexer top cover

1. Before proceeding, remove the following:
 - Duplexer left cover. See [Duplexer left cover on page 68](#).
 - Duplexer right cover. See [Duplexer right cover on page 69](#).
2. On the right side of the duplexer, remove one screw (callout 1).

Figure 1-114 Remove the duplexer top cover (1 of 3)




3. Release one boss (callout 1).

Figure 1-115 Remove the duplexer top cover (2 of 3)



4. Release two tabs (callout 1), and then remove the top cover (callout 2).

Figure 1-116 Remove the duplexer top cover (3 of 3)

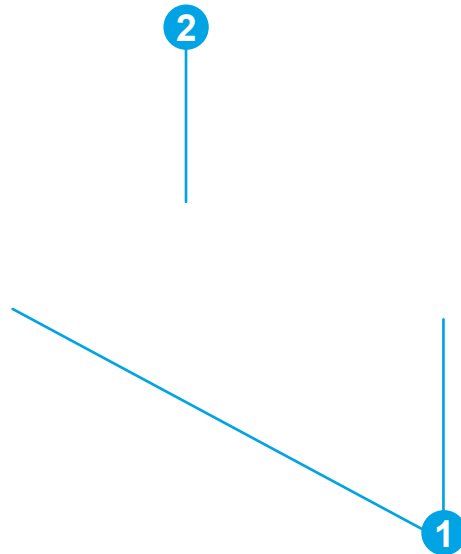


Duplexer rear cover

1. Before proceeding, remove the following:
 - Duplexer right cover. See [Duplexer right cover on page 69](#).
 - Duplexer left cover. See [Duplexer left cover on page 68](#).
 - Duplexer top cover. See [Duplexer top cover on page 70](#).

2. Release five tabs (callout 1), and then remove the rear cover (callout 2).

Figure 1-117 Remove the duplexer rear cover

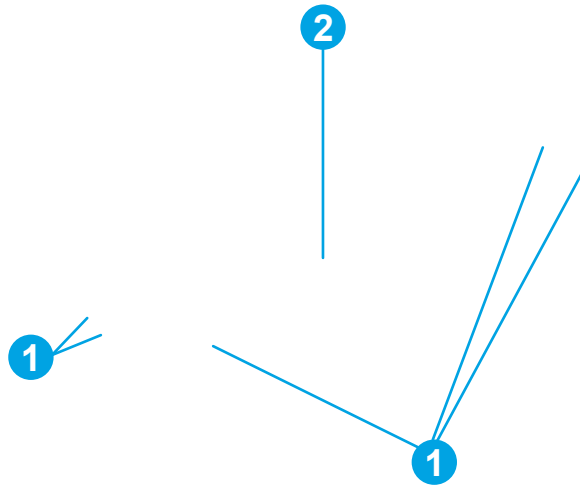

Duplex drive assembly

1. Before proceeding, remove the following:
 - Duplexer right cover. See [Duplexer right cover on page 69](#).
 - Duplexer left cover. See [Duplexer left cover on page 68](#).
 - Duplexer top cover. See [Duplexer top cover on page 70](#).
 - Duplexer rear-cover. See [Duplexer rear cover on page 71](#)
2. Remove one screw (callout 1) and the connector cover (callout 2).

Figure 1-118 Remove the duplex drive assembly (1 of 17)




3. Disconnect one connector (callout 1).

Figure 1-119 Remove the duplex drive assembly (2 of 17)



4. Remove three tapping screws (callout 1), two screws (callout 2), release two tabs (callout 3), and then remove the upper guide assembly (callout 4).

Figure 1-120 Remove the duplex drive assembly (3 of 17)

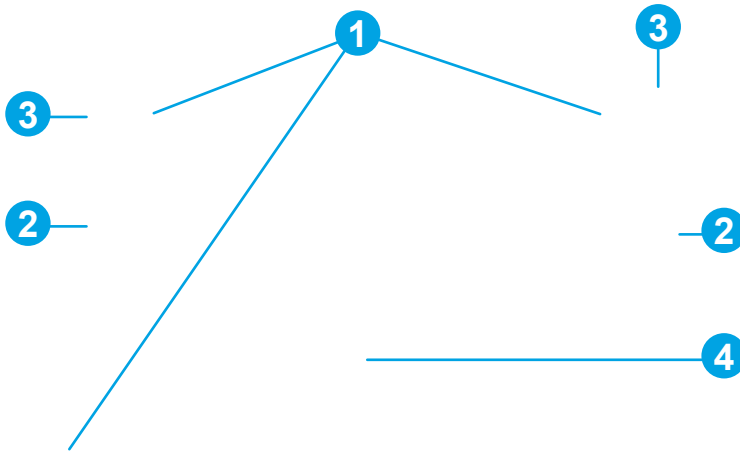

5. Remove the springs on both sides (callout 1) when removing the upper guide assembly.

Figure 1-121 Remove the duplex drive assembly (4 of 17)

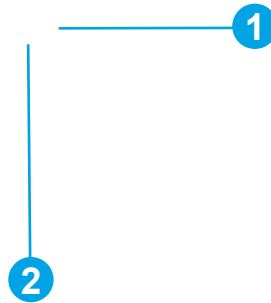


Figure 1-122 Remove the duplex drive assembly (5 of 17)




6. Make sure that the shaft (callout 1) of the LED assembly is correctly placed in the hole (callout 2) of the photoreceiver sensor assembly when reassembling the upper guide assembly.

Figure 1-123 Remove the duplex drive assembly (6 of 17)




Close-up view of LED shaft assembly.

Figure 1-124 Remove the duplex drive assembly (7 of 17)

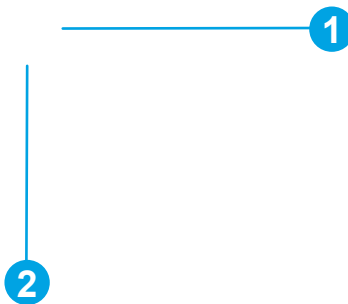

7. Release two tabs (callout 1), and then remove the pickup guide (callout 2).

Figure 1-125 Remove the duplex drive assembly (8 of 17)

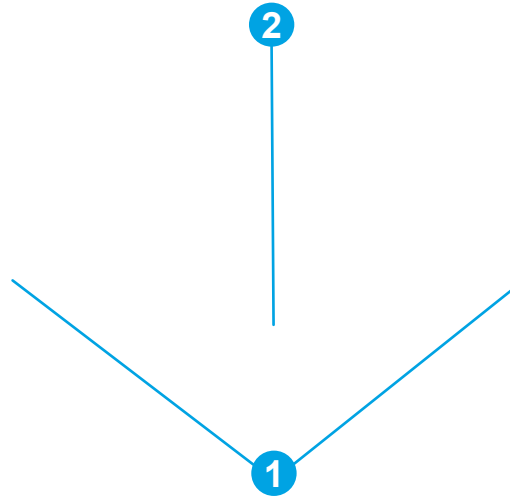


8. Remove one screw (callout 1), and then remove the spring (callout 2).

Figure 1-126 Remove the duplex drive assembly (9 of 17)




9. Remove four screws (callout 1), and then remove the lower guide (callout 2).

Figure 1-127 Remove the duplex drive assembly (10 of 17)

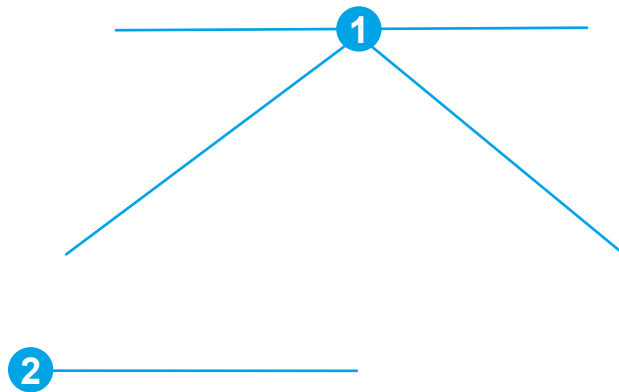


10. Release one tab (callout 1) upward, and then slide the shaft (callout 2) in the direction that the arrow indicates to remove it.

Figure 1-128 Remove the duplex drive assembly (11 of 17)

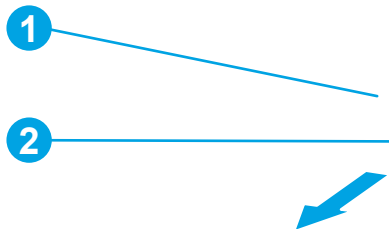


11. Hold up the gear (callout 1), and then loosen the belt (callout 2).

Figure 1-129 Remove the duplex drive assembly (12 of 17)

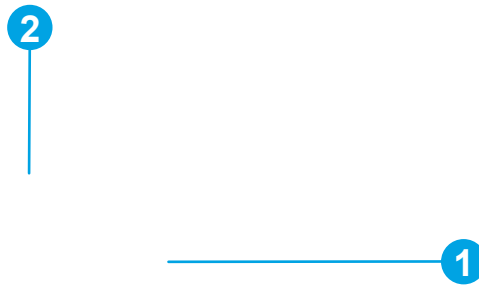


12. Turn the shaft (callout 1) in the direction that the arrow indicates, and then remove the belt (callout 3) from the gear (callout 2).

Figure 1-130 Remove the duplex drive assembly (13 of 17)

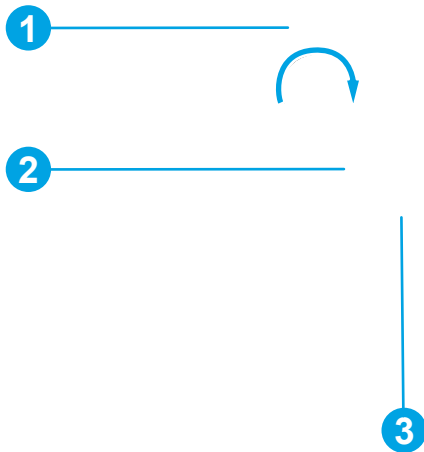


13. Remove two screws (callout 1) and the duct (callout 2).

Figure 1-131 Remove the duplex drive assembly (14 of 17)

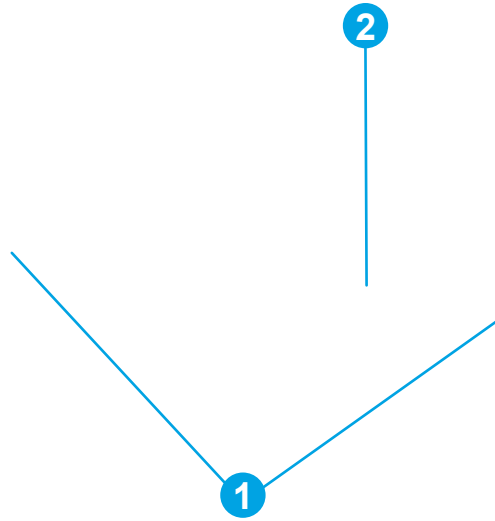


14. Disconnect two connectors (callout 1), and then release the cables (callout 2) from the cable guide.

Figure 1-132 Remove the duplex drive assembly (15 of 17)

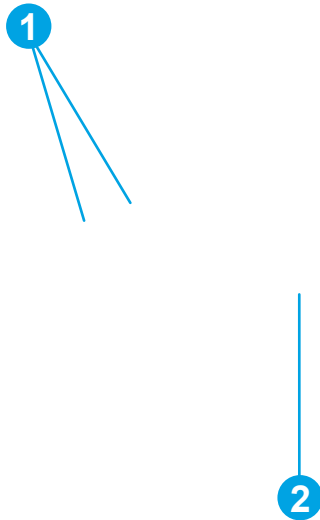


15. Remove two screws (callout 1).

Figure 1-133 Remove the duplex drive assembly (16 of 17)

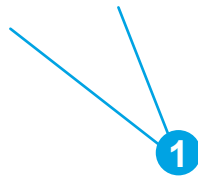

16. Remove two screws (callout 1), and then remove the duplex drive assembly (callout 2).

Figure 1-134 Remove the duplex drive assembly (17 of 17)

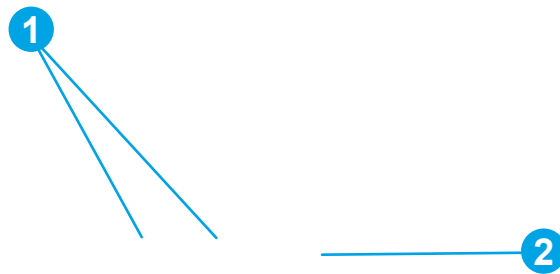


Duplexer driver PCA

1. Before proceeding, remove the following:
 - Duplexer right cover. See [Duplexer right cover on page 69](#).
 - Duplexer left cover. See [Duplexer left cover on page 68](#).
 - Duplexer top cover. See [Duplexer top cover on page 70](#).
 - Duplexer back cover. See [Duplexer rear cover on page 71](#).


2. Remove two screws (callout 1) and one duct (callout 2).

Figure 1-135 Remove the duplexer driver PCA (1 of 2)

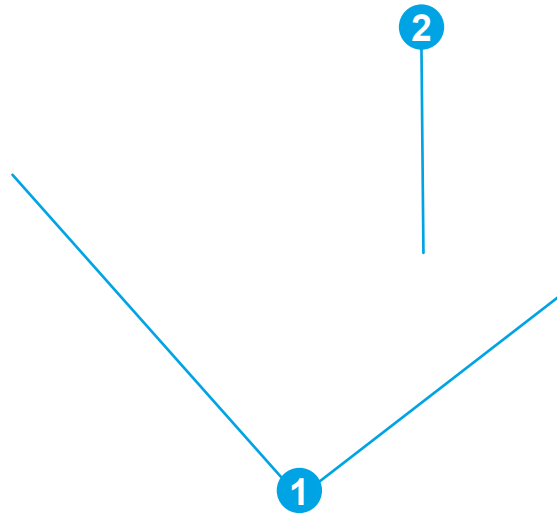

3. Disconnect seven connectors on the duplex driver (callout 1), remove four screws (callout 2), and then remove the duplex driver.

Figure 1-136 Remove the duplexer driver PCA (2 of 2)

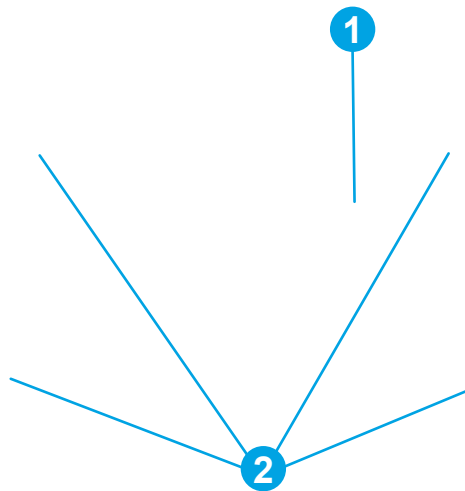


Duplexer fan

1. Before proceeding, remove the following:
 - Duplexer right cover. See [Duplexer right cover on page 69](#).
 - Duplexer left cover. See [Duplexer left cover on page 68](#).
 - Duplexer top cover. See [Duplexer top cover on page 70](#).


2. Remove two screws (callout 1), and then remove one duct (callout 2).

Figure 1-137 Remove the duplexer fan (1 of 4)

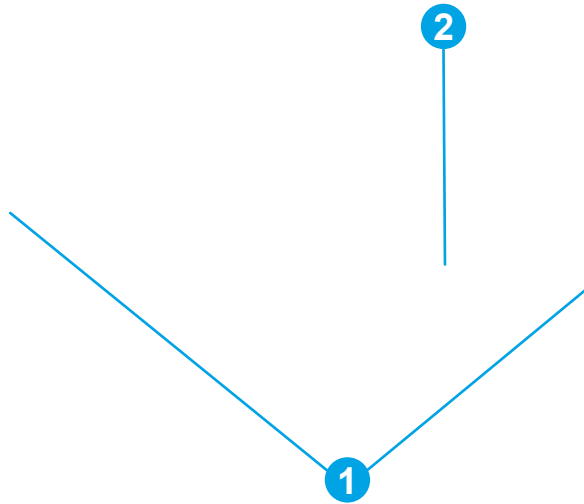

3. Disconnect three connectors (callout 1), release the cables (callout 2) from the cable guide, and then remove two screws (callout 3) and the duplex fan holder (callout 4).

Figure 1-138 Remove the duplexer fan (2 of 4)

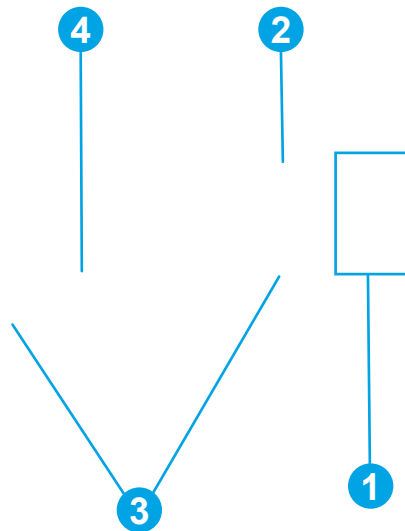


4. Release four tabs (callout 1), and then remove the duplex fan (callout 2).

Figure 1-139 Remove the duplexer fan (3 of 4)



5. Make sure that the fan holder (callout 1), the label on the fan (callout 2), and the cables (callout 3) are correctly installed when reassembling the duplex fan into the duplex fan holder.

Figure 1-140 Remove the duplexer fan (4 of 4)

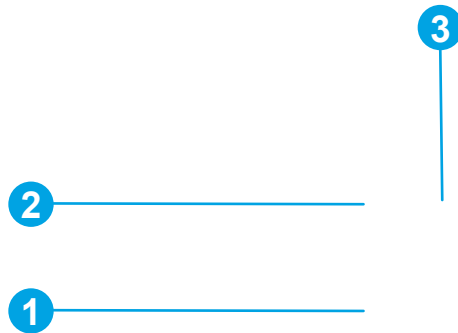

Registration sensor photoreceiver assembly

1. Remove one screw (callout 1), and then remove the connector cover (callout 2).

Figure 1-141 Remove the registration sensor photoreceiver assembly (1 of 9)




2. Disconnect one connector (callout 1).

Figure 1-142 Remove the registration sensor photoreceiver assembly (2 of 9)



3. Remove three tapping screws (callout 1), two screws (callout 2), release two tabs (callout 3), and then remove the upper guide assembly (callout 4).

Figure 1-143 Remove the registration sensor photoreceiver assembly (3 of 9)

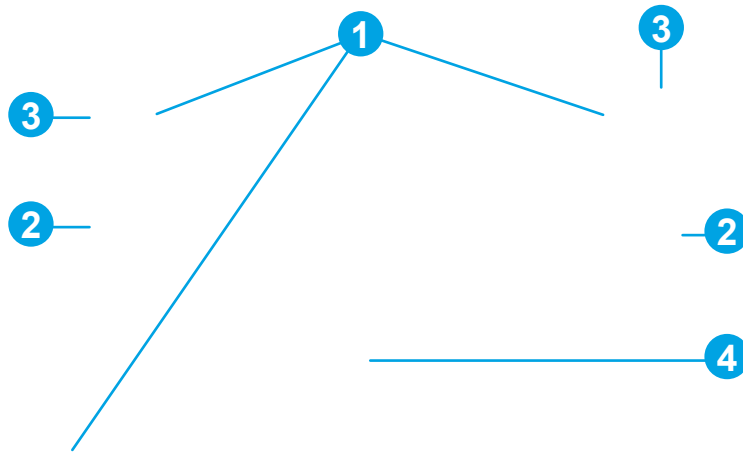

4. Remove the springs on both sides (callout 1) when removing the upper guide assembly.

Figure 1-144 Remove the duplex drive assembly (4 of 9)

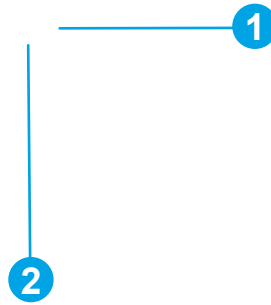


Figure 1-145 Remove the duplex drive assembly (5 of 9)




5. Make sure that the shaft (callout 1) of the LED assembly is correctly placed in the hole (callout 2) of the photoreceiver sensor assembly when reassembling the upper guide assembly.

Figure 1-146 Remove the registration sensor photoreceiver assembly (6 of 9)




Close-up view of LED shaft assembly.

Figure 1-147 Remove the registration sensor photoreceiver assembly (7 of 9)

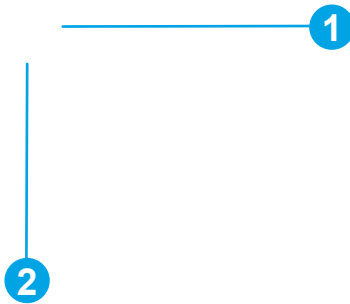

6. Remove two screws (callout 1), and then remove the registration sensor photoreceiver assembly (callout 2).

Figure 1-148 Remove the registration sensor photoreceiver assembly (8 of 9)

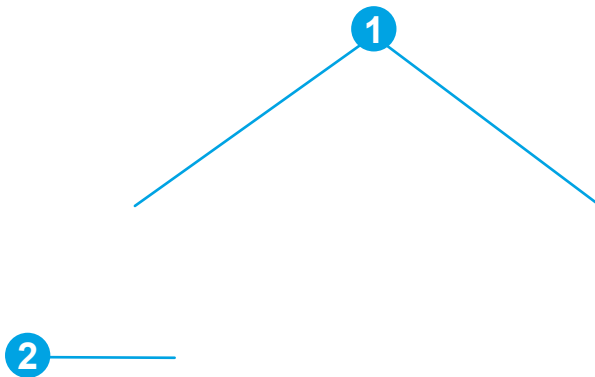


 **TIP:** Replace the LED assembly and the photoreceiver sensor assembly together at the same time.
Install the LED assembly (callout 1) against the arrow direction when reassembling the LED assembly.

Figure 1-149 Remove the registration sensor photoreceiver assembly (9 of 9)



Registration sensor LED assembly

1. Remove one screw (callout 1) and the connector cover (callout 2).

Figure 1-150 Remove the registration sensor LED assembly (1 of 12)




2. Disconnect one connector (callout 1).

Figure 1-151 Remove the registration sensor LED assembly (2 of 12)



3. Remove three tapping screws (callout 1), two screws (callout 2), release two tabs (callout 3), and then remove the upper guide assembly (callout 4).

Figure 1-152 Remove the registration sensor LED assembly (3 of 12)

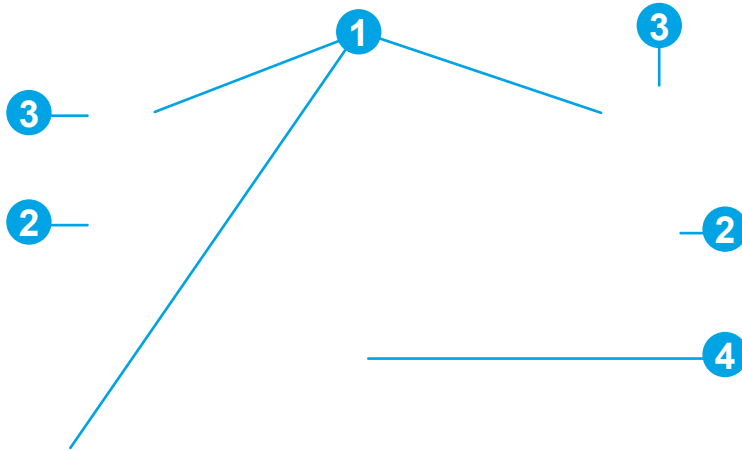

4. Remove the springs on both sides (callout 1) when removing the upper guide assembly.

Figure 1-153 Remove the duplex drive assembly (4 of 12)

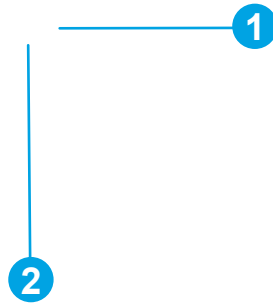


Figure 1-154 Remove the duplex drive assembly (5 of 12)




5. Make sure that the shaft (callout 1) of the LED assembly is correctly placed in the hole (callout 2) of the photoreceiver sensor assembly when reassembling the upper guide assembly.

Figure 1-155 Remove the registration sensor LED assembly (6 of 12)




Close-up view of LED shaft assembly.

Figure 1-156 Remove the registration sensor LED assembly (7 of 12)

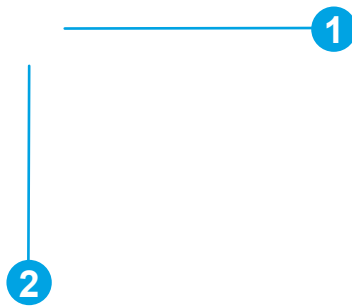

6. Release two tabs (callout 1) and remove the pickup guide (callout 2).

Figure 1-157 Remove the registration sensor LED assembly (8 of 12)

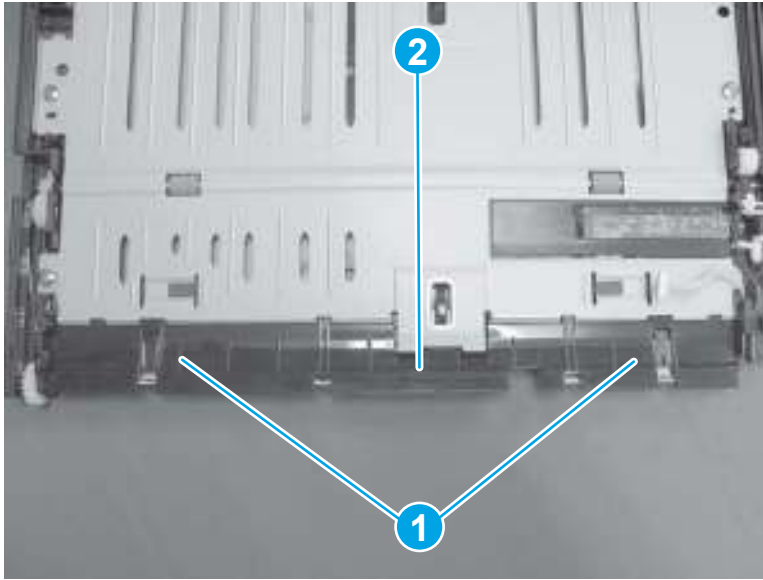


7. Remove one screw (callout 1) and the spring (callout 2).

Figure 1-158 Remove the registration sensor LED assembly (9 of 12)




8. Remove four screws (callout 1) and the lower guide (callout 2).

Figure 1-159 Remove the registration sensor LED assembly (10 of 12)

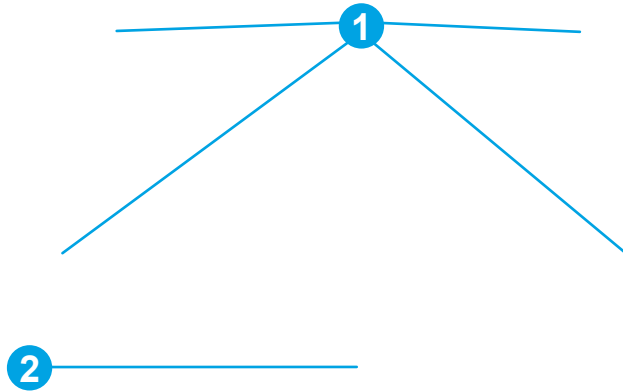

9. Remove one screw (callout 1), disconnect one connector (callout 2), release one tab (callout 3), and then remove the LED assembly (callout 4).


Figure 1-160 Remove the registration sensor LED assembly (11 of 12)

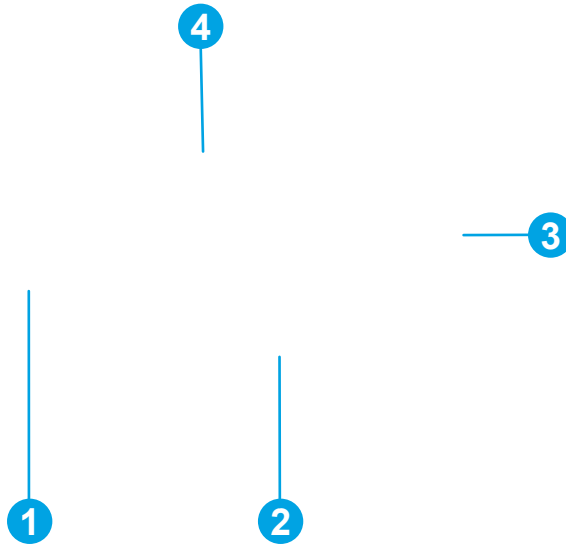

 **TIP:** Replace the LED assembly and the photoreceiver sensor assembly together at the same time.

Install the LED assembly (callout 1) against the arrow direction when reassembling the LED assembly.

Figure 1-161 Remove the registration sensor LED assembly (12 of 12)

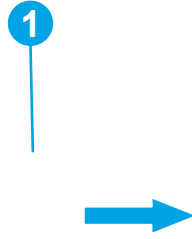

500-sheet feeder

500-sheet feeder front cover


1. Remove the 500-sheet tray.
2. Remove one screw (callout 1).

Figure 1-162 Remove the 500-sheet feeder front cover (1 of 2)



3. Unhook two tabs (callout 1), and then remove the 500-sheet feeder front cover (callout 2).


Figure 1-163 Remove the 500-sheet feeder front cover (2 of 2)

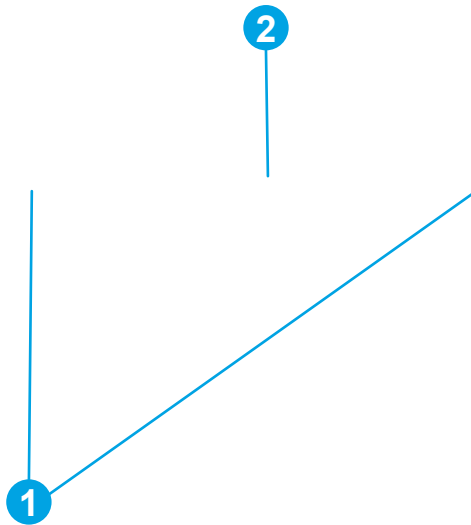


500-sheet feeder left cover

1. Remove the 500-sheet tray.
2. Before proceeding, remove the following:
 - 500-sheet feeder front cover. See [500-sheet feeder front cover on page 96](#).
3. Release five tabs (callout 1), and then remove the left cover (callout 2).

Figure 1-164 Remove the 500-sheet feeder left cover

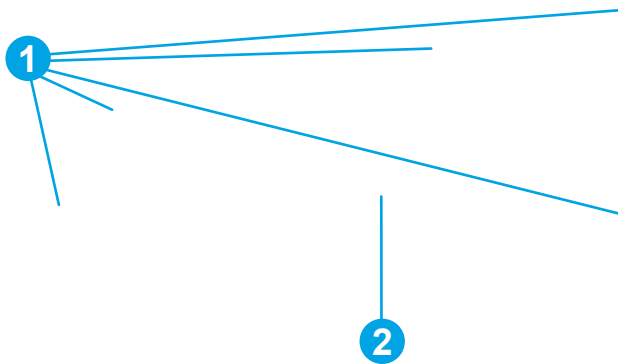


500-sheet feeder right cover

 **NOTE:** The 500-sheet feeder right cover is difficult to remove.

1. Remove the 500-sheet tray.
2. Before proceeding, remove the following:
 - 500-sheet feeder front cover. See [500-sheet feeder front cover on page 96](#).

3. Release seven tabs (callout 1), and then remove the right cover (callout 2).


Figure 1-165 Remove the 500-sheet feeder right cover

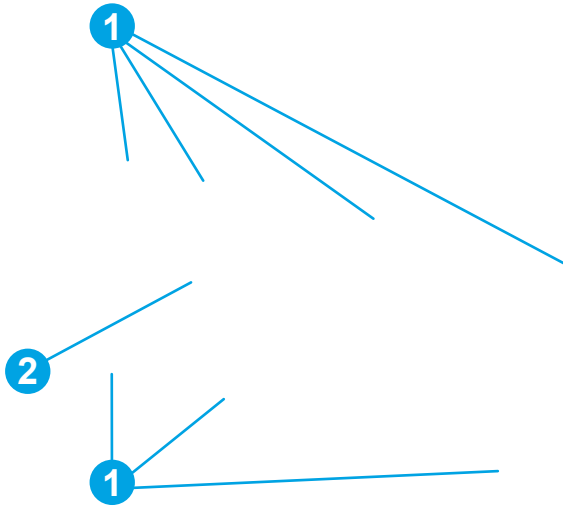

500-sheet feeder cassette cover

1. Remove the 500-sheet tray.
2. Before proceeding, remove the following:
 - 500-sheet feeder front cover. See [500-sheet feeder front cover on page 96](#).
 - 500-sheet feeder right cover. See [500-sheet feeder right cover on page 97](#).
3. Slide the cassette cover (callout 1) toward the left of the paper feeder.

Figure 1-166 Remove the 500-sheet feeder cassette cover

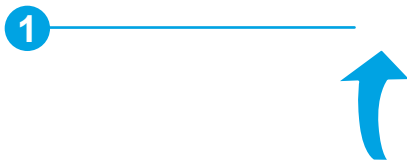

500-sheet feeder paper-pickup unit


1. Remove the 500-sheet tray.
2. Before proceeding, remove the following:
 - 500-sheet feeder front cover. See [500-sheet feeder front cover on page 96](#).
 - 500-sheet feeder right cover. See [500-sheet feeder right cover on page 97](#).
 - 500-sheet feeder left cover. See [500-sheet feeder left cover on page 97](#).
3. Unhook one spring (callout 2) from the metal hook, and then disconnect two connectors (callout 1).

Figure 1-167 Remove the 500-sheet feeder paper-pickup unit (1 of 4)



4. Release the cables (callout 1) from the cable guides (callout 2) and the cable clamps (callout 3).

Figure 1-168 Remove the 500-sheet feeder paper-pickup unit (2 of 4)

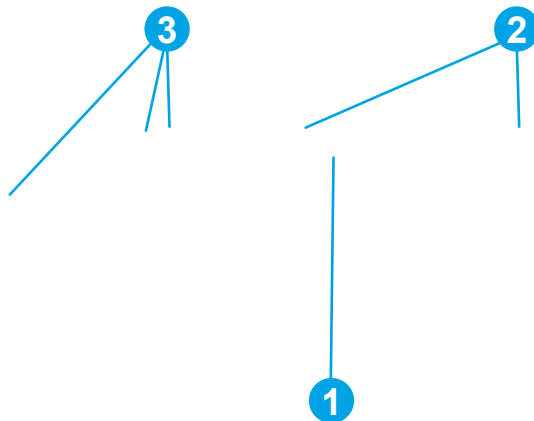


5. Remove one screw (callout 1), and then remove the connector unit (callout 2).

Figure 1-169 Remove the 500-sheet feeder paper-pickup unit (3 of 4)



6. Remove ten screws (callout 1) and one blue screw (callout 2), and then remove the paper-feed cassette pickup assembly (callout 3).

Figure 1-170 Remove the 500-sheet feeder paper-pickup unit (4 of 4)

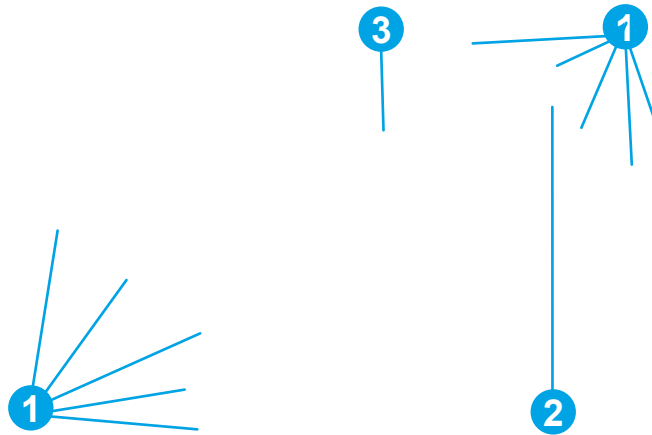

500-sheet feeder lifter drive unit

1. Remove the 500-sheet tray.
2. Before proceeding, remove the following:
 - 500-sheet feeder front cover. See [500-sheet feeder front cover on page 96](#).
 - 500-sheet feeder right cover. See [500-sheet feeder right cover on page 97](#).


- Unhook one spring (callout 1), and then disconnect one connector (callout 2).

Figure 1-171 Remove the 500-sheet feeder lifter drive unit (1 of 2)




- Remove one screw (callout 1) and one bushing (callout 2), and then remove the paper-feeder cassette lifter drive assembly (callout 3).

Figure 1-172 Remove the 500-sheet feeder lifter drive unit (2 of 2)

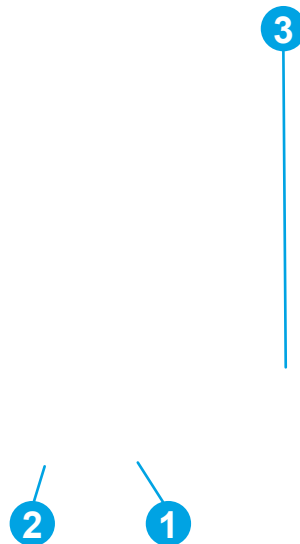

500-sheet feeder drive unit


 **NOTE:** Be careful not to lose the solenoid. It is loose.

- Remove the 500-sheet tray.
- Before proceeding, remove the following:

- 500-sheet feeder front cover. See [500-sheet feeder front cover on page 96](#).
- 500-sheet feeder right cover. See [500-sheet feeder right cover on page 97](#).
- 500-sheet feeder left cover. See [500-sheet feeder left cover on page 97](#).
- 500-sheet feeder paper pickup unit. See [500-sheet feeder paper-pickup unit on page 99](#).


3. Disconnect three connectors (callout 1).

Figure 1-173 Remove the 500-sheet feeder drive unit (1 of 7)

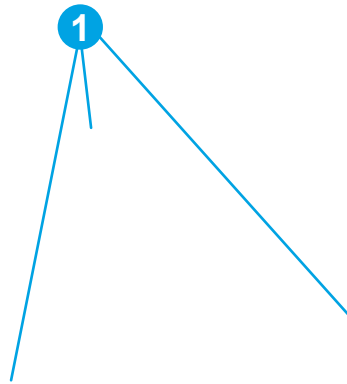

4. Release the cables (callout 1) from the cable guides (callout 2) and the cable clamps (callout 3).

Figure 1-174 Remove the 500-sheet feeder drive unit (2 of 7)

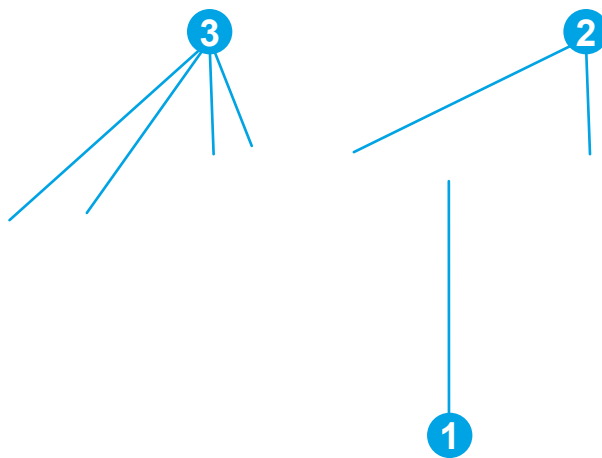


5. Remove two screws (callout 1), and then remove the 500-sheet feeder paper-pickup motor (callout 2).

Figure 1-175 Remove the 500-sheet feeder drive unit (3 of 7)



6. Unhook one tab (callout 1), and then remove one gear (callout 2).

Figure 1-176 Remove the 500-sheet feeder drive unit (4 of 7)

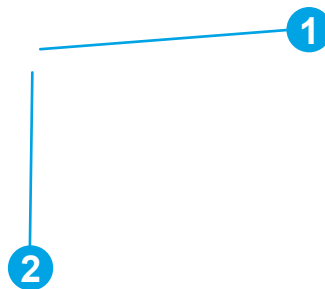


7. Remove one bushing (callout 1).

Figure 1-177 Remove the 500-sheet feeder drive unit (5 of 7)



8. Remove four screws (callout 1), and one black screw (callout 2), and then remove the paper-feed cassette pickup solenoid (callout 3) and the drive assembly (callout 4) together.

Figure 1-178 Remove the 500-sheet feeder drive unit (6 of 7)

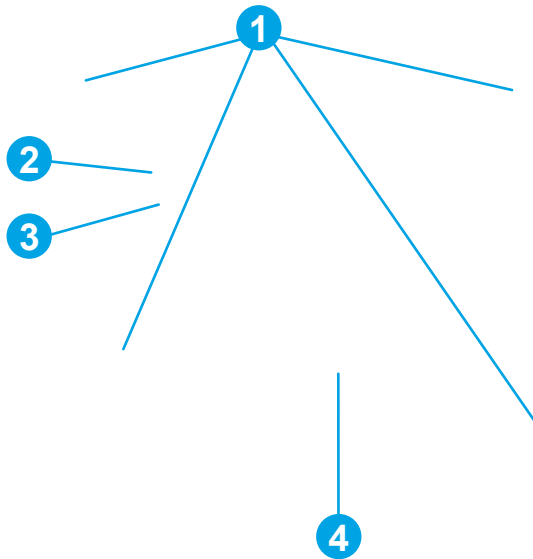

9. Remove the paper-feeder cassette pickup solenoid (callout 2) from the drive assembly (callout 1).


Figure 1-179 Remove the 500-sheet feeder drive unit (7 of 7)



500-sheet feeder drive PCA

1. Remove the 500-sheet tray.
2. Before proceeding, remove the following:
 - 500-sheet feeder front cover. See [500-sheet feeder front cover on page 96](#).
 - 500-sheet feeder right cover. See [500-sheet feeder right cover on page 97](#).
3. Disconnect seven connectors (callout 1), remove two screws (callout 2), and then remove the paper-feed driver PCA.
4. Remove the 500-sheet feeder drive PCA (callout 3).

Figure 1-180 Remove the 500-sheet feeder drive PCA

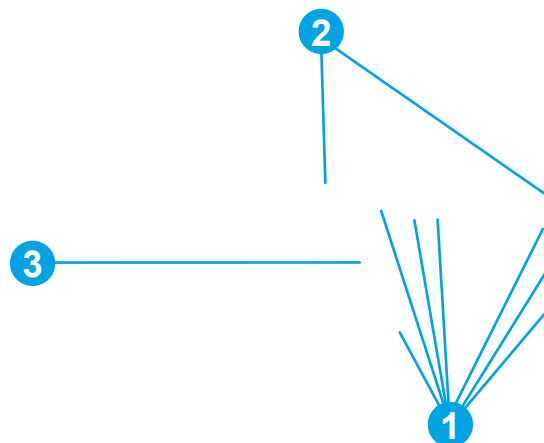

500-sheet feeder pickup motor


1. Remove the 500-sheet tray.
2. Before proceeding, remove the following:
 - 500-sheet feeder front cover. See [500-sheet feeder front cover on page 96](#).
 - 500-sheet feeder right cover. See [500-sheet feeder right cover on page 97](#).
3. Disconnect one connector (callout 1).

Figure 1-181 Remove the 500-sheet feeder pickup motor (1 of 3)



4. Release the cables (callout 1) from the cable guides (callout 2) and the cable clamps (callout 3).

Figure 1-182 Remove the 500-sheet feeder pickup motor (2 of 3)

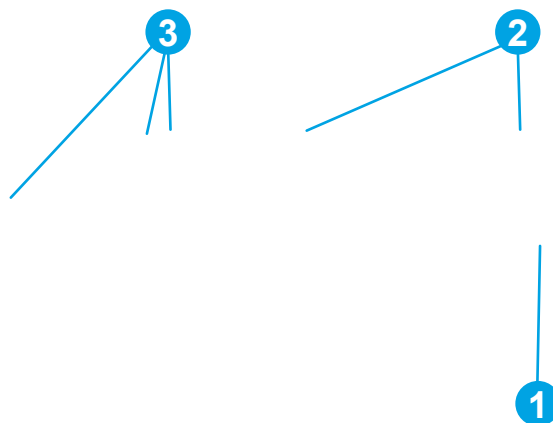

5. Remove two screws (callout 1), and then remove the paper-feeder cassette pickup motor (callout 2).

Figure 1-183 Remove the 500-sheet feeder pickup motor (3 of 3)



2 Parts and diagrams

This section describes resources for ordering parts, and for technical support and resources for ordering related documentation and software.

Order parts by authorized service providers

Table 2-1 Order parts, accessories, and supplies

Order supplies and paper	www.hp.com/go/suresupply
Order genuine HP parts or accessories	www.hp.com/buy/parts
Order through service or support providers	Contact an HP-authorized service or support provider.
Order using HP software	For information about using the HP software to order parts, accessories, and supplies, see the product user guide.

Service kit parts

Table 2-2 Repair kits

Kit part number	Description	Part number	Customer replaceable?	Self-replace option
A3E42-65018	Tray 1 Roller Kit		Y	Optional
	Roller, multi-purpose paper pick-up	RL2-0544-000		
	Multi-purpose pad assembly	RM1-2462-000		
	Tray 1 Roller Kit install guide	A3E42-90983		
A3E42-65019	Tray 2 Roller Kit		Y	Optional
	Cassette pick-up roller assembly	RM2-0644-000		
	Tray 2 separation pad	RM1-2546-000		
	Tray 2 Roller Kit Install Guide	A3E42-90984		
A3E42-65011	Tray 3 Roller Kit		Y	Mandatory
	Paper pick-up roller assembly	RM1-0036-020		
	Paper feed roller assembly	RM1-0037-020		
	Tray 3 Roller Kit install guide	A3E42-90985		
A3E42-65012	Laser Scanner Kit		N	

Table 2-2 Repair kits (continued)

Kit part number	Description	Part number	Customer replaceable?	Self-replace option
	Laser Scanner assembly	RM2-0648-000		
	Laser Scanner Install guide	A3E42-90986		
A3E42-65013	220V Fuser Kit		N	
	Fuser assembly (220 V)	RM2-0639-000		
	Recycle Guide	5851-3945		
	Fuser Install Guide	A3E42-90987		
A3E42-65014	Transfer Roller Kit		N	
	Transfer Roller assembly	RM2-5841-000		
	Transfer Roller Kit Install Guide	A3E42-90988		
A3E46-67901	Optional accessory duplex unit			
	Optional Duplexer Unit	A3E46A		
	Duplexer Installation Guide	A3E46-90901		
A3E47-67901	Optional accessory 500 Sheet Feeder Tray 3		Y	Mandatory
	Optional accessory 500 Sheet Feeder Tray 3 Product	A3E47A		
	Optional tray Installation Guide	A3E47-90901		
A3E42-65016	Service Maintenance Kit		N	
	Fusing assembly (220 V)	RM2-0639-000		
	Transfer roller assembly	RM2-5841-000		
	Roller, multi-purpose paper pick-up	RL2-0544-000		
	Multi-purpose pad assembly	RM1-2462-000		
	Cassette pick-up roller assembly	RM2-0644-000		
	Tray 2 Separation Pad	RM1-2546-000		
	Recycle Guide	5851-3945		

Whole-unit replacement part numbers

Table 2-3 Whole-unit replacement part numbers

Item	Description	Part number
HP LaserJet Pro MFP M701a Printer	220 V CN	B6500-67901 (replacement)
HP LaserJet Pro MFP M701n Printer	220 V CN	B6501-67901 (replacement)
HP LaserJet Pro MFP M706n Printer	220 V CN	B6502-67901 (replacement)
HP LaserJet Pro MFP M706n Printer	220 V AP	B6502-67902 (replacement)

Supplies and accessories part numbers

Item	Description	Part number
HP CZ192A black laser cartridge	Replacement toner cartridge	CZ192-67901
Optional accessory duplex unit		A3E46-67901
Optional accessory 500-sheet feeder, Tray 3		A3E47-67901

Related documentation and software


Table 2-4 Related documentation and software

Item	Description	Part number
<i>HP LaserJet Pro M701/M706 User Guide</i>	Product user guide	B5602-90908
<i>HP LaserJet Pro M701/M706 Repair Manual</i>	English service repair manual	B6500-90903
<i>HP LaserJet Pro M701/M706 Troubleshooting Manual</i>	English service troubleshooting manual	B6500-90904

How to use the parts lists and diagrams

The figures in this chapter show the major subassemblies in the product and their component parts. A parts list table follows each exploded-view assembly diagram. Each table lists the item number, the associated part number, and the description of each part. If a part is not listed in the table, then it is not a field replacement unit (FRU).

CAUTION: Be sure to order the correct part. When looking for part numbers for electrical components, pay careful attention to the voltage that is listed in the description column to ensure that the part number selected is for the correct product model.

 **NOTE:** In this manual, the abbreviation “PCA” stands for “printed circuit board assembly.” Components described as a PCA might consist of a single circuit board or a circuit board plus other parts, such as cables and sensors.

Fasteners used in this product


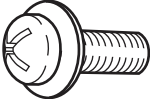
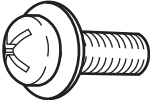
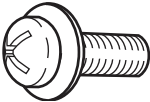
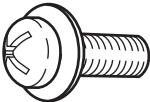
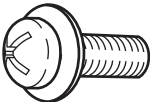
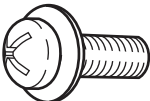

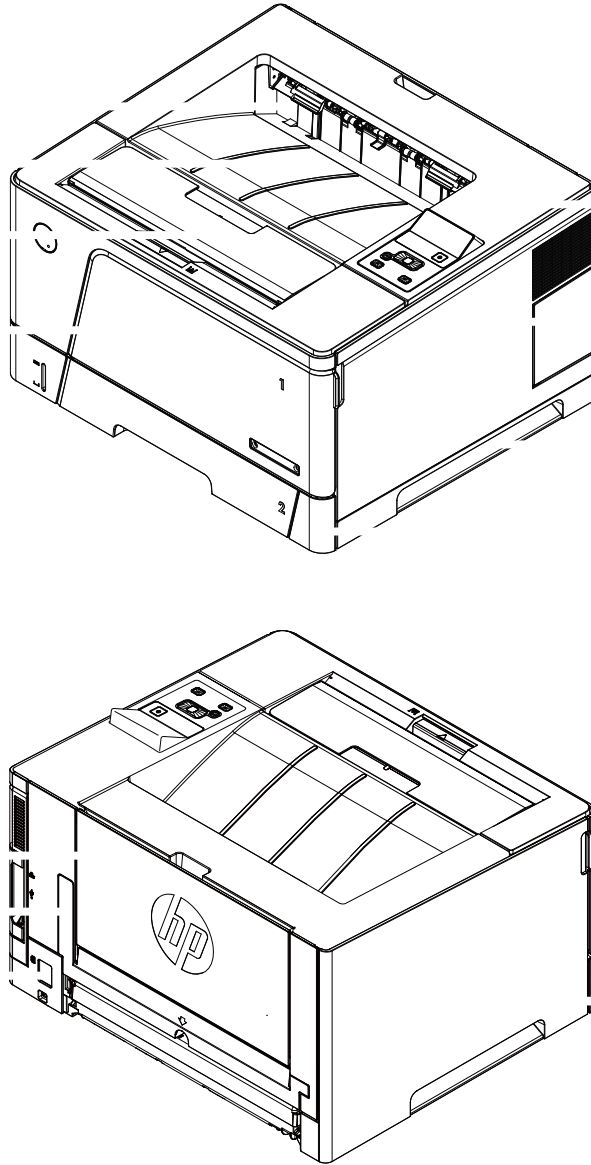
 **NOTE:** The screw illustrations in the following table are for reference only. Screws might vary in size and appearance from those shown in this table.

Illustration	Description	Size	Part number	Use
	Screw, Phillips	M3x6	0515-2908	Used to secure metal components to metal components (for example, a ground wire to the frame)
	Screw, Phillips, tapping	M3X10	0515-4671	Used to secure cover cable
	Screw, Phillips, tapping	M3X10	0515-5427	Used to secure hinge cover
	Screw, tapping, truss head	M4X14	0515-4743	Used to secure anything to plastic
	Screw, Phillips, tapping	M3X10	0515-4680	Used to secure Holder-CP ferrite
	Screw, Torx, tapping	M3X4.5	0515-547	Scanner lid



Assembly locations

Figure 2-1 External assembly locations



Item	Description	Item	Description
1	Top cover assembly	7	Lower rear cover
2	Right cover assembly	8	Rear cover assembly
3	Right handle cover	9	Multi-purpose tray cover
4	Right front cover	10	Cartridge door
5	Left cover	11	Output bin
6	Power receptacle	12	Face-down cover

Covers

Figure 2-2 External panels and covers

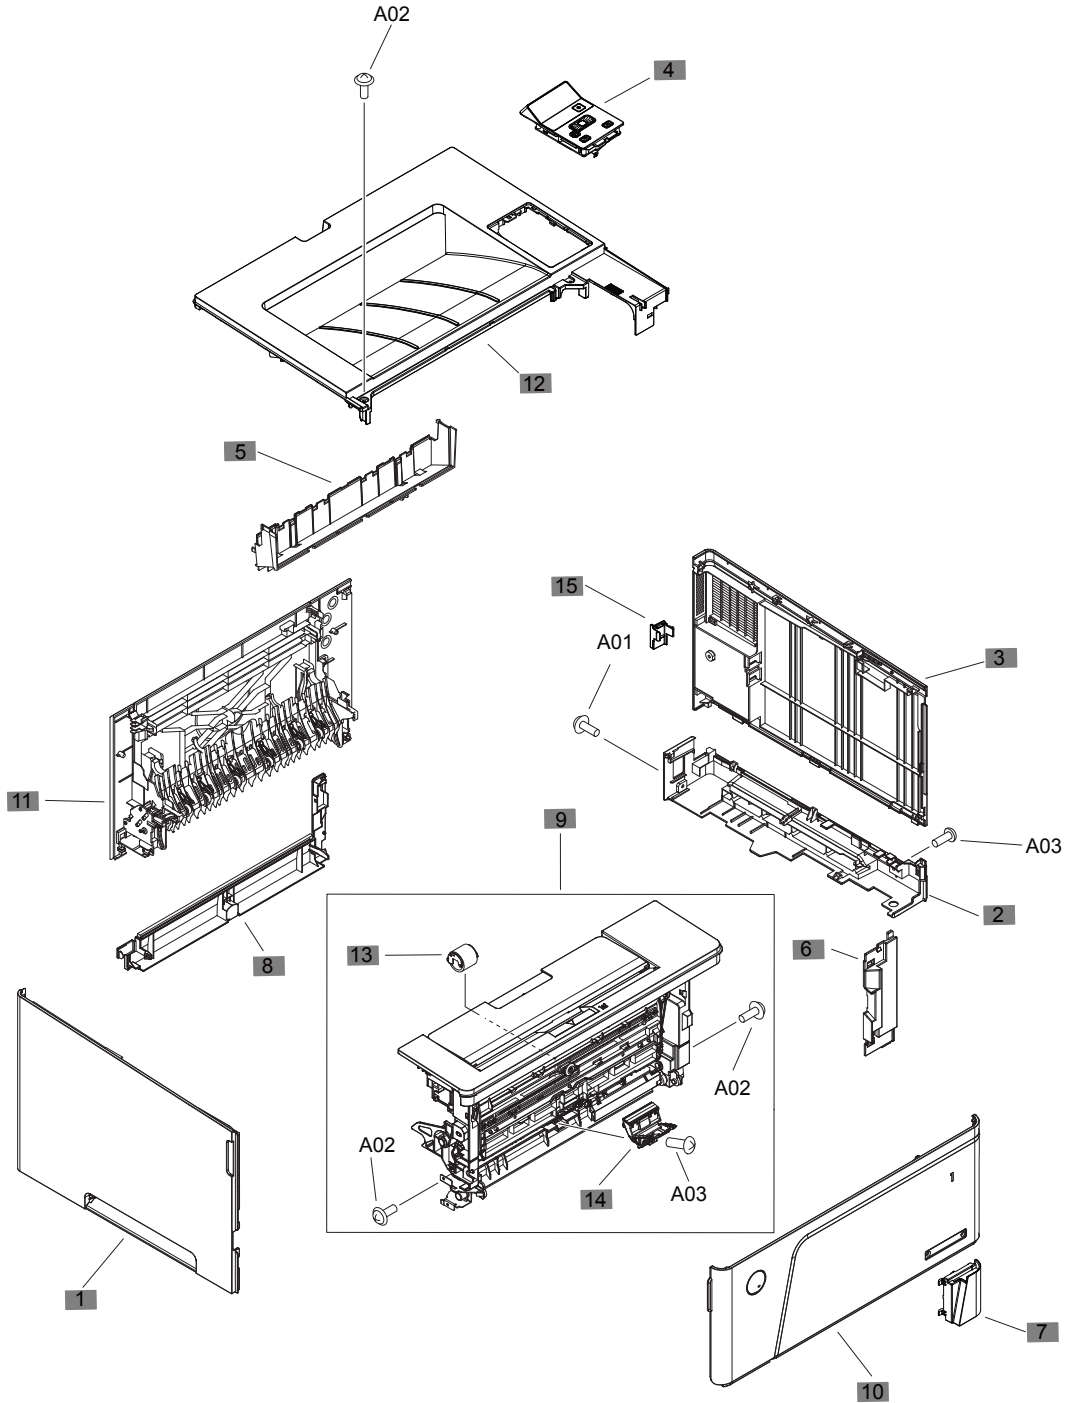


Table 2-5 External panels and covers

Ref	Description	Part number	Qty
1	Cover, left	RL2-0557-000	1
2	Cover, right handle	RC3-5758-000	1
3	Assembly, right cover	RM2-5843-000	1
4	Assembly, control panel, M701n and M706n	RM2-7526-000	1
4	Assembly, control panel, M701a	RM2-7527-000	1
5	Cover, face down	RL2-0546-000	1
6	Cover, right front	RC3-5762-000	1
7	Cover, right cassette	RC3-5781-000	1
8	Cover, rear lower	RL2-0550-000	1
9	Assembly, cartridge door	RM2-0667-000	1
10	Cover, multi-purpose tray	RM2-0625-000	1
11	Assembly, rear cover	RM2-0636-000	1
12	Cover, top	RC3-5766-000	1
13	Roller, multi-purpose tray, pickup	RL2-0544-000	1
14	Pad, multi-purpose tray, separation	RM1-2462-000	1
15	Cover, connector	RC3-5767-000	1
Not shown	HP logo, low profile round (size 35)	7121-8541	1
Not shown	Nameplate, M701a	B6S00-40001	1
Not shown	Nameplate, M701n	B6S01-40001	1
Not shown	Nameplate, M706n	B6S02-40001	1

Internal components

Figure 2-3 Internal components (1 of 3)

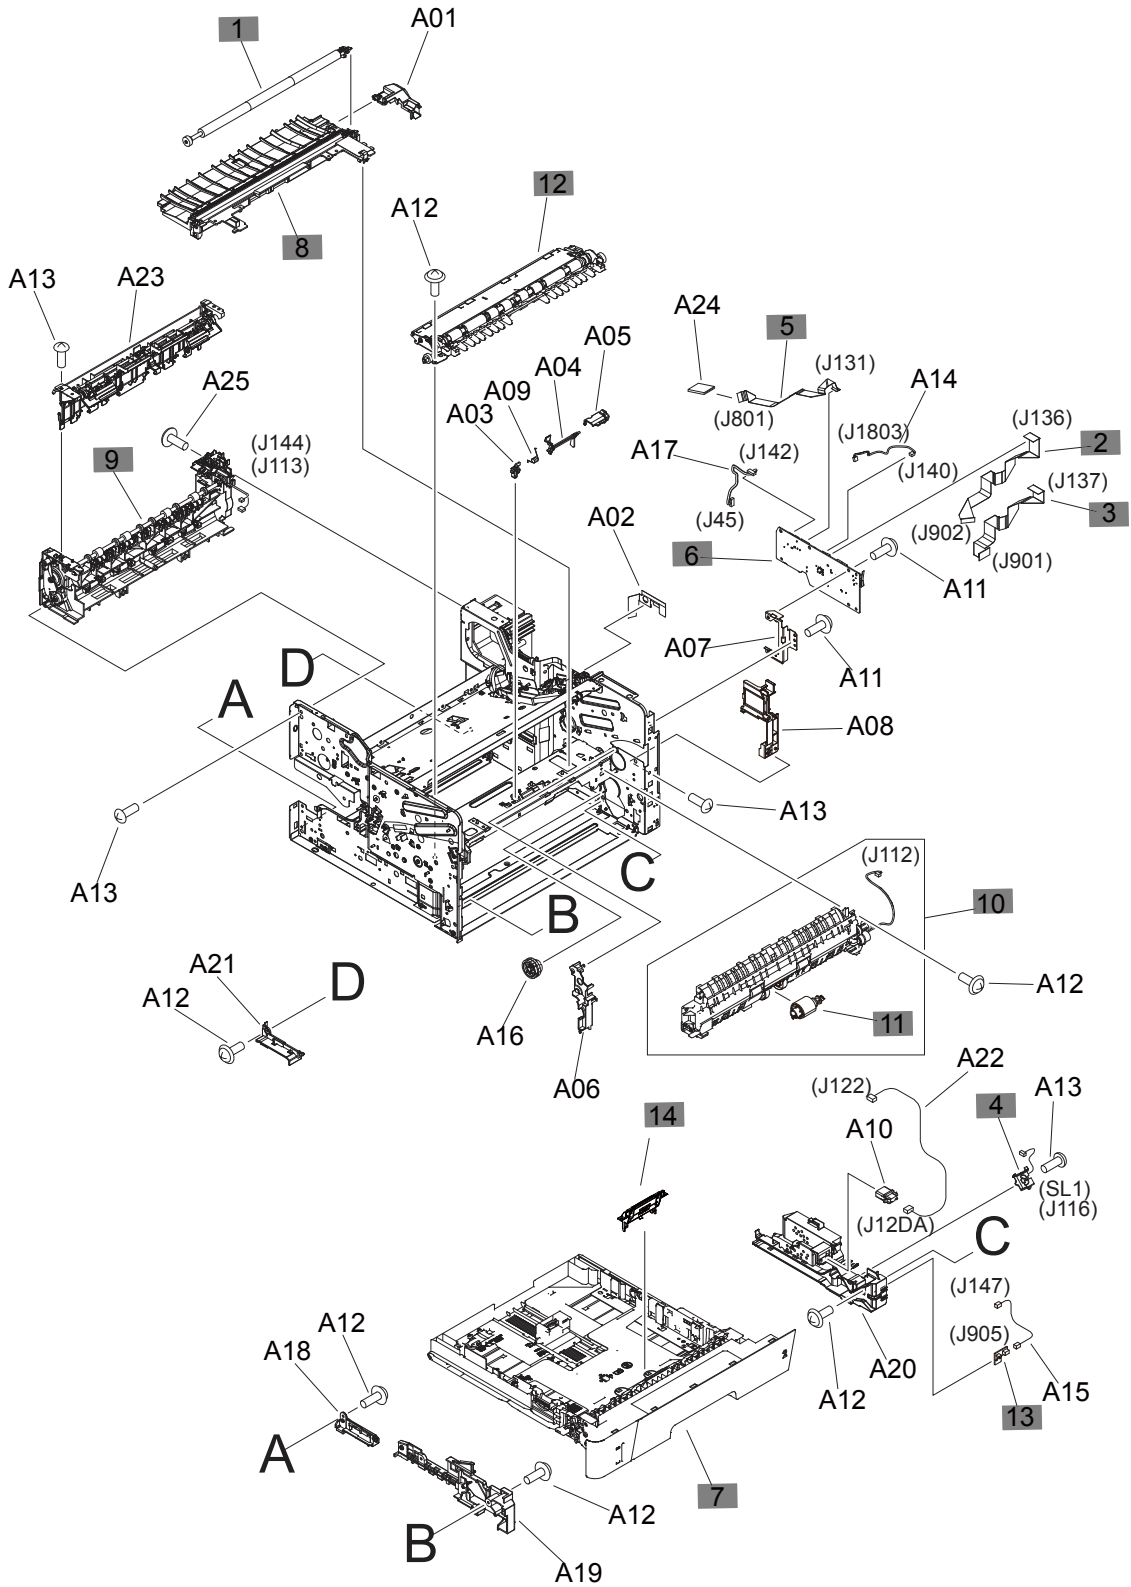


Table 2-6 Internal components (1 of 3)

Ref	Description	Part number	Qty
1	Roller, transfer	RM2-5841-000	1
2	FFC, 21P	RK2-1054-000	1
3	FFC, 23P	RK2-1056-000	1
4	Solenoid, Tray 2	RK2-1096-000	1
5	FFC, 15P	RK2-4915-000	1
6	PCA, DC controller	RM2-0231-000	2
7	Cassette, Tray 2	RM2-0629-000	2
8	Assembly, paper feed	RM2-0630-000	1
9	Assembly, face-down paper delivery	RM2-0633-000	1
10	Assembly, paper pickup	RM2-0643-020	1
11	Roller, Tray 2 pickup	RM2-0644-000	1
12	Assembly, registration	RM2-0645-000	1
13	Assembly, cassette detect switch	RM2-0236-000	1
14	Pad, Tray 2 separation	RM1-2546-000	1

Figure 2-4 Internal components (2 of 3)

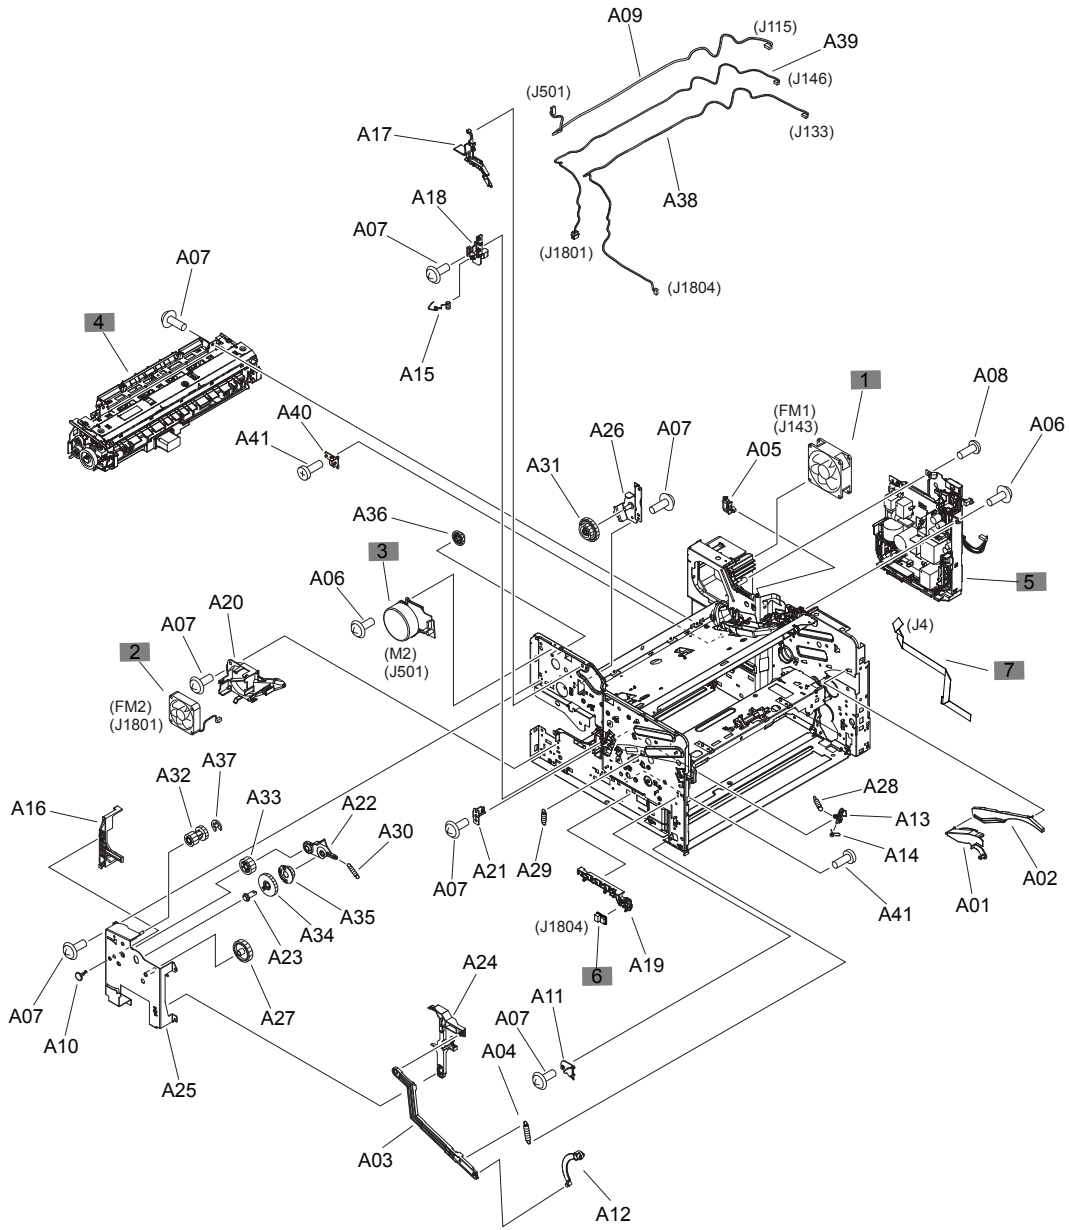


Table 2-7 Internal components (2 of 3)

Ref	Description	Part number	Qty
1	Fan, right	RK2-1090-000	1
2	Fan, left	RK2-2728-000	1
3	Motor, fuser	RM2-0622-000	1
4	Assembly, fuser (220 V)	RM2-0639-000	1
5	Power supply, low-voltage	RM2-0647-000	1
6	Sensor, humidity	WP2-5368-000	1
7	Cable, flexible flat, 10P	RK2-7118-000	1

Figure 2-5 Internal components (3 of 3)

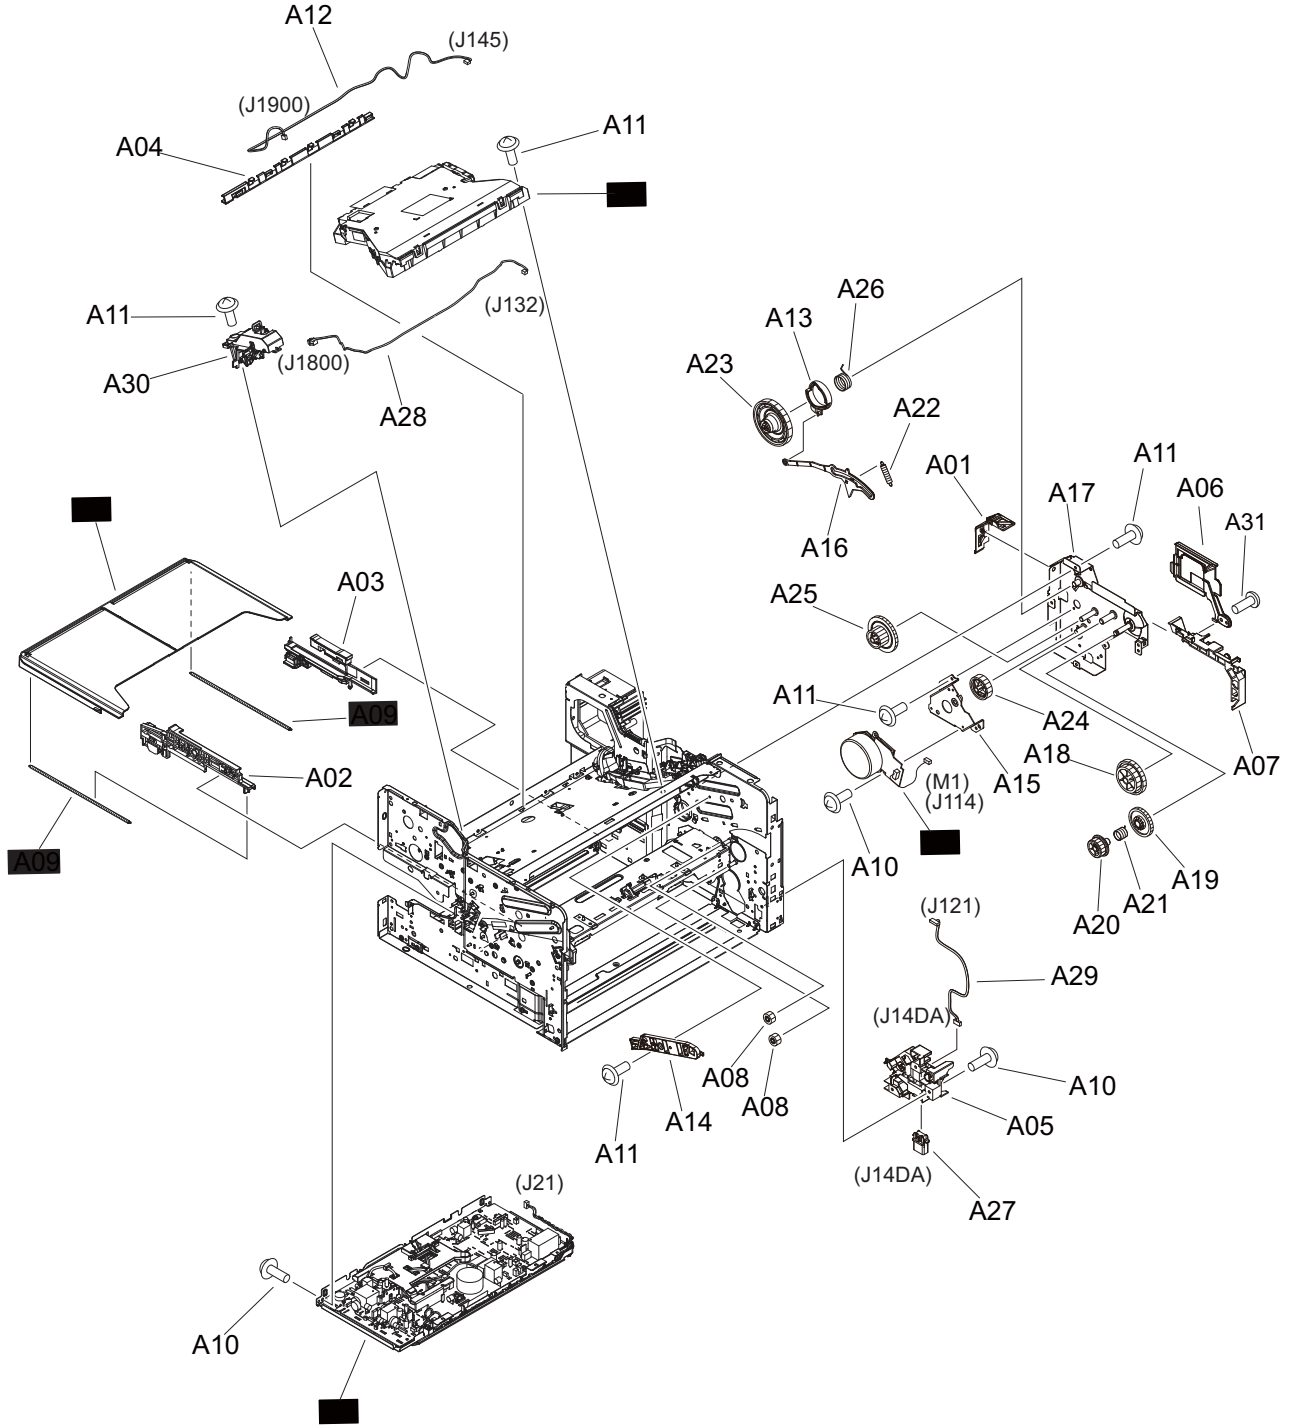


Table 2-8 Internal components (3 of 3)

Ref	Description	Part number	Qty
1	Cover, dust	RC3-5754-000	1
2	Motor, main	RM2-0623-000	1
3	Power supply, high-voltage	RM2-0631-000	1
4	Assembly, laser scanner unit	RM2-0648-000	1
A09	Spring, tension	RU5-2563-000	1
Not shown	Sound absorption cushion	RC3-5696-000	1

PCAs

Figure 2-6 PCA assembly

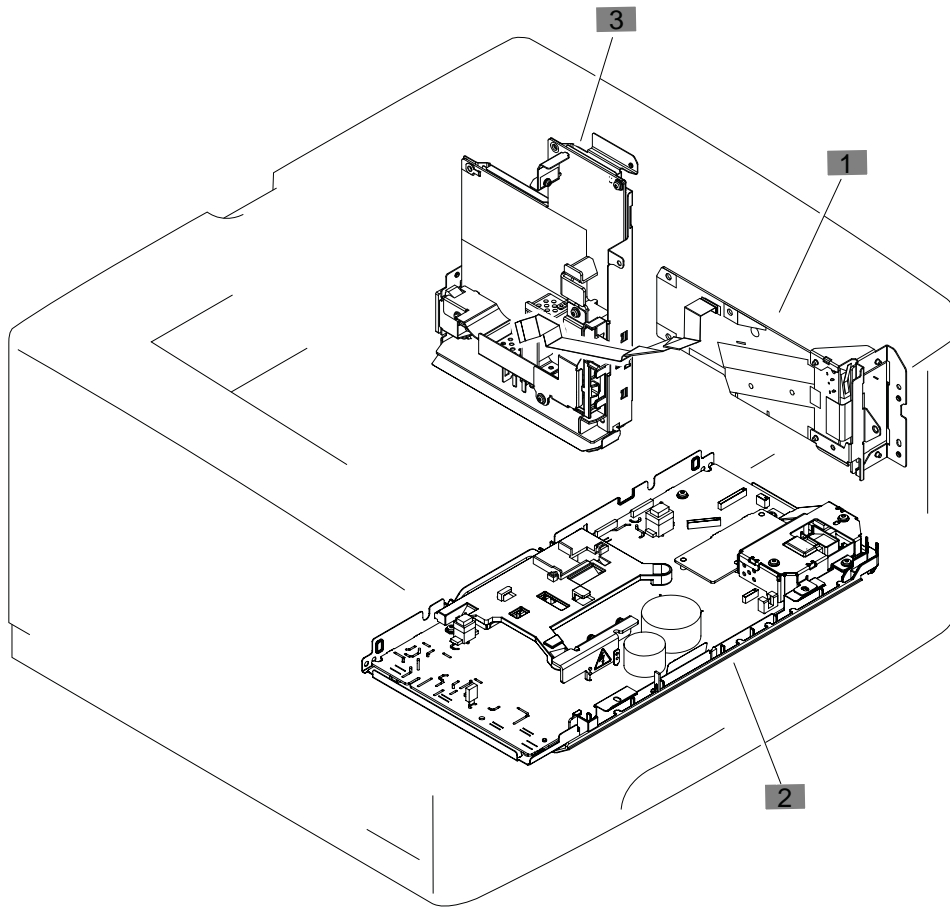


Table 2-9 PCA assembly

Ref	Description	Part number	Qty
1	DC controller PCA assembly	RM2-0231-000	1
2	High-voltage PCA assembly	RM2-0631-000	1
3	Low-voltage PCA assembly	RM2-0647-000	1
Not shown	PCA, formatter	B6S00-60001	1
Not shown	PCA, formatter	B6S01-60001	1
Not shown	PCA, formatter	B6S02-60001	1
Not shown	Stay, formatter	A3E42-00005	1
Not shown	FFC, formatter engine	A3E42-40013	1

500-sheet feeder, cassette, external panels, and covers

Figure 2-7 500-sheet feeder, cassette, external panels, and covers

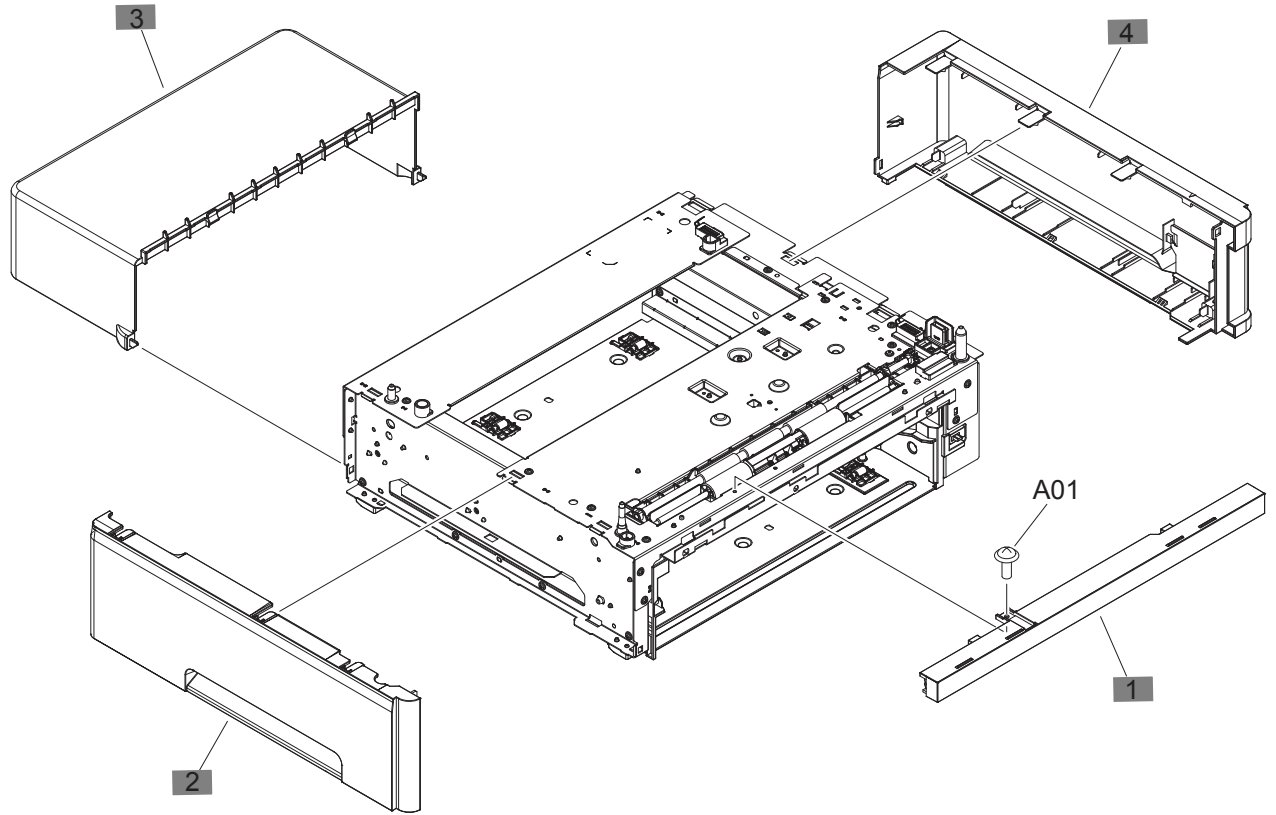


Table 2-10 500-sheet feeder, cassette, external panels, and covers

Ref	Description	Part number	Qty
1	Cover, front, 500-sheet cassette	RC3-6131-000	1
2	Cover, left, 500-sheet cassette	RC3-6132-000	1
3	Cover, cassette	RC3-6134-000	1
4	Cover, right, 500-sheet cassette	RM2-0656-000	1

500-sheet feeder internal components

Figure 2-8 500-sheet feeder internal components

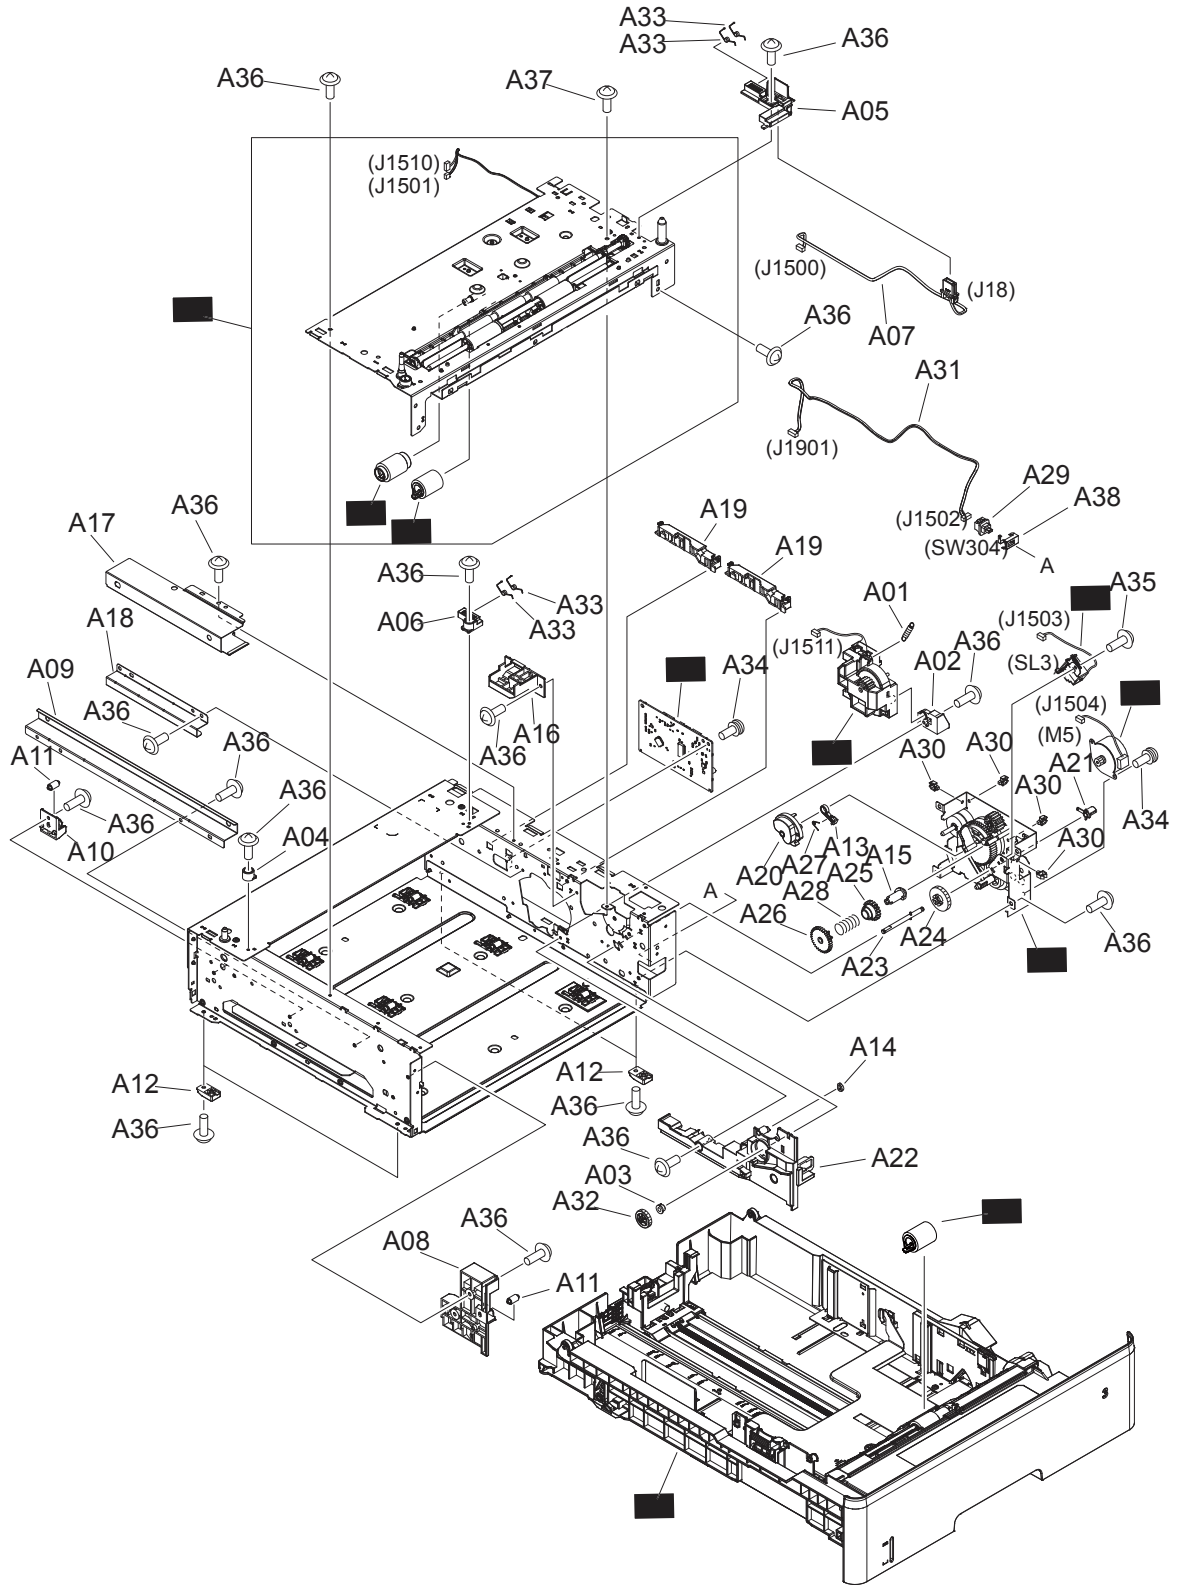


Table 2-11 500-sheet feeder internal components

Ref	Description	Part number	Qty
1	Motor, DC stepping	RK2-1062-000	1
2	Assembly, paper pickup	RM1-2896-000	1
3	Roller, paper pickup	RM1-0036-020	1
4	Roller, paper feed	RM1-0037-020	2
5	Assembly, lifter drive	RM1-2912-030	1
6	PCA, paper feed	RM2-0241-000	1
7	Solenoid, Tray 3	RK2-0270-000	1
8	Assembly, drive	RM1-2909-000	1
9	Cassette, Tray 3	RM2-0657-000	1

Duplexer external covers

Figure 2-9 Duplexer external covers

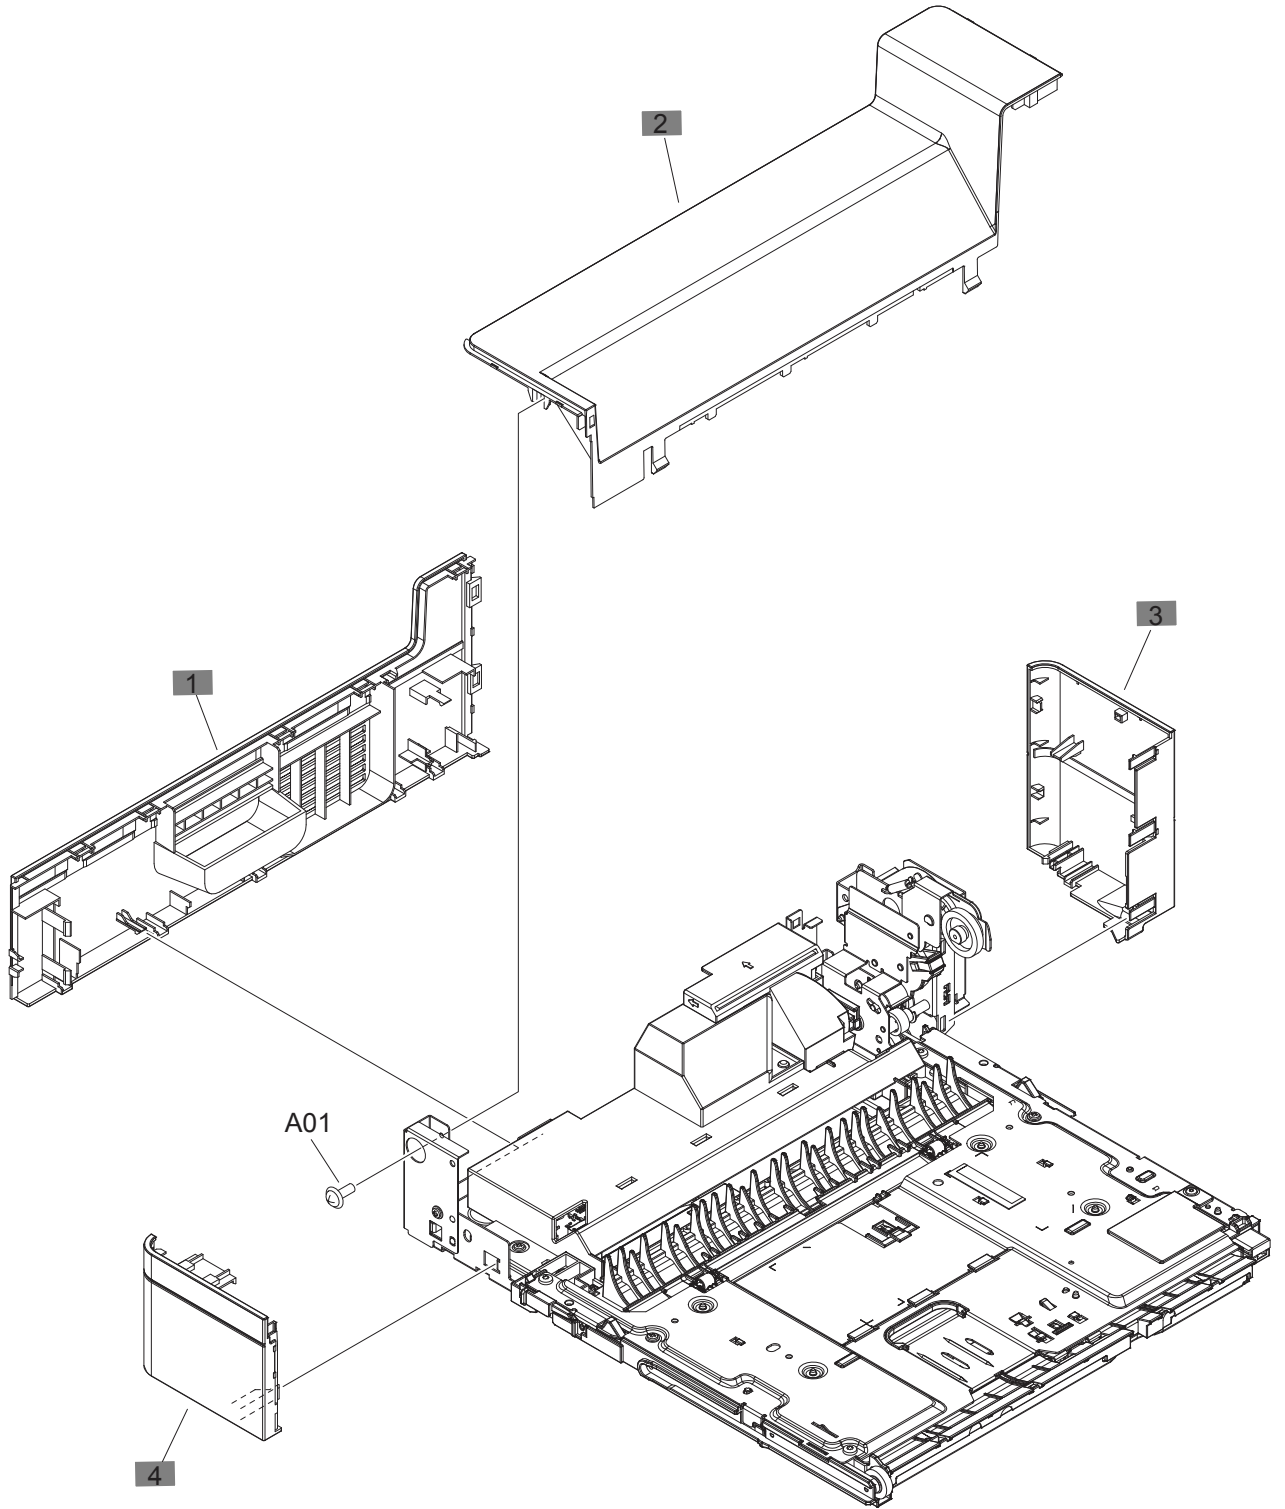


Table 2-12 Duplexer external covers

Ref	Description	Part number	Qty
1	Cover, rear	RC3-6137-000	1
2	Cover, upper	RC3-6138-000	1
3	Cover, right	RC3-6139-000	1
4	Cover, left	RC3-6140-000	1

Duplexing main body

Figure 2-10 Duplexing main body (1 of 2)

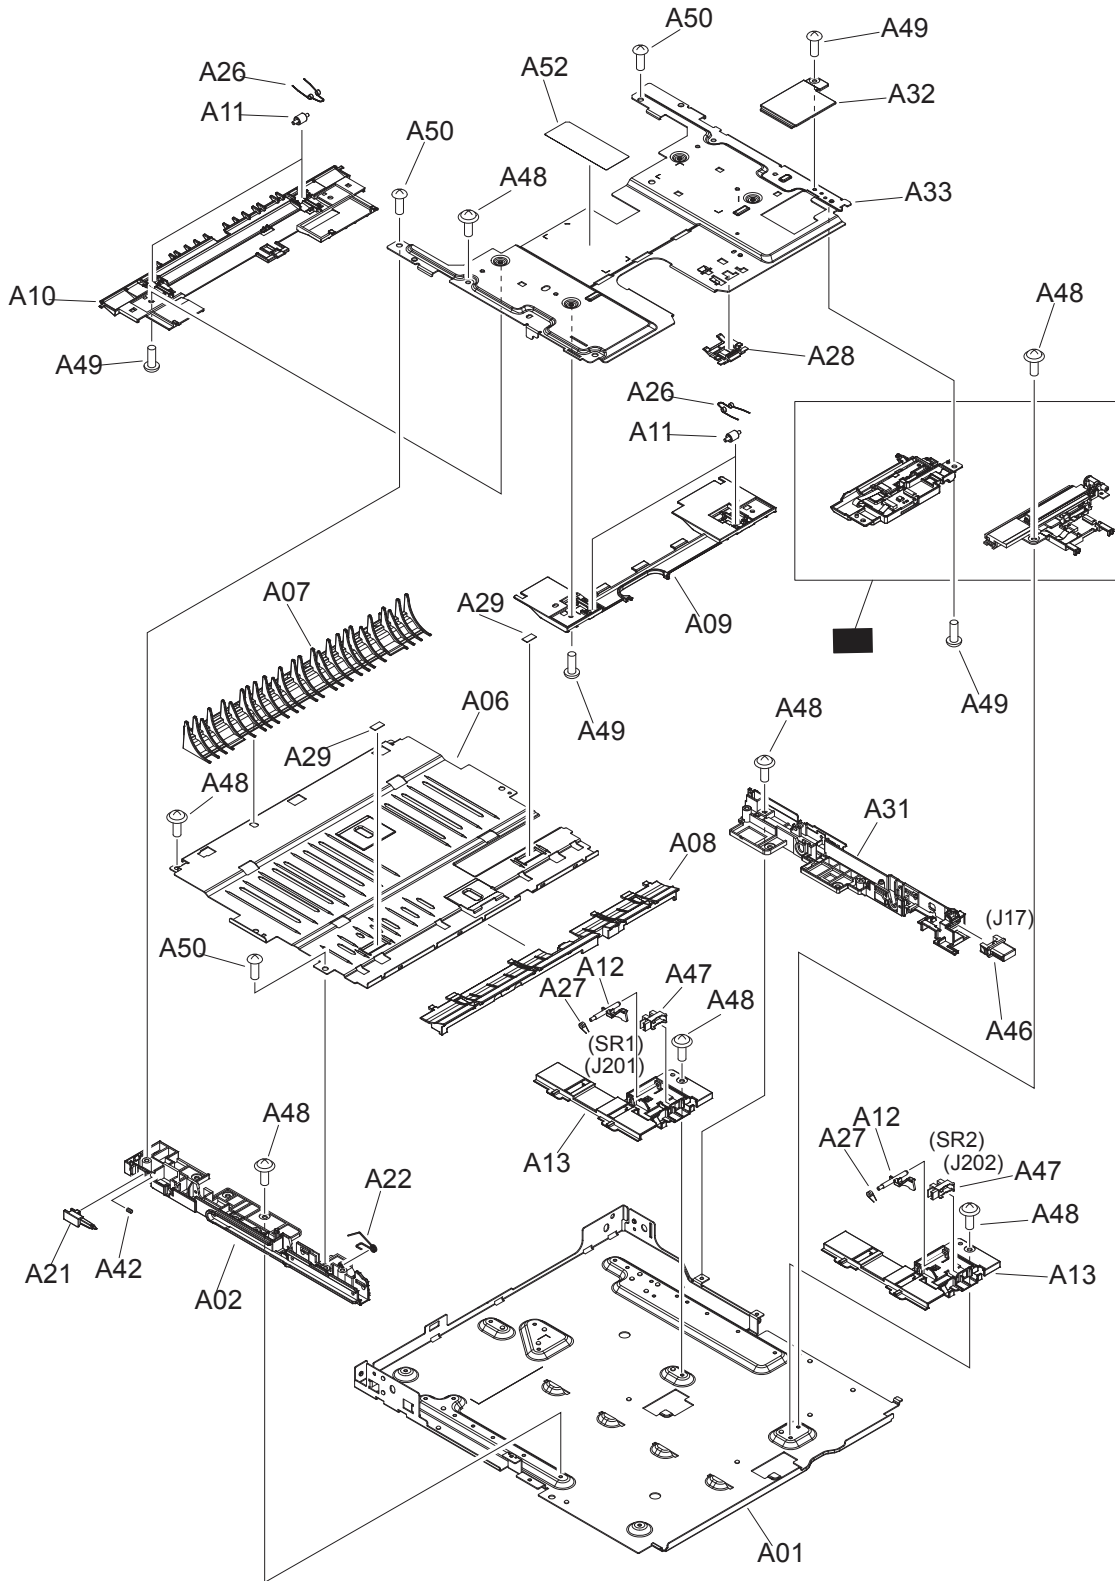


Table 2-13 Duplexing main body (1 of 2)

Ref	Description	Part number	Qty
2	Kit, registration sensor	RM1-9838-010	1

Figure 2-11 Duplexing main body (2 of 2)

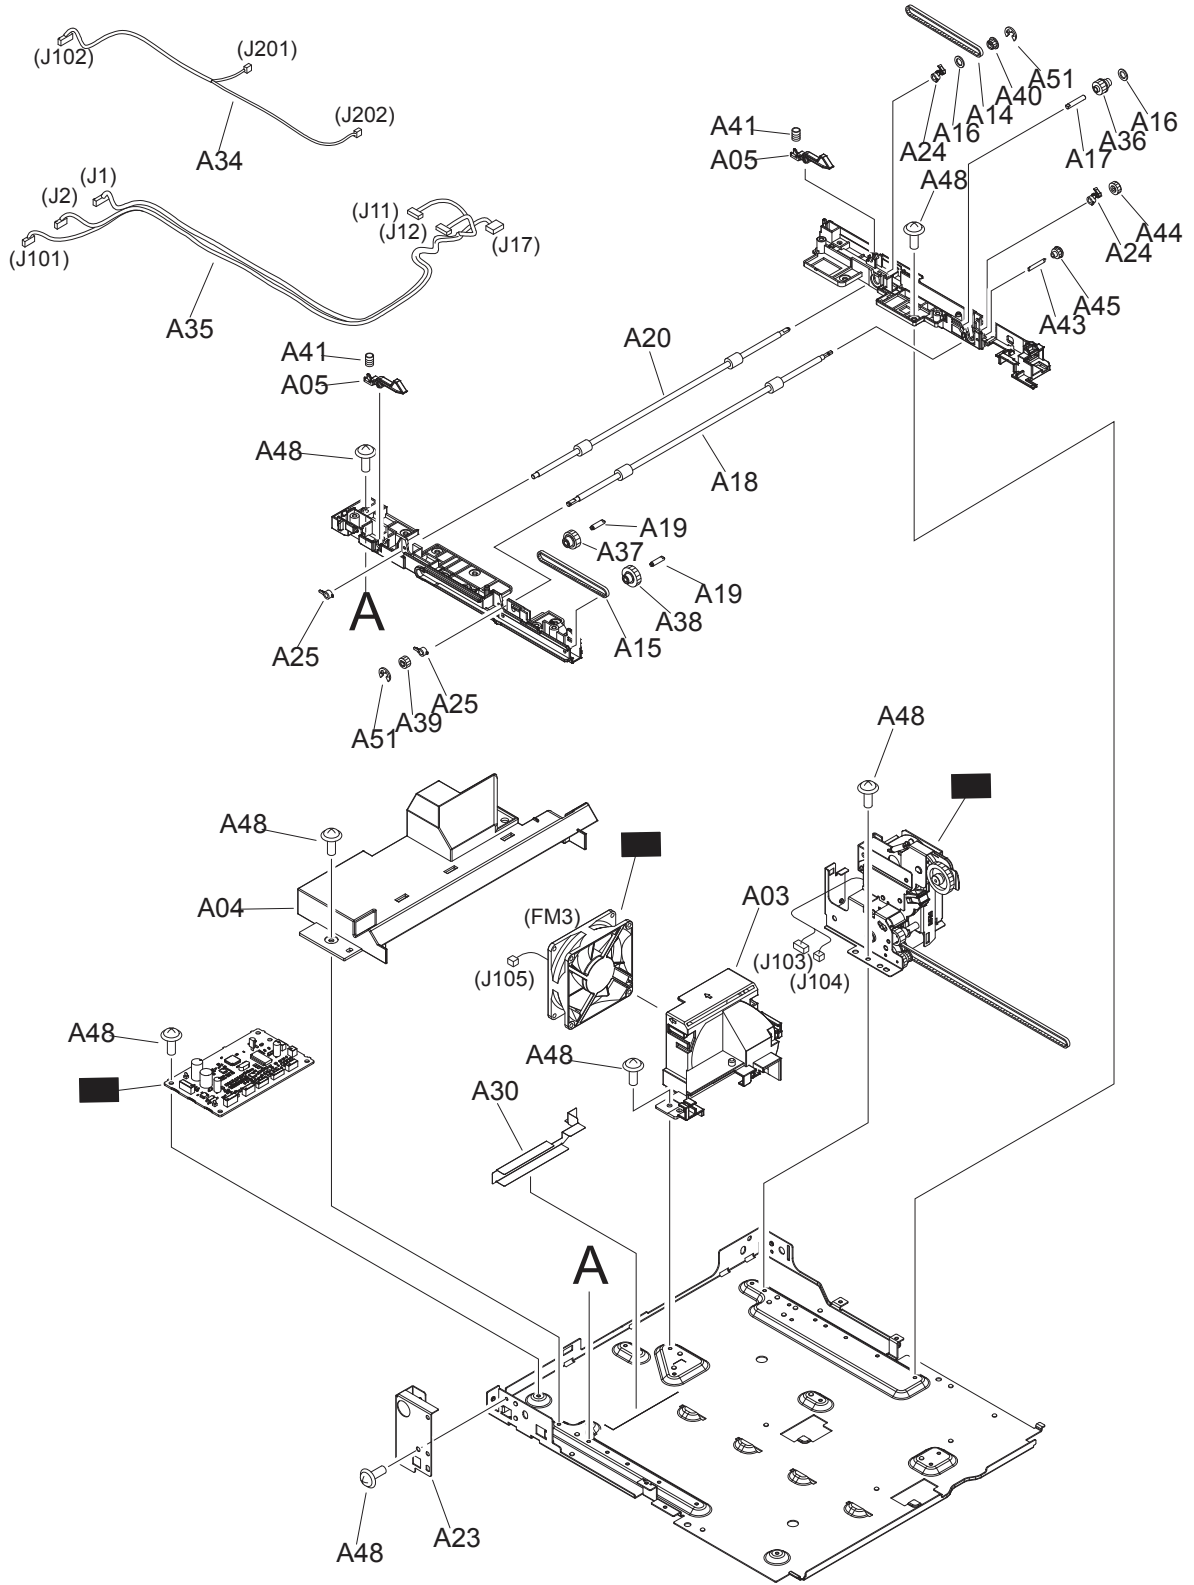


Table 2-14 Duplexing main body (2 of 2)

Ref	Description	Part number	Qty
1	Fan, duplexer	RK2-1067-000	1
3	PCA, duplexer	RM2-0255-000	1
4	Drive assembly, duplexer	RM2-0663-000	1

Alphabetical parts list

Table 2-15 Alphabetical parts list

Description	Part number	Table and page
Assembly, cartridge door	RM2-0667-000	External panels and covers on page 117
Assembly, cassette detect switch	RM2-0236-000	Internal components (1 of 3) on page 119
Assembly, control panel, M701a	RM2-7527-000	External panels and covers on page 117
Assembly, control panel, M701n and M706n	RM2-7526-000	External panels and covers on page 117
Assembly, drive	RM1-2909-000	500-sheet feeder internal components on page 129
Assembly, face-down paper delivery	RM2-0633-000	Internal components (1 of 3) on page 119
Assembly, fuser (220 V)	RM2-0639-000	Internal components (2 of 3) on page 121
Assembly, laser scanner unit	RM2-0648-000	Internal components (3 of 3) on page 123
Assembly, lifter drive	RM1-2912-030	500-sheet feeder internal components on page 129
Assembly, paper feed	RM2-0630-000	Internal components (1 of 3) on page 119
Assembly, paper pickup	RM2-0643-020	Internal components (1 of 3) on page 119
Assembly, paper pickup	RM1-2896-000	500-sheet feeder internal components on page 129
Assembly, rear cover	RM2-0636-000	External panels and covers on page 117
Assembly, registration	RM2-0645-000	Internal components (1 of 3) on page 119
Assembly, right cover	RM2-5843-000	External panels and covers on page 117
Cable, flexible flat, 10P	RK2-7118-000	Internal components (2 of 3) on page 121
Cassette, Tray 2	RM2-0629-000	Internal components (1 of 3) on page 119
Cassette, Tray 3	RM2-0657-000	500-sheet feeder internal components on page 129
Cover, cassette	RC3-6134-000	500-sheet feeder, cassette, external panels, and covers on page 127
Cover, connector	RC3-5767-000	External panels and covers on page 117

Table 2-15 Alphabetical parts list (continued)

Description	Part number	Table and page
Cover, dust	RC3-5754-000	Internal components (3 of 3) on page 123
Cover, face down	RL2-0546-000	External panels and covers on page 117
Cover, front, 500-sheet cassette	RC3-6131-000	500-sheet feeder, cassette, external panels, and covers on page 127
Cover, left	RL2-0557-000	External panels and covers on page 117
Cover, left	RC3-6140-000	Duplexer external covers on page 131
Cover, left, 500-sheet cassette	RC3-6132-000	500-sheet feeder, cassette, external panels, and covers on page 127
Cover, multi-purpose tray	RM2-0625-000	External panels and covers on page 117
Cover, rear	RC3-6137-000	Duplexer external covers on page 131
Cover, rear lower	RL2-0550-000	External panels and covers on page 117
Cover, right	RC3-6139-000	Duplexer external covers on page 131
Cover, right cassette	RC3-5781-000	External panels and covers on page 117
Cover, right front	RC3-5762-000	External panels and covers on page 117
Cover, right handle	RC3-5758-000	External panels and covers on page 117
Cover, right, 500-sheet cassette	RM2-0656-000	500-sheet feeder, cassette, external panels, and covers on page 127
Cover, top	RC3-5766-000	External panels and covers on page 117
Cover, upper	RC3-6138-000	Duplexer external covers on page 131
DC controller PCA assembly	RM2-0231-000	PCA assembly on page 125
Drive assembly, duplex	RM2-0663-000	Duplexing main body (2 of 2) on page 135
Fan, duplex	RK2-1067-000	Duplexing main body (2 of 2) on page 135
Fan, left	RK2-2728-000	Internal components (2 of 3) on page 121
Fan, right	RK2-1090-000	Internal components (2 of 3) on page 121

Table 2-15 Alphabetical parts list (continued)

Description	Part number	Table and page
FFC, 15P	RK2-4915-000	Internal components (1 of 3) on page 119
FFC, 21P	RK2-1054-000	Internal components (1 of 3) on page 119
FFC, 23P	RK2-1056-000	Internal components (1 of 3) on page 119
FFC, formatter engine	A3E42-40013	PCA assembly on page 125
High-voltage PCA assembly	RM2-0631-000	PCA assembly on page 125
HP logo, low profile round (size 35)	7121-8541	External panels and covers on page 117
Kit, registration sensor	RM1-9838-010	Duplexing main body (1 of 2) on page 133
Low-voltage PCA assembly	RM2-0647-000	PCA assembly on page 125
Motor, DC stepping	RK2-1062-000	500-sheet feeder internal components on page 129
Motor, fuser	RM2-0622-000	Internal components (2 of 3) on page 121
Motor, main	RM2-0623-000	Internal components (3 of 3) on page 123
Nameplate, M701a	B6S00-40001	External panels and covers on page 117
Nameplate, M701n	B6S01-40001	External panels and covers on page 117
Nameplate, M706n	B6S02-40001	External panels and covers on page 117
Pad, multi-purpose tray, separation	RM1-2462-000	External panels and covers on page 117
Pad, Tray 2 separation	RM1-2546-000	Internal components (1 of 3) on page 119
PCA, DC controller	RM2-0231-000	Internal components (1 of 3) on page 119
PCA, duplexer	RM2-0255-000	Duplexing main body (2 of 2) on page 135
PCA, formatter	B6S00-60001	PCA assembly on page 125
PCA, formatter	B6S01-60001	PCA assembly on page 125
PCA, formatter	B6S02-60001	PCA assembly on page 125
PCA, paper feed	RM2-0241-000	500-sheet feeder internal components on page 129
Power supply, high-voltage	RM2-0631-000	Internal components (3 of 3) on page 123
Power supply, low-voltage	RM2-0647-000	Internal components (2 of 3) on page 121

Table 2-15 Alphabetical parts list (continued)

Description	Part number	Table and page
Roller, multi-purpose tray, pickup	RL2-0544-000	External panels and covers on page 117
Roller, paper feed	RM1-0037-020	500-sheet feeder internal components on page 129
Roller, paper pickup	RM1-0036-020	500-sheet feeder internal components on page 129
Roller, transfer	RM2-5841-000	Internal components (1 of 3) on page 119
Roller, Tray 2 pickup	RM2-0644-000	Internal components (1 of 3) on page 119
Sensor, humidity	WP2-5368-000	Internal components (2 of 3) on page 121
Solenoid, Tray 2	RK2-1096-000	Internal components (1 of 3) on page 119
Solenoid, Tray 3	RK2-0270-000	500-sheet feeder internal components on page 129
Sound absorption cushion	RC3-5696-000	Internal components (3 of 3) on page 123
Spring, tension	RU5-2563-000	Internal components (3 of 3) on page 123
Stay, formatter	A3E42-00005	PCA assembly on page 125

Numerical parts list

Table 2-16 Numerical parts list

Part number	Description	Table and page
7121-8541	HP logo, low profile round (size 35)	External panels and covers on page 117
A3E42-00005	Stay, formatter	PCA assembly on page 125
A3E42-40013	FFC, formatter engine	PCA assembly on page 125
B6500-40001	Nameplate, M701a	External panels and covers on page 117
B6500-60001	PCA, formatter	PCA assembly on page 125
B6501-40001	Nameplate, M701n	External panels and covers on page 117
B6501-60001	PCA, formatter	PCA assembly on page 125
B6502-40001	Nameplate, M706n	External panels and covers on page 117
B6502-60001	PCA, formatter	PCA assembly on page 125
RC3-5696-000	Sound absorption cushion	Internal components (3 of 3) on page 123
RC3-5754-000	Cover, dust	Internal components (3 of 3) on page 123
RC3-5758-000	Cover, right handle	External panels and covers on page 117
RC3-5762-000	Cover, right front	External panels and covers on page 117
RC3-5766-000	Cover, top	External panels and covers on page 117
RC3-5767-000	Cover, connector	External panels and covers on page 117
RC3-5781-000	Cover, right cassette	External panels and covers on page 117
RC3-6131-000	Cover, front, 500-sheet cassette	500-sheet feeder, cassette, external panels, and covers on page 127
RC3-6132-000	Cover, left, 500-sheet cassette	500-sheet feeder, cassette, external panels, and covers on page 127
RC3-6134-000	Cover, cassette	500-sheet feeder, cassette, external panels, and covers on page 127
RC3-6137-000	Cover, rear	Duplexer external covers on page 131
RC3-6138-000	Cover, upper	Duplexer external covers on page 131

Table 2-16 Numerical parts list (continued)

Part number	Description	Table and page
RC3-6139-000	Cover, right	Duplexer external covers on page 131
RC3-6140-000	Cover, left	Duplexer external covers on page 131
RK2-0270-000	Solenoid, Tray 3	500-sheet feeder internal components on page 129
RK2-1054-000	FFC, 21P	Internal components (1 of 3) on page 119
RK2-1056-000	FFC, 23P	Internal components (1 of 3) on page 119
RK2-1062-000	Motor, DC stepping	500-sheet feeder internal components on page 129
RK2-1067-000	Fan, duplexer	Duplexing main body (2 of 2) on page 135
RK2-1090-000	Fan, right	Internal components (2 of 3) on page 121
RK2-1096-000	Solenoid, Tray 2	Internal components (1 of 3) on page 119
RK2-2728-000	Fan, left	Internal components (2 of 3) on page 121
RK2-4915-000	FFC, 15P	Internal components (1 of 3) on page 119
RK2-7118-000	Cable, flexible flat, 10P	Internal components (2 of 3) on page 121
RL2-0544-000	Roller, multi-purpose tray, pickup	External panels and covers on page 117
RL2-0546-000	Cover, face down	External panels and covers on page 117
RL2-0550-000	Cover, rear lower	External panels and covers on page 117
RL2-0557-000	Cover, left	External panels and covers on page 117
RM1-0036-020	Roller, paper pickup	500-sheet feeder internal components on page 129
RM1-0037-020	Roller, paper feed	500-sheet feeder internal components on page 129
RM1-2462-000	Pad, multi-purpose tray, separation	External panels and covers on page 117
RM1-2546-000	Pad, Tray 2 separation	Internal components (1 of 3) on page 119
RM1-2896-000	Assembly, paper pickup	500-sheet feeder internal components on page 129

Table 2-16 Numerical parts list (continued)

Part number	Description	Table and page
RM1-2909-000	Assembly, drive	500-sheet feeder internal components on page 129
RM1-2912-030	Assembly, lifter drive	500-sheet feeder internal components on page 129
RM1-9838-010	Kit, registration sensor	Duplexing main body (1 of 2) on page 133
RM2-0231-000	PCA, DC controller	Internal components (1 of 3) on page 119
RM2-0231-000	DC controller PCA assembly	PCA assembly on page 125
RM2-0236-000	Assembly, cassette detect switch	Internal components (1 of 3) on page 119
RM2-0241-000	PCA, paper feed	500-sheet feeder internal components on page 129
RM2-0255-000	PCA, duplexer	Duplexing main body (2 of 2) on page 135
RM2-0622-000	Motor, fuser	Internal components (2 of 3) on page 121
RM2-0623-000	Motor, main	Internal components (3 of 3) on page 123
RM2-0625-000	Cover, multi-purpose tray	External panels and covers on page 117
RM2-0629-000	Cassette, Tray 2	Internal components (1 of 3) on page 119
RM2-0630-000	Assembly, paper feed	Internal components (1 of 3) on page 119
RM2-0631-000	Power supply, high-voltage	Internal components (3 of 3) on page 123
RM2-0631-000	High-voltage PCA assembly	PCA assembly on page 125
RM2-0633-000	Assembly, face-down paper delivery	Internal components (1 of 3) on page 119
RM2-0636-000	Assembly, rear cover	External panels and covers on page 117
RM2-0639-000	Assembly, fuser (220 V)	Internal components (2 of 3) on page 121
RM2-0643-020	Assembly, paper pickup	Internal components (1 of 3) on page 119
RM2-0644-000	Roller, Tray 2 pickup	Internal components (1 of 3) on page 119
RM2-0645-000	Assembly, registration	Internal components (1 of 3) on page 119
RM2-0647-000	Power supply, low-voltage	Internal components (2 of 3) on page 121
RM2-0647-000	Low-voltage PCA assembly	PCA assembly on page 125

Table 2-16 Numerical parts list (continued)

Part number	Description	Table and page
RM2-0648-000	Assembly, laser scanner unit	Internal components (3 of 3) on page 123
RM2-0656-000	Cover, right, 500-sheet cassette	500-sheet feeder, cassette, external panels, and covers on page 127
RM2-0657-000	Cassette, Tray 3	500-sheet feeder internal components on page 129
RM2-0663-000	Drive assembly, duplexer	Duplexing main body (2 of 2) on page 135
RM2-0667-000	Assembly, cartridge door	External panels and covers on page 117
RM2-5841-000	Roller, transfer	Internal components (1 of 3) on page 119
RM2-5843-000	Assembly, right cover	External panels and covers on page 117
RM2-7526-000	Assembly, control panel, M701n and M706n	External panels and covers on page 117
RM2-7527-000	Assembly, control panel, M701a	External panels and covers on page 117
RU5-2563-000	Spring, tension	Internal components (3 of 3) on page 123
WP2-5368-000	Sensor, humidity	Internal components (2 of 3) on page 121

Index

Symbols/Numerics

500-sheet feeder

- cassette cover, removing 98
- covers, part numbers 126
- drive assembly, removing and replacing 101
- front cover, removing 96
- internal components, part numbers 128
- left cover, removing 97
- lifter-drive assembly, removing and replacing 100
- paper-pickup assembly, removing and replacing 99
- PCA, removing and replacing 105
- pickup motor, removing and replacing 106
- right cover, removing 97

A

- after-service checklist 4

B

- before-service checklist 3
- bins, output
 - face-up, removing 17

C

- cartridge door unit, removing 29
- cautions iii
- conventions, document iii
- covers
 - 500-sheet feeder cassette cover, removing 98
 - 500-sheet feeder front, removing 96
 - 500-sheet feeder left, removing 97

500-sheet feeder part numbers 126

- 500-sheet feeder right, removing 97
- cartridge door unit, removing 29
- diagrams and part numbers, product 116
- duplexer back, removing 71
- duplexer left, removing 68
- duplexer right, removing 69
- duplexer top, removing 70
- face-down, removing 22
 - left, removing 21
 - lower back, removing 17
 - right front, removing 24
 - right lower, removing 25
 - right, removing 16
 - top, removing 19

D

DC controller

- PCA, part number 124
- removing and replacing 52

document conventions iii

duplexer

- back cover, removing 71
- fan, removing and replacing 81
- feed motor, removing and replacing 80
- left cover, removing 68
- part numbers 130
- PCA assembly, part number 132
- removing and replacing 68
- right cover, removing 69
- top cover, removing 70

E

- electrostatic discharge (ESD) 2
- ESD electrostatic discharge (ESD) 2

F

- face-down cover, removing 22
- face-up bin
 - removing 17
- fans
 - duplexer, removing and replacing 81
 - main, removing and replacing 44
 - sub, removing and replacing 46
- field-replaceable units (FRUs)
 - part numbers 112
 - replacing 2
- formatter
 - replacing 54
- FRUs (field-replaceable units)
 - part numbers 112
 - replacing 2
- fuser
 - removing and replacing 43
- fuser motor
 - removing and replacing 43

H

- high-voltage power supply
 - part numbers 124
 - removing and replacing 56

I

- installation 2
 - screws 2
 - See also* replacing parts
- internal components, part numbers
 - 500-sheet feeder 128
 - product 118

- L**
- laser/scanner
 - cautions for servicing 2
 - removing and replacing 40
- left cover, removing 21
- left fan
 - removing and replacing 46
- low-voltage power supply
 - part numbers 124
 - removing and replacing 63
- lower back cover, removing 17
- M**
- motors
 - 500-sheet feeder pickup, removing and replacing 106
 - duplexer feed, removing and replacing 80
 - fuser, removing and replacing 43
- N**
- notes iii
- O**
- output bins
 - face-up, removing 17
- P**
- paper-feed unit, removing and replacing 50
- part numbers
 - 500-sheet feeder covers 126
 - 500-sheet feeder internal components 128
 - about 112
 - covers, product 116
 - duplexer 130
 - duplexing PCA assembly 132
 - internal components, product 118
 - PCAs 124
- PCAs, part numbers 124
- pickup rollers
 - Tray 1, replacing 6
 - Tray 2, replacing 10
- power supplies
 - high-voltage, removing and replacing 56
 - low-voltage, removing and replacing 63
- print cartridges
 - door unit, removing 29
- R**
- registration unit, removing and replacing 48
- removing parts
 - 500-sheet feeder cassette cover 98
 - 500-sheet feeder drive PCA 105
 - 500-sheet feeder drive unit 101
 - 500-sheet feeder front cover 96
 - 500-sheet feeder left cover 97
 - 500-sheet feeder lifter drive unit 100
 - 500-sheet feeder paper-pickup unit 99
 - 500-sheet feeder pickup motor 106
 - 500-sheet feeder right cover 97
 - about 2
 - after-service checklist 4
 - before-service checklist 3
 - cartridge door unit 29
 - DC controller 52
 - duplexer back cover 71
 - duplexer fan 81
 - duplexer feed motor 80
 - duplexer left cover 68
 - duplexer rightcover 69
 - duplexer top cover 70
 - duplexer unit 68
 - face-down cover 22
 - face-up bin 17
 - formatter 54
 - fuser 43
 - fuser motor 43
 - high-voltage power supply 56
 - laser/scanner 40
 - left cover 21
 - left fan 46
 - low-voltage power supply 63
 - lower back cover 17
 - paper-feed unit 50
 - registration unit 48
 - right cover 16
 - right fan 44
 - right front cover 24
 - right handle cover 25
 - service approach 3
 - tools, required 2
 - top cover 19
 - transfer roller 40
 - Tray 1 pickup roller 6
 - Tray 2 22
 - Tray 2 pickup roller 10
 - Tray 3 23
 - Tray 3 retard roller 13
- repair approach 3
- replacing parts
 - 500-sheet feeder drive PCA 105
 - 500-sheet feeder drive unit 101
 - 500-sheet feeder lifter driveunit 100
 - 500-sheet feeder paper-pickup unit 99
 - 500-sheet feeder pickup motor 106
 - about 2
 - after-service checklist 4
 - before-service checklist 3
 - DC controller 52
 - duplexer fan 81
 - duplexer feed motor 80
 - formatter 54
 - fuser 43
 - fuser motor 43
 - high-voltage power supply 56
 - laser/scanner 40
 - left fan 46
 - low-voltage power supply 63
 - paper-feed unit 50
 - registration unit 48
 - right fan 44
 - screws 2
 - service approach 3
 - tools, required 2
 - transfer roller 40
 - Tray 1 pickup roller 6
 - Tray 2 pickup roller 10
 - Tray 3 retard roller 13
- retard roller, replacing Tray 3 13
- right cover, removing 16
- right fan
 - removing and replacing 44
- right front cover, removing 24
- right handle cover, removing 25

rollers

transfer, removing and
replacing 40

Tray 1 pickup, replacing 6

Tray 2 pickup, replacing 10

Tray 3 retard, replacing 13

S

screwdrivers, required 2

screws

installing 2

types of 3

service approach 3

static, precautions for 2

T

tips iii

tools, required 2

top cover, removing 19

transfer roller

removing and replacing 40

Tray 1

pickup roller, replacing 6

Tray 2

pickup roller, replacing 10

removing 22

Tray 3

removing 23

retard roller, replacing 13

troubleshooting

service approach 3

U

user-replaceable parts 6

W

warnings iii



B6S00-90903

